# **FCC Warning**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with this user's guide, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

# **CE Mark Warning**

This is a Class A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

All brand names are registered trademarks of their relative holders.

# Preface

This OAM Managed Dual Rate Media Converter can be monitored and configured through management via SNMP and Web-based. This manual describes how to install and use the OAM Managed Dual Rate Media Converter. The OAM Managed Dual Rate Media Converter introduced here provides one channel media conversion solution:

10/100/1000Base-TX to 100Base or 1000Base dual rate fiber interface

The OAM Managed Dual Rate Media Converter fully complies with IEEE802.3 10Base-T, IEEE802.3u 100Base-TX/FX, IEEE802.3ab 1000Base-T, and IEEE802.3z 1000Base-SX/LX Ethernet standards.

In this manual, you will find:

- Product overview
- Features on the media converter
- Illustrative LED functions
- Installation instructions
- System configuration
- Specifications

 
# **Table of Contents**

FCC WARNING 1	Į
CE Mark Warning 1	Į
PREFACE	2
TABLE OF CONTENTS 3	;
INTRODUCTION 4	ŀ
Product Overview4 Product Features4 Packing List5	ŀ
ONE-CHANNEL MEDIA CONVERTER	5
Ports6 Front Panel & LEDs6	-
INSTALLATION	
	333
INSTALLATION	333)
INSTALLATION	3 3 3 3 3 1 1 2 3 5 3 0

# Introduction

The OAM Managed Dual Rate Media Converter provides one channel for media conversion between 10/100/1000Base-TX to 100Base or 1000Base dual rate fiber interface.

### **Product Overview**



### **Product Features**

- Complies with IEEE802.3 10Base-T, IEEE802.3u 100Base-TX/FX, IEEE802.3ab 1000Base-T, and IEEE802.3z 1000Base-SX/LX.
- Complies with IEEE802.3ah OAM standard.
- Supports SNMP v1 & v2c Management.
- Supports Q in Q double tagged frame transparent.
- Supports IN-BAND Loop Back and Diagnostic.
- DIP switch configuration for "Link-Fault-Pass-Through".
- One fiber interface supports dual rate 100Base-FX/BX or 1000Base-SX/LX/BX fiber transmission.
- SFP fiber interface supports 100Base and 1000Base dual rate fiber transmission.
- Gigabit transmission supports 9K Bytes jumbo frame.
- 1000Mbps-Auto/Full-duplex, 10/100Mbps-Full/Half-duplex, Auto-Negotiation, Auto-MDI/MDIX.
- Supports IEEE802.3x Flow control: Flow control for Full-duplex and Back pressure for Half-duplex.
- Full wire-speed forwarding rate.
- Built-in Fiber Tray, for ease of fiber cable management and installation.
- Operating voltage and Max. current consumption: 0.25A @ 12VDC. Power consumption: 3W Max.
- Power Supply: 12VDC external universal PSU.
- $-5^{\circ}$ C to  $55^{\circ}$ C ( $-23^{\circ}$ F to  $131^{\circ}$ F) operating temperature range.

#### DIP Switch

No.	Down	Up
1	Disable LFPT	Enable LFPT
2	Enable Auto-Negotiation for TX port	Enable Force mode for TX port
3	TX port Force mode: Full- duplex	TX port Force mode: Half- duplex
4	TX port Force mode: 100Mbps	TX port Force mode: 10Mbps
5	Function reserved	Function reserved
6	Function reserved	Function reserved

<Note> LFPT: Link-Fault-Pass-Through function. Power must be off/on after re-setting LFPT function.

## **Packing List**

When you unpack this product package, you will find the items listed below. Please inspect the contents, and report any apparent damage or missing items immediately to our authorized reseller.


- The Media Converter
- User's Manual
- AC to DC Power Adaptor

# **One-Channel Media Converter**

## Ports

This converter provides one TX port and one dual rate 100Base-FX/BX or 1000Base-SX/LX/BX fiber interface. For the dual rate 100Base-FX/BX or 1000Base-SX/LX/BX fiber interface, it provides options of multi-mode/single-mode or WDM multi-mode/single-mode fiber. For the TX port, it uses RJ-45 connector and supports auto MDIX for uplink purpose.

## Front Panel & LEDs

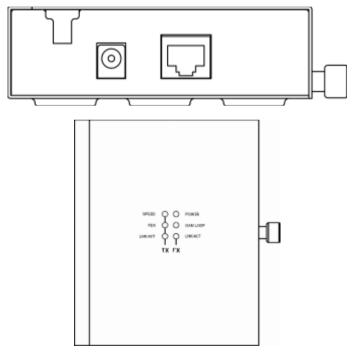

### LED Indicators

The LED indicators give you instant feedback on status of the converter:

	Chata	Indiantian
LEDs	State	Indication
POWER	Steady	Power on
	Off	Power off
OAM LOOP	Test	Blink when testing and light in 3 seconds if
	pass	pass
	Test fail	Blink when testing and until if fail
	Off	No test
SPEED (TX Port 10/100/1000Mbps)	Steady	Green: Connection at the speed of 1000Mbps Amber: Connection at the speed of 100Mbps
	Off	Connection at the speed of 10Mbps
FDX (TX)	Steady	TX port at Full-duplex mode FDX stands for Full-duplex At Half-duplex mode
	Oli	At Hall-duplex mode
LNK/ACT (TX)	Steady	A valid network connection is established on TX port LNK stands for LINK
	Flashing	Transmitting or receiving Data ACT stands for ACTIVITY
	Off	No network connection is established
LNK/ACT (FX)	Steady	A valid network connection is established on Fiber port LNK stands for LINK
	Flashing	Transmitting or receiving Data ACT stands for ACTIVITY
	Off	No network connection is established


# Installation

This chapter gives step-by-step installation instructions for the Converter.

### Selecting a Site for the Equipment


As with any electric device, you should place the equipment where it will not be subjected to extreme temperatures, humidity, or electromagnetic interference. Specifically, the site you select should meet the following requirements:


- The ambient temperature should be between -5 to 55 degrees Celsius (-23 and 131 degrees Fahrenheit).
- The relative humidity should be less than 95 percent, non-condensing.
- Surrounding electrical devices should not exceed the electromagnetic field (RFC) standards for IEC 801-3, Level 2 (3V/M) field strength.
- Make sure that the equipment receives adequate ventilation. Do not block the ventilation holes on each side of the equipment.
- The power outlet should be within 1.8 meters of the product.

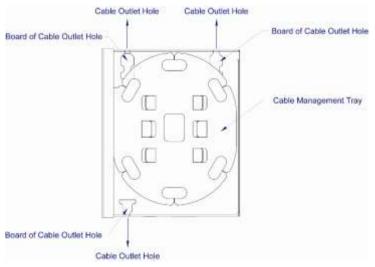


## Cable Management Tray

Cable management tray, board of cable outlet hole, and cable outlet hole.

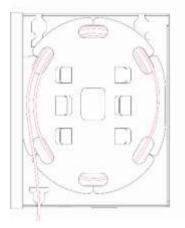


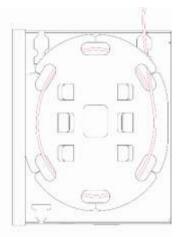

Route the fiber cable.

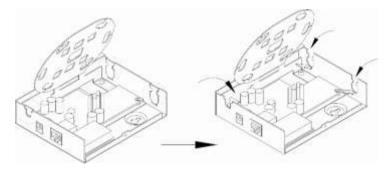


Bend the board of cable outlet hole.

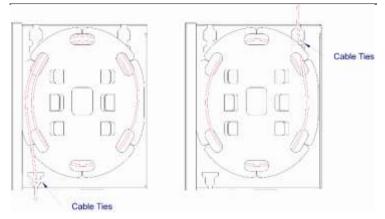

Cable ties.

## **Connecting to Power**

 - This Converter is a plug-and-play device.
- Connect the supplied AC to DC power adaptor to the receptacle on the front panel of the converter, and then attach the plug into a standard AC outlet with a voltage range from 100 to 240VAC.



# **System Configuration**

This chapter provides network managers and system administrators with information about how to configure the OAM Managed Dual Rate Media Converter via the Web Browser.

## Logging on to the Media Converter

SWeb Smart Media Converter Login - Microsoft Internet Explorer	1003
Ede Edit View Figurates Jack Help	1
Gaat · O · E C / Paurch of Facetors @ G · S 🖓 😘	
Agenere (Chatps://102.568.1.10/logout.Hen	- 🛱 co 🗤 = " 🍖 :
OAM 10-100 TOOBASE-TX to 100 TOOBASE-FX Dual Rate Media Co Userante: strint Personnet: Luge	
6 Done	🔹 Internot

The default IP Address for the OAM Managed Media Converter is 192.168.1.10. Enter the factory default Username (admin). Enter the factory default Password (no password). Then click on the "Login" button to log on to the OAM Managed Media Converter.

## Main Menu

Elle Edit Wew Equontes Ta				.4
Gua · 🔘 📄 🚮 🕇	🕼 🔎 Search 🤺 Pavorma	€ 6 3 3 4 4	3	
	ox,kpm		- E Co TH	·* · *
	Local	Device Inform	ation	
	MAC Address	00:e0:b3:11:04:d6	1	
	Software Version	1.0.6		
Network:	Firmware Date	3011/10/12		
Information	IP Address	192.168.1.30		
	Galeway	0.0.0.0		
Local Setting	Submet Mask	255.255.255.8		
Remote Setting	Description			
The second s				
	L	ocal Port Statu	s :	
Teols	Ports	ocal Port Statu	s 12	
	-	No. Allower of the		
Teols	Ports	19	13.	
Teols	Ports Hignel detect(50)	Detected	FR Detected	
Teols	Ports Signal detect(50) Link status	Detected On	Part Detected On	
Teols	Ports Signal dates (50) Elsik status Spood	Detected On 100M	Detected On 100M	

## **Network Information**


3 tat · O · E	🐔 🔎 Search 🔆 Paromer	0 0.3 00	5		
- 1.0/s	ndex.htm		- Ca		
	Local	Device Inform	ation		
	MAC Address	00:e0:b3:11:0d:d6			
	Software Version	1/0.6			
Network	Firmware Date	2011/30/12			
Information	UP Address	192.168.1.10			
and the second se	Gatewoy	0.0.0.0			
Local Setting	Submit Mask	255.255.255.0			
Remote Setting	Rescription				
Tnuts	L.	ocal Port Statu	5		
Lopout	Ports	19	48		
- and - and -	Signal detect(SD)	Detected	Detected		
	Link states	Off	On		
	Spont:	100M	10004		
	Diphra mode	7 uli	Full.		
	Fine control	Inable	Disable		
			Disatés		



It will show local device information and local port status.

## Local Setting

#### IP Configuration

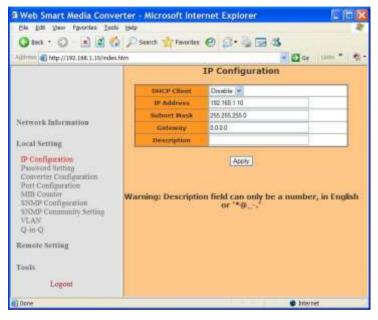

- DHCP Client: Click "DHCP Client" drop-down menu to choose "Disable" or "Enable" from the "DHCP Client" dropdown list to disable or enable DHCP Client setting for the media converter. You need to set the IP Address, Subnet Mask, and Gateway by self if DHCP Client is disabled. The IP Address would be provided by DHCP Server if the DHCP Client is enabled.
- IP Address: Click in "IP Address" text box and type a new address to change the IP Address.
- Subnet Mask: Click in "Subnet Mask" text box and type a new address to change the Subnet Mask.

- Gateway: Click in the "Gateway" text box and type a new address to change the Gateway.
- Description: Click in the "Description" text box and type a description for the media converter. Description field can only be a number, in English, or "\*@\_-".
- Apply: Click "Apply" button when you finished IP Configuration.

#### Password Setting

Web Smart Media Convert	er – Microsoft Inter	met Explorer	
Elle Edit View Pavoritas Iosis E	pip		R
Gaid + D 🗟 🖉 🙆	P Search 📩 Favoritas	@ @· \$1	33
Altimore 💽 http://102.148.1.10/index.htm			🖉 🔂 Ga 🔢 Linna 🔭 👘 -
		Password Se	etting
	Login Name	20101	
	Old Password		
Network Information	New Password		
CTELECOLD, MINOL MALIFORM	Confirm		
Local Setting IP Configuration Password Sutting Converter Configuration Port Configuration NIB -Continention SDAP Configuration SDAP Configuration VLAN Q-in Q		[Acoty]	
Remote Setting Toula Legout			
() Done		1.000	Ditertet.

- Login Name: The factory default login name "admin" can't be changed.
- Old Password: Click in "Old Password" text box and type the old password. You must type the old password into this field if you want to set a new password. The password must be "a"-"z", "A"-"Z", "0"-"9", and "\_". The max length is 16 characters.

- New Password: Click in "New Password" text box and type a new password.
- Confirm: Click in "Confirm" text box and type the new password in "Confirm" text box again to verify it.
- Apply: Click "Apply" button when you finished Password Setting.

### Converter Configuration

G sici + () 🔄 🖻 🕼		
4/httmin 🗃 http://102.008.1.10/index.htm		🚽 🛃 Ga 🛛 Linte 🎽 🖏
	Conve	erter Configuration
	Jumin Frame (96)	(E) Disable (C) Enable
	Link Transportant	Disable Enable
	Remote Fault Detect	Disable - Enable
Network Information	Link Look Carry Forward	Disable Enable
Local Setting	Forward CBC Error . Frame	@ Drop O Forward
IP Configuration Password Sotting	Forward Puose France	@ Drop © Forward
Converter Configuration Port Configuration MIB-Counter SOMP Configuration SOMP Community Setting	Monagement Packet High Priority (This function used reset to take effect))	O Disable ® Enable
VLAN Q-is-Q	Broodcast Storm Filter	® Disable C Enable
Remote Setting	Multicest Storm Filter	Disable    O Enable
Toula	Unknown DA Unicast Storm Filter	@ Disable C Enable
Logout	will be allocated to 1 2. If local MC enables Tax	Apply generat Packet High Promity is enabled, all management packet upt priority quoue to garantee branderdth. 1000 and is coofigural as Canter Minke, it will configure arent functions for both local and remote sides.

- Jumbo Frame (9K): The media converter could pass the max 9KB packet if enable this function.
- Link Transparent: Toggle up Pin 1 on DIP Switch inside media converter to enable the Link Transparent (Link-

Fault-Pass-Through) then to enable Remote Fault Detect and Link Loss Carry Forward.

- Remote Fault Detect: The media converter will set local UTP port link up or link down according to remote device's UTP port link status if enable this function.
- Link Loss Carry Forward: If enable this function, when the UTP port link down, the fiber port will be forced link down. And the fiber will be resumed when UTP port link up.
- Forward CRC Error Frame: The CRC error packets will be passed if enable this function. Otherwise the CRC error packets will be dropped.
- Forward Pause Frame: The media converter will forward pause frame and regard it as a normal packet if enable this function.
- Management Packet High Priority: Need to reset media converter then this function will take effect. All management packet will be allocated to high priority queue to guarantee bandwidth when Management Packet High Priority is enabled. Media converter will enable QoS and four queues and set queue 3 as strict priority if enable this function. All management packets such as 802.3ah OAM and SNMP packets will be in queue 3 to guarantee bandwidth.
- Broadcast Storm Filter: If enable this function, when too many broadcast packets arrive in a period time, the broadcast packets will be dropped.
- Multicast Storm Filter: If enable this function, when too many multicast packets arrive in a period time, the multicast packets will be dropped.
- Unknown DA Unicast Storm Filter: If enable this function, when too many unknown DA unicast packets arrive in a period time, the unknown DA unicast packets will be dropped.
- Apply: Click "Apply" button when you finished Converter Configuration.

### Port Configuration

Elle Effi Your Favorites Ical	1. 1918						
Om · O · A C	2 Do	HOL.	ST PRIMITIES	0 3-3	12.3		
Service 💼 http://102.168.1.10/index	1011						🔫 🖾 (a. 11 ann 🍢 🕏
	10			Por	t Config	guration	
	Part	1.648	Media	Floor Circlentral	Degrans B	ania tanati (Mara)	Carnes Rate Least (Mars)
	10	10.0	San farer	End/a	Numbers	3	Not Level
Network Information	.18	10.5	10014	Databled m	NotLimit	18	NotLast 💌
Constantia Configuration Post Configuration MID Constant SNAP Configuration SNAP Commands Setting NLAN Q-ID-Q	ter Configuration UII Control SNDP Configuration SNDP Configuration SN						
Reports Setting							
100							

- Mode: The mode of TP port can be set by DIP Switch inside media converter. Click "Mode" drop-down menu to choose "Auto Speed", "1000 Full", or "100 Full" from the "Mode" drop-down list for FX port.
- Flow Control: Click "Flow Control" drop-down menu to choose "Disable" or "Enable" from the "Flow Control" dropdown list to disable or enable Flow Control for TP or FX port.
- Ingress Rate Limit (kbps): Click "Ingress Rate Limit" dropdown menu to choose the ingress rate limit from the "Ingress Rate Limit" drop-down list for TP or FX port. Or click "Ingress Rate Limit" drop-down menu to choose the "User Setting" from the "Ingress Rate Limit" drop-down list for TP or FX port. Then click in "Ingress Rate Limit" text box and type an ingress rate limit for TP or FX port. The ingress rate limit should be divided exactly by 64 because 64kbps is as a minimal step for ingress rate limit. The program will change the ingress rate limit to 64 automatically if the ingress rate limit is not divided by 64, for example 65.

- Egress Rate Limit (kbps): Click "Egress Rate Limit" dropdown menu to choose the egress rate limit from the "Egress Rate Limit" drop-down list for TP or FX port. Or click "Egress Rate Limit" drop-down menu to choose the "User Setting" from the "Egress Rate Limit" drop-down list for TP or FX port. Then click in "Egress Rate Limit" text box and type an egress rate limit for TP or FX port. The egress rate limit should be divided exactly by 64 because 64kbps is as a minimal step for egress rate limit. The program will change the egress rate limit to 64 automatically if the egress rate limit is not divided by 64, for example 65.
- Apply: Click "Apply" button when you finished Port Configuration.
- Refresh: Click "Refresh" button to show the current Port Configuration again.

#### MIB Counter

	2011 C C C C C C C C C C C C C C C C C C			🗄 to    1000 *****
📲 http://192.196.1.10/index.Htt		MIB Coup		<b>E</b> w
	-	ing countar recars th		
	Fto1	10	78	(29)
Network Information	Tenal Hypers	85415	381568	233396
	Total Phila	699	3857	413
Local Sutting	Total Error Pkto	- 10	P	- 4
IP Configuration	Underseek Wiels	501	- 0	411
Panavant Setting	Holizoot Picts		3807	8
Converies Configuration Port Configuration	Record court Plans	103	3	
MIII Counter	64	347	3837	232
SNMP Configuration	85-127	235	\$	
SNMP Commanly betting VLAN	130-255	37	- D	- 34
0.0.0	109-011	88	D	2
STRUCTURE	313-1031	2	0	23
Remote Setting	1024 2518	- 0	2	335
	theirrige Phrs	- 10	2	
Dools.	Oversite Phile	0	- D	6
Logots	Fragments	1		
1000	CBC Errors	0	0	6
	insters	. 0	. 0	
	Trup Synets	1	2	
	Parent Presses.	1		

User's Manual

This page shows local device's MIB counters.

- Clear: All MIB counters will be cleared to zero if click "Clear" button.
- Refresh: Click "Refresh" button to show the current MIB counters again.

### SNMP Configuration

🔾 Back 🔹 💭 🐘 📓 🚱	🔎 Search 🐈 Pavorites 🥝	3.3.3.4	
(dines 🔄 http://142.168.1.10/index.htm	1	🛩 🛃 Ga 👘 Uniter 🎌	÷.
	SNMP (	Configuration	
	STOLP ADDRY	Creable M	
	Trop mode	Disable 💓	
Network Information	SNMP Trap IP Address	6000	
		Apply	
Local Setting			
IP Configuration Pasaword Setting Converter Configuration			
Port Configuration MIB Constite SNMP Configuration SNMP Community Setting VLAN Q-in-Q			
MIB Counter 5NMP Configuration SNMP Community Setting VLAN			
MIB Counter ENMP Configuration SNMP Community Setting VLAN Q-In-Q			

- SNMP Ability: Click "SNMP Ability" drop-down menu to choose "Disable" or "Enable" from the "SNMP Ability" drop-down list to disable or enable SNMP functions.
- Trap Mode: Click "Trap Mode" drop-down menu to choose "Disable" or "Enable" from the "Trap Mode" drop-down list to disable or enable to send trap event to SNMP server.

- SNMP Trap IP Address: Click in "SNMP Trap IP Address" text box and type SNMP server's IP address used for trap destination IP.
- Apply: Click "Apply" button when you finished SNMP Configuration.

Web Smart Media Conver	ter - Microsoft Interne	t Explorer	
Eile Edit Wew Fgvorites Iools	Fielb		12
🔇 Back + 🔘 - 🗟 🐔	🔎 Search 🐈 Pavorites 🥝	8.9.24	
Additional 🗿 http://142.168.1.10/index.ht	tri	👻 🛃 Ga	tonin * 👘 •
	SNMP Re	ad Community	
	Add Road Community		
Network Information	Delete Read Community		
Local Setting	Read Community 1	utte	
IP Configuration Password Setting	SNMP W	rite Community	
Converter Configuration Port Configuration	Add Write Community		
MIB Counter 5NMP Configuration	Delets Write Community		
SNMP Community Setting VLAN	Write Community 1	tive:	
Q-in-Q Remote Setting Tools	Apply Clear		
Logout	moute: the same supp	Ort 5 Read/ write Co	
ALC: NOTE: CONTRACTOR OF CONTA		a startie	

### SNMP Community Setting

This OAM Managed Media Converter supports up to 5 SNMP Read/Write Communities.

SNMP Read Community:

- Add Read Community: Click in "Add Read Community" text box and type a read community name.
- Delete Read Community: Click in "Delete Read Community" text box and type a read community name to be deleted.

SNMP Write Community:

- Add Write Community: Click in "Add Write Community" text box and type a write community name.
- Delete Write Community: Click in "Delete Write Community" text box and type a write community name to be deleted.
- ClearReadAll: Click "ClearReadAll" button to clear all read community names.
- ClearWriteAll: Click "ClearWriteAll" button to clear all write community names.
- Apply: Click "Apply" button when you finished SNMP Community Setting.

### VLAN

### VLAN Group:

Web Smart Media Convert	er - Microsoft Internet Explorer 🛛 🗖 🔀
Ble Edit View Figvorites Loois )	jelp 🥀
🔇 Back • 🐑 · 🖹 📓 🐔	🔎 Search 👷 Finiorites 🐵 💁 🍓 🔜 🍪
Address 📓 http://192.168.1.10/index.htm	🚽 🛃 Go 👘 Links 🍟 🤹
	802.1Q VLAN Group
	VLAN Mode Disable -
Network Information	(Acoly)
Local Setting	
D <sup>P</sup> Configuration Password Setting Converter Configuration Port Configuration MIB Configuration SNMP Config	
Remote Setting	
Tools	
Logout	
🗐 Done	🔮 Internet

**User's Manual** 

- VLAN Mode: Click "VLAN Mode" drop-down menu to choose "Disable" or "Enable" from the "VLAN Mode" dropdown list to disable or enable 802.1Q VLAN Group. User could set 16 VLAN entries if enable 802.1Q VLAN Group functions. Each VLAN entry could set VID and member port. The VID should be 1~4094.
- Apply: Click "Apply" button when you finished VLAN Group setting.

#### Web Smart Media Converter - Microsoft Internet Explorer File Edit View Pavoritas Tools Help 🔇 Bech \* 🗊 🖹 🖉 🐔 🔎 Search. 🏫 Favorites 🤣 🔂 🐁 🕁 🖼 Ajbireos 1 http://102.108.1.10/indea.htm - D Gen | 19444 1 101-802.10 VLAN Per Port Setting Port Egrees Link Type Port VLAN Entry IP Dort Touch Tag ... 0.00 FX Dart Toach Two 1..... Network Information CPU Dont Touch Tag 2 -Ingress Filter Disable .... Local Setting Apply IP Configuration Password Setting Converter Configuration Port Configuration Notice: Please make sure the VLAN port entry can go MIB Counter through CPU port. **ENMP** Configuration SNMP Community Setting VLAN. TELACY General WAN Per Part Service 0-16-0 Remote Setting Teol: Legout a) Done Distance:

### VLAN Per Port Setting:

• Egress Link Type:

Replace Tag: The media converter will remove VLAN tags from packets then add new tags to them. The inserted tag is the ingress port's "Default tag", which is indexed by port "Port based VLAN index". This is a replacement processing for tagged packets and an insertion for untagged packets. Remove Tag: The media converter will remove VLAN tags from packets if they are tagged when these packets are output. The media converter will not modify packets received without tags.


Add Tag: The media converter will add VLAN tags to packets if they are not tagged when these packets are output on this port. The media converter will not add tags to packets already tagged. The inserted tag is the ingress port's "Default tag", which is indexed by port's "Port based VLAN index".

Don't Touch Tag: Do not insert or remove VLAN tags to/from packet which is output on this port.

- Port VLAN Entry: Select Port based VLAN index. The number means VLAN table entry index, not VID.
- Ingress Filter: Click "Ingress Filter" drop-down menu to choose "Disable" or "Enable" from the "Ingress Filter" drop-down list to disable or enable VLAN ingress filter.
- Apply: Click "Apply" button when you finished VLAN Group setting.

Please make sure the VLAN port entry can go through CPU port.

### <u>Q-in-Q</u>

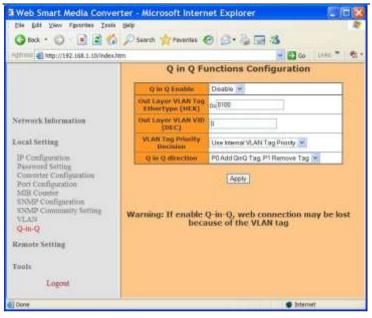

- Q in Q Enable: Click "Q in Q Enable" drop-down menu to choose "Disable" or "Enable" from the "Q in Q Enable" drop-down list to disable or enable Q in Q function.
- Out Layer VLAN Tag EtherType (HEX): Click in "Out Layer VLAN Tag EtherType" text box and type user defined Qin-Q out layer VLAN tag Ether type.
- Out Layer VLAN VID (DEC): Click in "Out Layer VLAN VID" text box and type user defined Q-in-Q out layer VLAN tag VID.
- VLAN Tag Priority Decision: Click "VLAN Tag Priority Decision" drop-down menu to choose "Use Internal VLAN Tag Priority" or "Use 802.1p remarking decision Priority" from the "VLAN Tag Priority Decision" drop-down list to decide out layer VLAN Tag's priority.
- Q in Q direction: Click "Q in Q direction" drop-down menu to choose "P0 Add QinQ Tag. P1 Remove Tag." or "P1 Add QinQ Tag. P0 Remove Tag." from the "Q in Q direction" drop-down list to select Q in Q direction.

• Apply: Click "Apply" button when you finished VLAN Group setting.

Web connection may be lost because of the VLAN tag if Q-in-Q is enabled.

## **Remote Setting**

### 802.3ah Functions

## 802.3ah Configuration:

diron 🗃 ntp://192.168.1.10/ind	ex.htm		- Co 14	6. T [ ]
	802.3	ah OAM Con	figuration	
	IIII2.3ab Passtion	Obisable	@ Enable	
Network Information	002.3ah Modu	@ Passive	CActive	
Local Setting	Remote Loopback	Obsable	Enable	
Contrast in the second s	Apply			
Remote Setting 802 5sh Functions 822 5sh Configuration Loopbox Tetr 812 3sh Configuration 1.000500 Tetr 812 3sh Stetu		802.3ah Sta	itus	
Tools	Discovery Blatus	PASSIVE_WAIT		1
and the second se	Fiber Port Status	NORM FWD		
Logout	and the second second second second	refresh		1

- 802.3ah Function: Choose "Disable" or "Enable" to disable or enable 802.3ah function.
- 802.3ah Mode: Choose "Passive" or "Active" to set passive or active 802.3ah mode.
- Remote Loopback: Choose "Disable" or "Enable" to disable or enable remote loopback.
- Apply: Click "Apply" button when you finished 802.3ah OAM Configuration.
- Refresh: Click "Refresh" button to show the current 802.3ah status again.

### Loopback Test:

Web Smart Media Convert	er - Microsoft Inte	rnet E	Explorer	
Eile Edit Yew Payarites Intia	Rep			R.
🔾 bok • 💭 🖹 🖬 🏠	🔎 Search 👷 Pavoritas	0	3.9 3	
Address @ http://192.168.1.10/index.htt	n		<b>2</b> 60	Links **   100 *
	802.	3ah L	oop Back Test	
	Sond Packot Number	16	(1-255)	
Network Information	PacketLength(Not. Include CBC)	60	(60~1514)	
Secondry Information		1		
Local Setting		L.	Apply )	
Remote Setting				
802.5ah Functions 802.5ah Configuration Leophath Terr 802.5ah Stotos				
Tools				
Lagout				
() Done			Sinterr	ret

- Send Packet Number (1~255): Click in "Send Packet Number" text box and type packet number to be sent.
- Packet Length (Not include CRC) (60~1514): Click in "Packet Length" text box and type packet length.
- Apply: Click "Apply" button when you finished 802.3ah Loop Back Test.

802.3ah Status:

and the second	verter - Microsoft Interr	et Explorer	56	
Elle Edit Very Facorites In	A REAL PROPERTY OF A REAL PROPER			
O 142 - O 18	🕼 🔎 Search 🤺 Fevorites 🤞	B 🔄 🖏 🗐 🖏		
2 Https://182.168.1.10/md	eichten		- Do	
	802.3	802.3ah Status Information		
Setwork Information		Global Config		
	Fenction Louisle	Dualeb		
Local Setting Remote Setting 102.548 Tractions	Ellier Fort State	NORM FWD		
	LOCH UTE MAC	00-80-81-11-00-09		
	Flags Field			
HE 3sh Configuration Longbury Test		Local	Battatto	
HEI Joh Barnin	Germete Stable	FALSE		
feeibi	Bernete Loonisting	FALSE		
1000	Lanal Blable	FALSE		
Logost	Local Evaluating	FALSE		
Tudora				
Logoni	Critical Event	PALSE		
Legent	Coldical Uvent Dying Gasp	FALSE FALSE		

123 mm (110.168.1.10/m	ex.htm		💓 🚺 6a - 1145 👘
	Discovery Information		
	Discovery Made	PASSEVE_WAIT	1
	Local PDU	FOL_INFO	
Sepende Information	Local Batteline	FALSE	
	Remote Mate Vetel	FALLE	
Local Setting	Local Lost Link Toront Dates: TRUE		
	Local Link Status	TRUC	
Remote Setting 802 July Functions 902 July Configuration		Information TLV	Rateste
Complexed Text 900, July Bases	Statu Man	PWD	animie,
7	State Par	PWD	-
Toola	Banadagana	040	
		FALSE	
Logost	Variabio		
Lagost	Unik Cymrtu	TALE	
Logost		TAUE	
Logost	Laik Corpeto		
Lingsof	Link Consts Longback	THE	

**User's Manual** 

This page shows 802.3ah Status Information of the media converter.


### Tools

#### System Reboot




- OK: Click "OK" button to restart the media converter.
- OK: Click "Cancel" button to cancel the media converter restarting.

#### Save and Restore

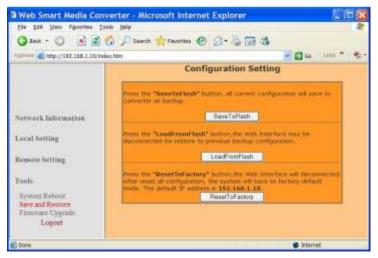

- SaveToFlash: Click "SaveToFlash" button to save all current configurations to media converter as backup.
- LoadFromFlash: Click "LoadFromFlash" button to restore to previous backup configuration. The Web Interface may be disconnected for restoration.
- ResetToFactory: Click "ResetToFactory" button. The Web Interface will be disconnected. The system will back to factory default mode after media converter resets all configurations. The default IP address is 192.168.1.10.

#### Firmware Upgrade

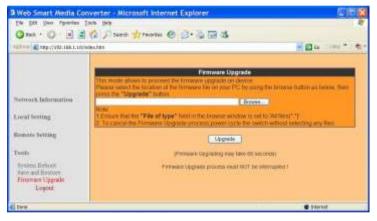

- Browse: Click "Browse" button to select the location and file of the new firmware image file on your computer.
- Upgrade: Click "Upgrade" button. The new firmware image file will be burned into the flash. Reset the media converter to use the new firmware.


### Logout



- OK: Click "OK" button to logout of the media converter.
- OK: Click "Cancel" button to cancel the media converter logout.

### **Reset Button**

There is a reset button located on the PCB board as shown in picture below. To access is, loosen the retaining screws on the case, and remove the shell. The reset button has the following functions, depending on the length the button is pressed. 1-5 seconds - Reboot the device 6-10 seconds - Reset the IP address to factory default >10 seconds - Restore all settings to factory default

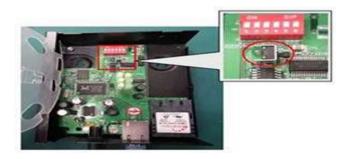

# **Specifications**

Applicable Standards	IEEE802.3 10Base-T
	IEEE802.3u 100Base-TX/FX
	IEEE802.3ab 1000Base-T
	IEEE802.3z 1000Base-SX/LX
Fixed Ports	1 10/100/1000Base-TX port
	1 dual rate 100Base-FX/BX or 1000Base-
	SX/LX/BX fiber interface
	1 100Base and 1000Base dual rate SFP fiber
	interface
Speed	
10Base-T	10/20Mbps for half/full-duplex
100Base-TX	100/200Mbps for half/full-duplex
100Base-FX/BX	200Mbps for full-duplex
1000Base-T	2000Mbps for full-duplex
1000Base-SX/LX/BX	2000Mbps for full-duplex
Forwarding rate	14,880pps for 10Mbps
	148,810pps for 100Mbps
	1,488,100pps for 1000Mbps
LED Indicators	POWER, OAMLOOP
	Fiber port: LNK/ACT
	TX port: SPEED, FDX, LNK/ACT
Dimensions	100mm (W) × 122mm (D) × 32.5mm (H)
	(3.94" (W) x 4.8" (D) x 1.28" (H))
Weight	0.5Kg (1.1lbs.)
Power	External power adaptor 12VDC, 0.25A
Power Consumption	3W Max.
Operating Temperature	<b>-5</b> ℃ ~ 55℃ (23°F ~ 131°F)
Storage Temperature	-20℃ ~ 70℃ (-4°F ~ 158°F)
Humidity	5 ~ 95%, non-condensing
Emissions	CE Mark Class A
	FCC part 15 Class A
	VCCI Class A