


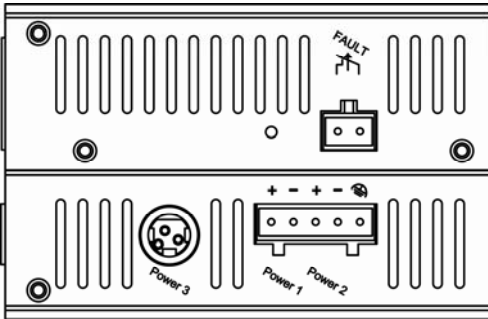

Quick Start Guide

This quick start guide describes how to install and use the Hardened Ethernet Switch. Capable of operating at temperature extremes of -10°C to $+60^{\circ}\text{C}$, this is the switch of choice for harsh environments constrained by space.

Physical Description

The Terminal Block and Power inputs




Power Input Assignment			
Power3		12VDC	DC Jack
Power2	+	12-48VDC	Terminal Block
	-	Power Ground	
Power1	+	12-48VDC	
	-	Power Ground	
		Earth Ground	
Relay Alarm Assignment			
 FAULT	*Relay warning signal disable for following: 1. The relay contact closes if Power1 and Power2 are both failed but Power3 on. 2. The relay contact closes if Power3 is failed but Power1 and Power2 are both on.		

DC Terminal Block Power Inputs: There are two pairs of power inputs can be used to power up this switch. Redundant power supplies function is supported.

The 10/100Base-TX and 100Base-FX Connectors

1. The 10/100Base-TX Connections


The following lists the pinouts of 10/100Base-TX ports.

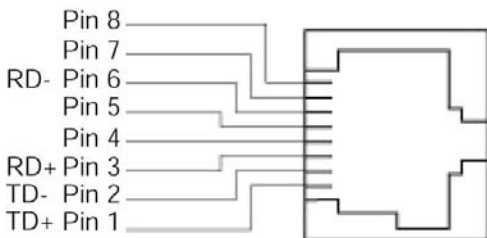

Pin	Regular Ports	Uplink port
1	Output Transmit Data +	Input Receive Data +
2	Output Transmit Data -	Input Receive Data -
3	Input Receive Data +	Output Transmit Data +
4	NC	NC
5	NC	NC
6	Input Receive Data -	Output Transmit Data -
7	NC	NC
8	NC	NC


2. The 100Base-FX Connections

The fiber port pinouts: The Tx (transmit) port of device I is connected to the Rx (receive) port of device II, and the Rx (receive) port of device I to the Tx (transmit) port of device II.




3. The WDM 100Base-FX Connections

The fiber port pinouts: Only one single-mode optical fiber is required to transmit and receive data.



The Port Status LEDs

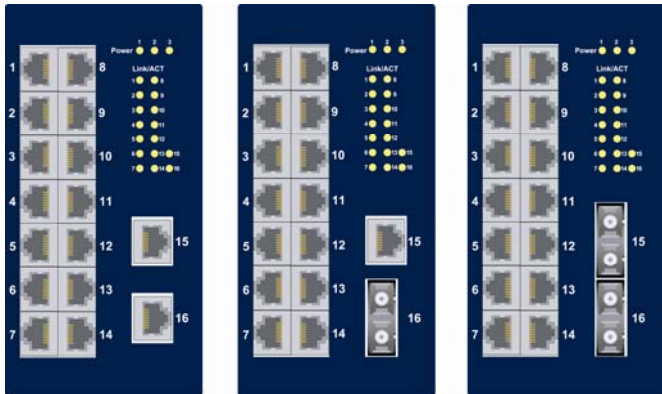

LED	State	Indication
10/100Base-TX, 100Base-FX		
Link/ACT (Green)	Steady	A valid network connection established.
	Flashing	Transmitting or receiving data. ACT stands for ACTIVITY.


Functional Description

- Meets IEC61000-6-2 EMC Generic Standard Immunity for industrial environment.
- Supports IEEE802.3/802.3u/802.3x. Auto-negotiation: 10/100Mbps, Full/Half-duplex, Auto-Negotiation, Auto MDI/MDIX.
- 100Base-FX: Multi/Single mode SC or ST type, WDM Single mode SC type.
- Supports 4096 MAC addresses. Provides 1.625M bits buffer memory.
- Alarms for power failure by relay output 1A @ 24VDC.
- Power Supplies: Redundant 12-48VDC Terminal Block power inputs and 12VDC DC JACK with 100-240VAC external power supply. "For Use with Model UP0351E-12P as power jack supply source by Universal Micro Electronics Co., Ltd."
- Field Wiring Terminal: Use Copper Conductors Only, 60/75°C, 14-24 AWG torque value 4.5 lb-in.
- Operating voltage and Max. current consumption: 0.7A @ 12VDC, 0.35A @ 24VDC, 0.175A @ 48VDC. Power consumption: 8.4W Max.
- Operating temperature ranges from -10°C to 60°C (14°F to 140°F). UL508 Industrial Control Equipment certified Maximum Surrounding Air Temperature @ 60°C (140°F).
- For use in Pollution Degree 2 Environment.
- Supports Din-rail or Panel Mounting installation.

Assembly, Startup, and Dismantling

- Assembly: Place the switch on the DIN rail from above using the slot. Push the front of the switch toward the mounting surface until it audibly snaps into place.

- Startup: Connect the supply voltage to start up the switch via the terminal block (or DC JACK).
- Dismantling: Pull out the lower edge and then remove the switch from the DIN rail.

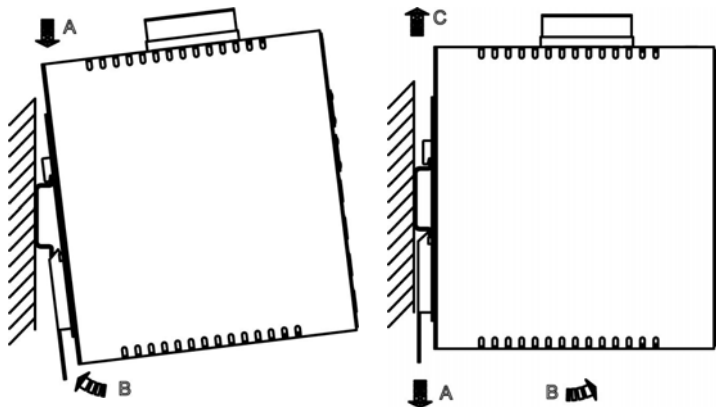

Preface

A member of the growing family of rugged switches, this switch addresses a need for a smaller switch. This switch provides an affordable solution for rugged and outdoor environment, transportation road-side cabinet, industrial floor shop, multitenant dwellings or Fiber To The Home (FTTH) applications. Capable of operating at temperature extremes of -10°C to $+60^{\circ}\text{C}$, this is the switch of choice for harsh environments constrained by space.

Plug-and-Play Solution:

The switch is a plug-and-play Fast Ethernet Switch in compact size. It doesn't have any complicated software to set up.

This manual describes how to install and use the hardened Ethernet Switch. This switch integrates full wire speed switching technology. This switch brings the answer to complicated hardened networking environments.

To get the most out of this manual, you should have an understanding of Ethernet networking concepts.

In this manual, you will find:




- Features on the switch
- Illustrative LED functions
- Installation instructions
- Specifications

Table of Contents

QUICK START GUIDE	1
PHYSICAL DESCRIPTION	1
<i>The Terminal Block and Power inputs</i>	1
<i>The 10/100Base-TX and 100Base-FX Connectors</i>	2
<i>The Port Status LEDs</i>	3
FUNCTIONAL DESCRIPTION	4
ASSEMBLY, STARTUP, AND DISMANTLING	4
PREFACE	6
TABLE OF CONTENTS	7
PRODUCT OVERVIEW	8
HARDENED ETHERNET SWITCH	8
PACKAGE CONTENTS	8
PRODUCT HIGHLIGHTS	9
<i>Basic Features</i>	9
FRONT PANEL DISPLAY	10
PHYSICAL PORTS	11
INSTALLATION	12
SELECTING A SITE FOR THE SWITCH	12
DIN RAIL MOUNTING	13
WIRING DIAGRAM	14
CONNECTING TO POWER	15
<i>Redundant DC Terminal Block Power Inputs</i>	15
<i>12VDC DC Jack</i>	15
<i>Alarms for Power Failure</i>	16
CONNECTING TO YOUR NETWORK	17
<i>Cable Type & Length</i>	17
<i>Cabling</i>	18
SPECIFICATIONS	19
APPENDIX A – CONNECTOR PINOUTS	21

Product Overview

Hardened Ethernet Switch

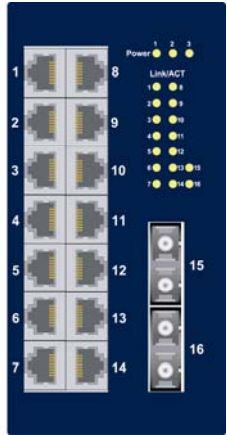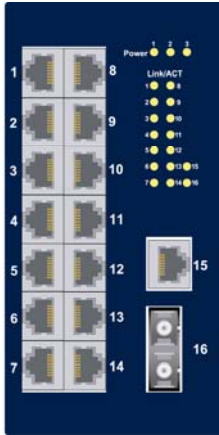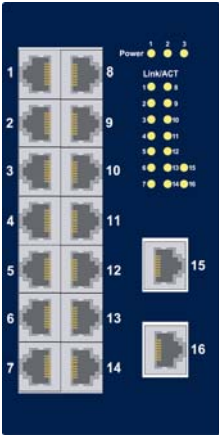

Package Contents

When you unpack the product package, you shall find the items listed below. Please inspect the contents, and report any apparent damage or missing items immediately to your authorized reseller.




- ✓ ***This Switch***
- ✓ ***User's Manual***
- ✓ ***External power adapter & Power Cord (Optional)***

Product Highlights

Basic Features

- Meets IEC61000-6-2 EMC Generic Standard Immunity for industrial environment.
- Support 802.3/802.3u/802.3X.
- Auto-negotiation: 10/100Mbps, Full/Half-duplex; Auto MDI/MDIX.
- Support 4096 MAC addresses.
- Provides 1.625M bits memory buffer.
- Alarms for power failure by relay output 1A @ 24VDC.
- Power Supplies: Redundant 12-48VDC Terminal Block power inputs and 12VDC DC JACK with 100-240VAC external power supply. "For Use with Model UP0351E-12P as power jack supply source by Universal Micro Electronics Co., Ltd."
- Field Wiring Terminal: Use Copper Conductors Only, 60/75°C, 14-24 AWG torque value 4.5 lb-in.
- Operating voltage and Max. current consumption: 0.7A @ 12VDC, 0.35A @ 24VDC, 0.175A @ 48VDC. Power consumption: 8.4W Max.
- Operating temperature ranges from -10°C to 60°C (14°F to 140°F). UL508 Industrial Control Equipment certified Maximum Surrounding Air Temperature @ 60°C (140°F).
- For use in Pollution Degree 2 Environment.
- Supports DIN-Rail or Panel Mounting installation.

Front Panel Display

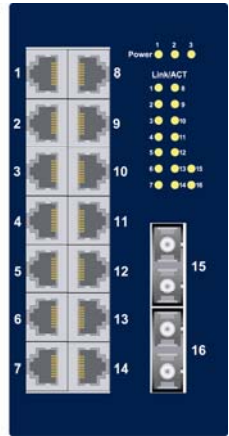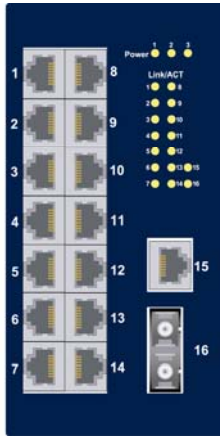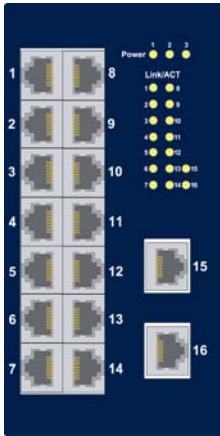

Status LEDs

LED	State	Indication
POWER		
Power 1	Steady	Switch is properly connected to power and turned on.
Power 2		
Power 3 (Green)	Off	Switch is not connected to power and is turned off.
10/100TX or 100FX		
Link/ACT (Green)	Steady	A valid network connection established.
	Flashing	Transmitting or receiving data. ACT stands for ACTIVITY.

Physical Ports

This switch provides:

- Sixteen 10/100Base-TX ports
- Fifteen 10/100Base-TX ports + one 100Base-FX port
- Fourteen 10/100Base-TX ports + two 100Base-FX ports

CONNECTIVITY

- RJ-45 connectors
- SC or ST connector on 100Base-FX fiber port.

Installation

This chapter gives step-by-step instructions about how to install the switch:

Selecting a Site for the Switch

As with any electric device, you should place the switch where it will not be subjected to extreme temperatures, humidity, or electromagnetic interference. Specifically, the site you select should meet the following requirements:


- The ambient temperature should be between -10 to 60 degrees Celsius.
- The relative humidity should be less than 95 percent, non-condensing.
- Surrounding electrical devices should not exceed the electromagnetic field (RFC) standards.
- Make sure that the switch receives adequate ventilation. Do not block the ventilation holes on each side of the switch
- The power outlet should be within 1.8 meters of the switch.

DIN Rail Mounting


Fix the DIN rail attachment plate to the back panel of the switch.

Installation: Place the switch on the DIN rail from above using the slot. Push the front of the switch toward the mounting surface until it audibly snaps into place.

Removal: Pull out the lower edge and then remove the switch from the DIN rail.

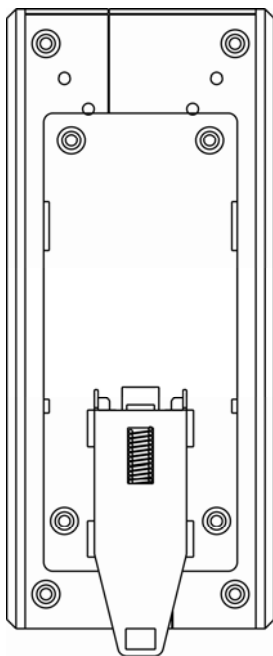

Wiring Diagram

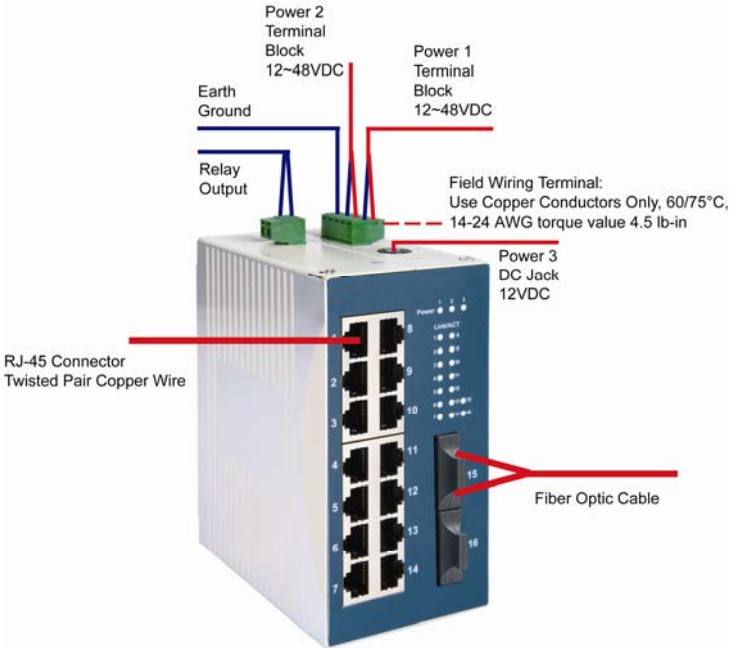

Connecting to Power

Redundant DC Terminal Block Power Inputs and 12VDC DC Jack:

Redundant DC Terminal Block Power Inputs

There are two pairs of power inputs can be used to power up this device. You only need to have one power input connected to run the switch.


Step 1: Connect the DC power cord to the plug-able terminal block on the switch, and then plug it into a standard DC outlet.

Step 2: Disconnect the power cord if you want to shut down the switch.

12VDC DC Jack



Step 1: Connect the supplied AC to DC power adapter to the receptacle on the topside of the switch.

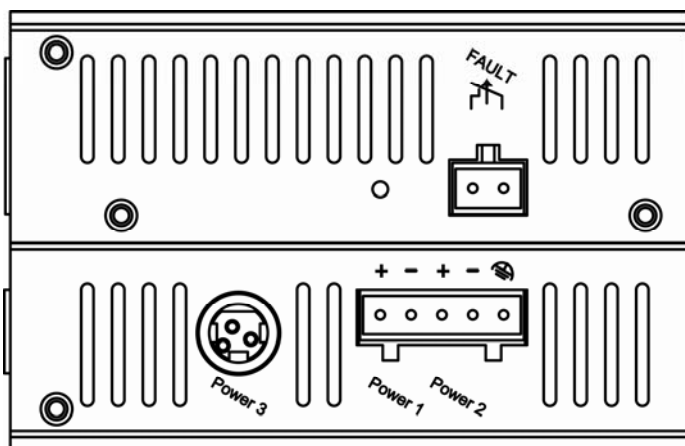Step 2: Connect the power cord to the AC to DC power adapter and attach the plug into a standard AC outlet with the appropriate AC voltage.



Alarms for Power Failure

Step 1: There are two pins on the terminal block are used for power failure detection. It provides the normally closed output when the power source is active. Use this as a dry contact application to send a signal for power failure detection.

Power Input Assignment		
Power3		12VDC
Power2	+	12-48VDC
	-	Power Ground
Power1	+	12-48VDC
	-	Power Ground
		Earth Ground
Relay Alarm Assignment		
 FAULT	*Relay warning signal disable for following: 1. The relay contact closes if Power1 and Power2 are both failed but Power3 on. 2. The relay contact closes if Power3 is failed but Power1 and Power2 are both on.	

Special note:

The relay output is normal open position when there is no power to the switch. Please do not connect any power source to this terminal to prevent the shortage to your power supply.

Connecting to Your Network

Cable Type & Length

It is necessary to follow the cable specifications below when connecting the switch to your network. Use appropriate cables that meet your speed and cabling requirements.

Cable Specifications

Speed	Connector	Port Speed Half/Full Duplex	Cable	Max. Distance
10Base-T	RJ-45	10/20 Mbps	2-pair UTP/STP Cat. 3, 4, 5	100 m
100Base-TX	RJ-45	100/200 Mbps	2-pair UTP/STP Cat. 5	100 m
100Base-FX	SC, ST	100/200 Mbps	MMF (50 or 62.5 μ m)	2 km
100Base-FX	SC, ST	100/200 Mbps	SMF (9 or 10 μ m)	20, 40, or 75 km

Cabling

Step 1: First, ensure the power of the switch and end devices are turned off.

<Note> Always ensure that the power is off before any installation.

Step 2: Prepare cable with corresponding connectors for each type of port in use.

Step 3: Consult the previous section for cabling requirements based on connectors and speed.

Step 4: Connect one end of the cable to the switch and the other end to a desired device.

Step 5: Once the connections between two end devices are made successfully, turn on the power and the switch is operational.

Specifications

Hardened Ethernet Switch	10/100Base-TX auto-negotiating ports with RJ-45 connectors, 100Base-FX fiber ports
Applicable Standards	IEEE 802.3 10Base-T IEEE 802.3u 100Base-TX/FX
Switching Method	Store-and-Forward
Forwarding Rate	
10Base-T:	10 / 20Mbps half / full-duplex
100Base-TX/FX:	100 / 200Mbps half / full-duplex
Performance	14,880pps for 10Mbps 148,810pps for 100Mbps
Cable	
10Base-T:	2-pair UTP/STP Cat. 3, 4, 5
100Base-TX:	2-pair UTP/STP Cat. 5 Up to 100m (328ft)
100Base-FX:	MMF (50 or 62.5µm), SMF (9 or 10µm)
LED Indicators	Per unit – Power status (Power 1, Power 2, Power 3) Per port – 10/100TX or 100FX - Link/ACT
Dimensions	69mm (W) x 110mm (D) x 135mm (H) (2.72" (W) x 4.33" (D) x 5.31" (H))
Net Weight	0.87Kg (1.92lbs.)
Power	Terminal Block: 12-48VDC DC Jack: 12VDC, External AC/DC required
Operating Voltage & Max. Current Consumption	0.7A @ 12VDC, 0.35A @ 24VDC, 0.175A @ 48VDC
Power Consumption	8.4W Max.
Operating Temperature	-10°C to 60°C (14°F to 140°F) UL508 Industrial Control Equipment certified Maximum Surrounding Air Temperature @ 60°C (140°F)
Storage Temperature	-40°C to 85°C (-40°F to 185°F)
Humidity	5%-95% non-condensing
Safety	UL508, EN60950-1, IEC60950-1

EMI

FCC Part 15, Class A

EN61000-6-3:

EN55022

EN61000-3-2

EN61000-3-3

EMS

EN61000-6-2:

EN61000-4-2 (ESD Standard)

EN61000-4-3 (Radiated FRI Standards)

EN61000-4-4 (Burst Standards)

EN61000-4-5 (Surge Standards)

EN61000-4-6 (Induced RFI Standards)

EN61000-4-8 (Magnetic Field Standards)

EN61000-4-11 (Voltage Dips Standards)

Environmental Test Compliance


IEC60068-2-6 Fc (Vibration Resistance)

IEC60068-2-27 Ea (Shock)

IEC60068-2-32 Ed (Free Fall)

Appendix A – Connector Pinouts

Pin arrangement of RJ-45 connectors:

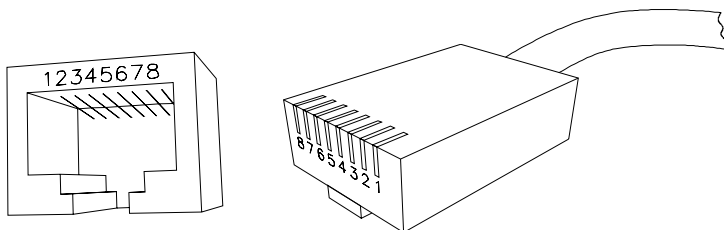

RJ-45 Connector and Cable Pins

The following table lists the pinout of 10/100Base-TX ports.

Pin	Regular Ports	Uplink port
1	Output Transmit Data +	Input Receive Data +
2	Output Transmit Data -	Input Receive Data -
3	Input Receive Data +	Output Transmit Data +
4	NC	NC
5	NC	NC
6	Input Receive Data -	Output Transmit Data -
7	NC	NC
8	NC	NC