


Hardened Media Converter

This quick start guide describes how to install and use the hardened media converter. This is the media converter of choice for harsh environments constrained by space.

Physical Description

The Terminal Block and Power Inputs

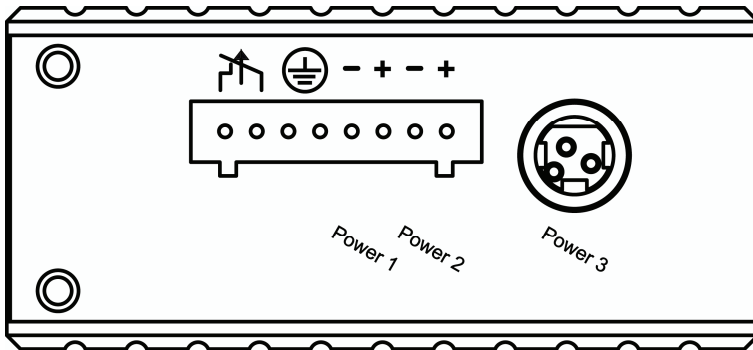


Power Input Assignment					
Power 1	+	12~48VDC	Terminal Block		
	-	Power Ground			
Power 2	+	12~48VDC			
	-	Power Ground			
		Earth Ground			
		Relay			
Power 3	12VDC		DC Jack		
DIP Switch Assignment					
DIP-ON 1 2 3 4 5 6 0	LFPT	TX		FX	LINK DOWN
	Enable	F. Mode	10M	H.Duplex	H.Duplex
Disable	Auto Mode	100M	F.Duplex	F.Duplex	OFF

- DC Terminal Block Power Inputs: There are two pairs of power inputs can be used to power up this device. You need to have two power inputs connected to run the media converter, but the FAULT LED indicator will light up to remind that the power redundant system functions abnormal in case either PWR1 or PWR2 is dead. Media Converter, however, continues working normally even fault LED indicator lights up.
- DC JACK Power input: 12VDC.

The 10/100Base-TX and 100Base-FX/BX Connectors

The 10/100Base-TX Connections

The following lists the pinouts of 10/100Base-TX ports.

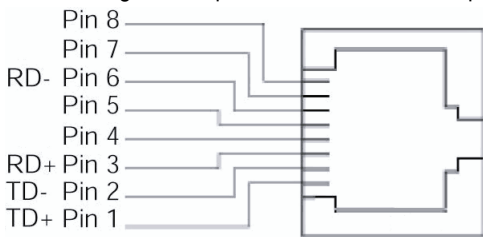


Pin	Regular Ports	Uplink port
1	Output Transmit Data +	Input Receive Data +
2	Output Transmit Data -	Input Receive Data -
3	Input Receive Data +	Output Transmit Data +
4	NC	NC
5	NC	NC
6	Input Receive Data -	Output Transmit Data -
7	NC	NC
8	NC	NC

The 100Base-FX Connections

The fiber port pinouts


The Tx (transmit) port of device I is connected to the Rx (receive) port of device II, and the Rx (receive) port of device I to the Tx (transmit) port of device II.

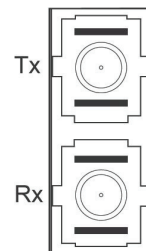

The WDM 100Base-BX Connections


The fiber port pinouts

Only one optical fiber is required to transmit and receive data.

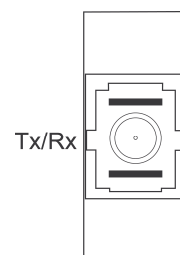

Hardened Media Converter

The Port Status LEDs

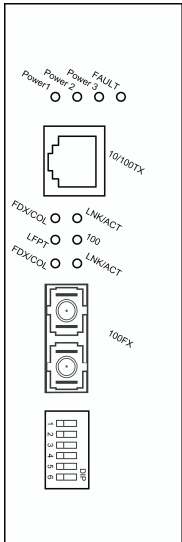

LEDs	State	Indication	LNK/ACT	State	Indication
FAULT	Steady	Power redundant system or ports function abnormally	LNK/ACT	Steady	Valid network connection established LNK stands for LINK
	Flashing	Power redundant system and ports function normally		Flashing	Transmitting or receiving data ACT stands for ACTIVITY
	Off	Power on PWR stands for POWER		Off	Neither valid network connection established nor transmitting/receiving data
PWR1	Steady	Power on	FDX/COL	Steady	Connection in full duplex mode FDX stands for FULL-DUPLEX
PWR2	Off	Power off			
PWR3	Off	Power off			
100 (Mbps)	Steady	Connection at the speed of 100Mbps	FDX/COL	Flashing	Collision occurred COL stands for COLLISION
	Off	Connection at the speed of 10Mbps			
LFPT	Steady	LFPT function enabled	FDX/COL	Off	Connection in half-duplex mode
	Off	LFPT function disabled			

Functional Description

- Complies with IEC61850-3 and IEEE1613 environmental requirements for substation and power automation.
- Complies with EN50121-4 environmental requirements for railway applications.
- Meets NEMA TS1/TS2 environmental requirements: temperature, shock, and vibration for traffic control equipment.
- Meets EN61000-6-2 & EN61000-6-4 EMC generic standard immunity for industrial environment.
- Meets safety standard UL508.
- Supports 802.3/802.3u/802.3x. Auto-negotiation: 10/100Mbps, full/half-duplex. Auto MDI/MDIX.
- 100Base-FX: Multi mode/Single mode SC or ST type. 100Base-BX: WDM Multi mode/Single mode SC type.
- One DIP switch for configuring link-fault-pass-through, fixed speed, full/half duplex, and link down alarm.
- Alarms for power and port link failure by relay output. Relay contact rating with current 1A @ 250VAC.
- Operating voltage and Max. current consumption: 0.2A @ 12VDC, 0.1A @ 24VDC, 0.05A @ 48VDC. Power consumption: 2.4W Max.
- Power Supply: Redundant DC Terminal Block power inputs and 12VDC DC JACK with 100-240VAC external power supply.
- Field Wiring Terminal: Use Copper Conductors Only, 60/75°C, 12-24 AWG torque value 7 lb-in.
- -40°C to 75°C (-40°F to 167°F) operating temperature range. Tested for functional operation @ -40°C to 85°C (-40°F to 185°F). UL508 Industrial Control Equipment certified Maximum Surrounding Air Temperature @ 75°C (167°F).
- For use in Pollution Degree 2 Environment.
- Supports Din-rail, Panel, or Rack Mounting installation.

Assembly, Startup, and Dismantling

- Assembly: Place the media converter on the DIN rail from above using the slot. Push the front of the media converter toward the mounting surface until it audibly snaps into place.
- Startup: Connect the supply voltage to start up the media converter via the terminal block (and DC JACK).
- Dismantling: Pull out the lower edge and then remove the media converter from the DIN rail.

