

EX19082A PoE Switch Installation Guide



1 Unpacking

Unpack the items. Your package should include:

- One EX19082A Ethernet PoE switch
- One AC power cord

If items are missing or damaged, notify your EtherWAN representative. Keep the carton and packing material.


2 What Else You Need

- Category 5 or better Ethernet cables
- Small form-factor pluggable (SFP) optical transceiver modules for optional fiber connectivity

3 Select a Location

- Desktop installations: Locate a flat surface.
- Identify a power source within 6 feet (1.8 meters).
- Choose a dry area with ambient temperature between 0 and 40°C (32 and 104°F).
- Do not cover fans on the rear and side.
- Keep away from heat sources, sunlight, warm air exhausts, hot-air vents, and heaters.
- Be sure there is adequate airflow.
- Keep the switch at least 6 ft (1.83 m) away from the nearest source of electromagnetic noise, such as a photocopy machine.

4 Connect to the Data Ports

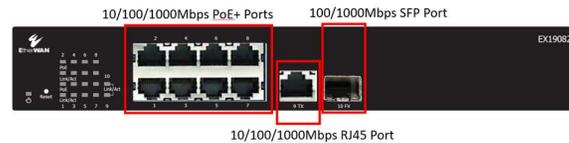

Eight Gigabit PoE+ Ports

The switch is equipped with 8 10/100/1000 Mbps RJ45 ports that provide IEEE802.3at Power over Ethernet (PoE+), with up to 30W per port (250W total PoE power budget). These ports can be connected to PoE devices such as IP surveillance cameras or Voice Over Internet Protocol (VoIP) phones.

- Insert one end of a Category 5 or better Ethernet cable into a switch port.
- Connect the other end into the Ethernet port of the device.
- Repeat steps A and B for each additional device you want to connect to the switch.

Gigabit RJ45/SFP Uplink Ports

The switch provides two gigabit uplink ports, 1 RJ45 (10/100/1000Mbps) and 1 SFP (1000Mbps).

The SFP port accommodates standard SFP modules; wear an ESD-preventive wrist strap before connecting SFP modules.

5 Apply AC Power

- Connect the female end of the supplied AC power adapter cable to the power receptacle on the switch rear panel. Connect the other end to a grounded 3-pronged AC outlet.
- On the switch rear panel, move the ON/OFF switch to the ON position.

When you apply AC power:

- The fans start.
- The orange **Power** LED goes ON.
- The **Link/ACT** LEDs turn on for every port connected to a powered device.

6 Front Panel LEDs

LED	Color	Status
Power	Orange	ON = switch is receiving power.
PoE <i>(port number)</i>	Orange	ON = Powered Device (PD) is connected.
		OFF = PD is disconnected.
Link/ACT <i>(port number)</i>	Green	ON = valid network connection.
		OFF = no data transmission on port.
		Flashing = port is sending or receiving data.
SFP <i>(port number)</i>	Green	ON = valid network connection.
		OFF = no data transmission on port.
		Flashing = port is sending or receiving data.

NOTES: