

Installation Guide



1 Unpacking

Unpack the items. Your package should include:

- One EX75900 Series switch
- On RJ-45 console cable
- Rack-mounting hardware brackets

If items are missing or damaged, notify your EtherWAN representative. Keep the carton and packing material.

Download the full manual at:

<https://www.etherwan.com>




2 What Else You Need

- Appropriate cables for data ports. To prevent damage to the switch from electrical surges, it is recommended to use STP (Shielded twisted pair) cabling.
- Personal computer or laptop

3 Select a Location

- Desktop installations: Mount on a flat table or shelf surface.
- Rack installations: Use a 19-inch (48.3-centimeter) EIA standard equipment rack that is grounded and physically secure.

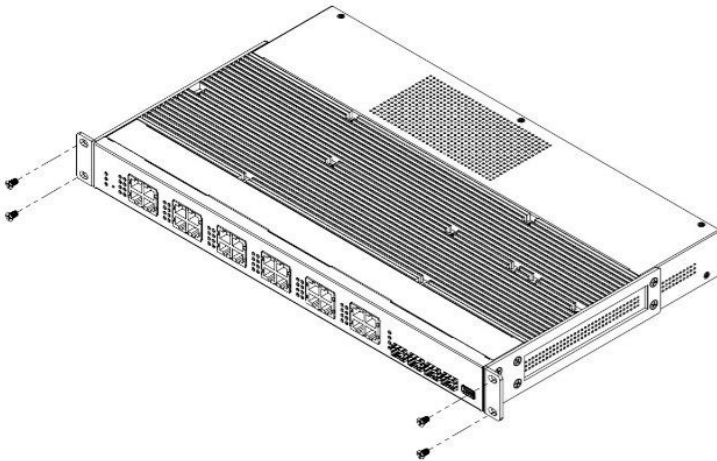

- Identify a power source within 6 feet (1.8 meters).
- Choose a dry area with ambient temperature between -40 and 75°C (-40 and 167°F).
- Keep away from heat sources, sunlight, warm air exhausts, hot-air vents, and heaters.
- Be sure there is adequate airflow.

4 Connect to the Data Ports

Depending on the model, your switch can have the following ports:

- 24 10/100/1000Base-TX PoE ports
- 4 1G SFP or 4 1G/10G SFP slots

10/100/1000Base-TX Ports

Ports that support Power over Ethernet provide power to networked devices such as IP Phones, Wireless LAN Access Points, and IP security cameras. Total power budget is 720 Watts, 60 Watts per port.

1G/10G SFP Slots


SFP transceivers can be installed directly into SFP slots. Ensure that the same type of transceiver is used at both ends of the link and that the correct type of fiber cable is used.

5 Apply DC Power

The switch has two terminal block power inputs. Only one power input is required to operate the switch. However, redundant power supply functionality is supported. Input voltage is 52-57 VDC.

Relay Output Alarm

The switch provides relay output contacts for signaling of a user-defined power or port failure. The relay output can be connected to an alarm signaling device. Current is 0.5A at 48VDC.

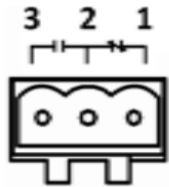

3 Normal Open | 2 Ground | 1 Normal close


Power-Up Sequence

When you apply DC power:

- All **Link/ACT** LEDs blink momentarily.
- The **Power** LED goes ON.
- Booting → The **Alarm** LED goes ON
- System ready → The **Alarm** LED goes off

6 Front Panel LEDs

LED	Color	Status
Power 1 & 2	Green	ON = power on OFF = power off
Link/ACT 	Green	ON = Valid network connection is established Flashing = Port sending or receiving data
PoE	Amber	ON = Powered Device is connected Off = Powered Device is disconnected
Alarm	Red	Link down or power down

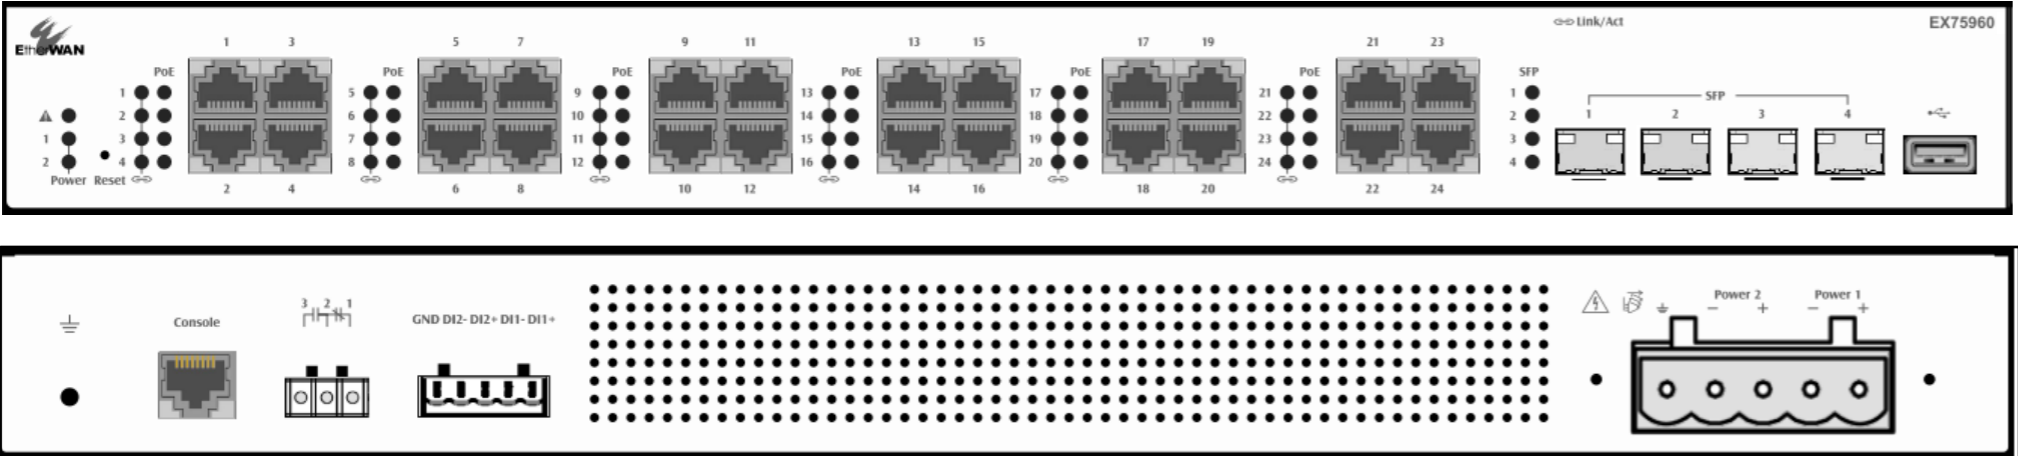

7 Console Configuration

Connect to the switch console by connecting the DB-9 cable to the console port of the switch and to the serial port of the computer running a terminal emulation application (such as HyperTerminal or Putty).

Configuration settings of the terminal-emulation program: Baud rate: 115,200bps, Data bits: 8, Parity: none, Stop bit: 1, Flow control: none.

The default login name is “root,” no password.

8 Web Configuration

Connect to the switch using either one of the RJ45 ports on the front, or the console port on the rear of the device.

Log in to the switch by launching a web browser and entering 192.168.1.10 in the address bar. Enter the default login ID: root (no password) and click “Login.”

9 Copy Configuration to USB

The USB port can be used to save the running switch configuration to a (FAT32) USB storage device. Plug the device into the USB port, and use the “Save Configuration” command in the web interface, or “copy running-config startup-config” in the CLI.

10 Digital IO-Setting

Connecting the Digital Inputs

The pin definitions for the digital input module are shown below. Each digital input consists of two contacts on the 5-pin connector located on the back panel of the switch. The inputs can be wired as either dry or wet contacts.

Dry Contacts:

[DI1-/GND] [DI2-/GND]
Logic level 1: Close to GND
Logic level 0: Open

Wet Contacts:

[DI1+/DI1-] [DI2+/DI2-]
Logic level 1 (High): 13-30 Volts
Logic level 0 (Low): 0-3 Volts

11 Safety information

This equipment is intended to be used in a restricted access location and by qualified personnel. This equipment is not suitable for use in locations where children are likely to be present.

Pluggable optical modules and direct-attach cables shall meet the following regulatory requirements:

- UL and/or CSA registered component for North America
- Class 1 Laser Product
- FCC 21 CFR Chapter 1, Sub-chapter J in accordance with FDA & CDRH requirements
- IEC/EN 60825-1:2014, IEC/EN 60825-2:2004+A1+A2 or later, European Standard

(A) Elevated Operating Ambient - If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature (T_{ma}).

B) Mechanical Loading - Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.

C) Circuit Overloading - Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

D) Reliable Earthing - Reliable earthing of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g. use of power strips).

Do not disable the power cord grounding plug. The grounding plug is an important safety feature.



Hazardous voltages may occur within this unit when connected to all power supplies.



Plug the power cord into a grounded (earthed) electrical outlet that is easily accessible at all times.

Les matériels sont destinés à être installés dans des EMPLACEMENTS À ACCÈS RESTREINT.



Power wiring information:

The rating of the power wire used must be at least 105°C.

USE COPPER CONDUCTORS ONLY.

If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

WARNING – Explosion hazard. Do not disconnect the terminal block while the circuit is live or unless the area is known to be free of ignitable concentrations.

For repair or maintenance needs, contact EtherWAN directly.

Informations de câblage d'alimentation:

Le calibre du fil d'alimentation utilisé doit être d'au moins 105°C.

DESTINÉ À ÊTRE UTILISÉ AVEC DES CONDUCTEURS EN CUIVRE SEULEMENT.

Si la méthode d'utilisation de l'équipement diffère de celle décrite par le fabricant, la protection assurée par l'équipement risque d'être altérée.

Contactez-nous pour l'entretien ou la réparation.

Manufacturer information:

ETHERWAN SYSTEMS, INC.

33F, No. 93, Sec. 1, Xintai 5th Rd., Xizhi Dist., New Taipei City, 221 Taiwan

