



# Hardened Managed Ethernet Switch Firmware 2.02.8.2

User's Guide

**FastFind Links**

[Computer Setup](#)

[Setting the initial IP address](#)

## All Rights Reserved

Dissemination or reproduction of this document, or its contents, is not authorized except where expressly permitted. Violators are liable for damages. All rights reserved, for the purposes of patent application or trademark registration.

## Disclaimer of Liability

The information contained in this document is subject to change without notice. EtherWAN is not liable for any errors or omissions contained herein or for resulting damage in connection with the information provided in this manual.

## Registered Trademarks

The following words and phrases are registered Trademarks of EtherWAN Systems Inc.

EtherWAN

All other Trademarks are property of their respective owners.

## Warranty

For details on the EtherWAN warranty replacement policy, please visit our web site at:  
[www.etherwan.com](http://www.etherwan.com)

## Products Supported by this Manual:

EtherWAN switches running firmware version 2.02.8.2: EX78900, EX73900, EX77900, EX77964, EX83304

## Contact EtherWAN Systems

Corporate Headquarters  
EtherWAN Systems Inc.  
2301 E Winston Rd Anaheim  
Anaheim, CA 92806  
Tel: (714) 779 3800  
Fax: (714) 779 3806  
Email: support@etherwan.com

# Table of Contents

<b>Preface.....</b>	<b>xv</b>
Applicable Models.....	xv
Document Conventions.....	xvi
Safety and Warnings .....	xvi
Typographic Conventions .....	xvi
<b>Computer Setup.....</b>	<b>17</b>
Management Methods and Protocols.....	17
Default IP.....	18
Login Process and Default Credentials .....	18
<b>Setting the initial IP address.....</b>	<b>19</b>
Simple IP Addressing .....	19
<b>CLI Command Usage.....</b>	<b>20</b>
Navigating the CLI Hierarchy .....	20
CLI Keyboard Shortcuts.....	21
CLI Command modes.....	21
Global Configuration Mode .....	21
MSTP Configuration Mode .....	21
Interface Configuration Mode .....	22
VLAN Database Configuration Mode .....	22
Router Configuration Mode .....	22
Saving a Configuration from the CLI .....	23
<b>System Menu (web interface) .....</b>	<b>23</b>
System Information.....	23
System Name/Password.....	24
System Name/Password using the CLI.....	25
Show Switch Model/Serial Number using the CLI .....	26
IP Address.....	27
Static IP .....	27
DHCP Client .....	27
Default Gateway .....	27
DNS Server.....	28
IP Address - Configuration using the CLI .....	29
Set the IP Address .....	29

Set the Default Gateway .....	30
Set the Domain Name Server (DNS).....	31
Enable/Disable DHCP Client on a VLAN.....	32
Enable/Disable Static IP on a VLAN.....	32
Set the IPv6 Address of an Interface.....	33
Set the IPv6 Address through DHCP .....	33
Enable/Disable DHCP Server for IPv6 .....	34
Configure DHCPv6 server settings.....	34
IPv6 Address .....	34
IP Address - Configuration using the CLI .....	35
Set the IPv6 Address .....	35
Configure IPv6 Neighbor Discovery .....	35
Management Interface.....	35
HTTPS.....	36
Telnet.....	36
SSH (Secure Shell) .....	36
Management Interface Configuration using the CLI .....	37
Enabling/Disabling Telnet .....	37
Enabling/Disabling SSH .....	38
Enabling/Disabling HTTP and/or HTTPS .....	39
Save Configuration Page.....	40
Save Configuration .....	40
Load Configuration.....	41
Backup Configuration.....	41
Restore Default.....	41
Auto Save .....	41
Saving and Loading Configurations Using EB-232.....	42
Save Configuration Page using the CLI .....	44
Saving a Configuration.....	44
Restore Default Settings .....	45
Load Configuration from a TFTP Server .....	45
Save Configuration to a TFTP Server .....	45
Auto Save Configuration .....	46
Firmware Upgrade .....	46
Firmware Update using the CLI .....	47
Booting From Alternate (Backup) Firmware .....	47
Reboot.....	48
Reboot using the CLI .....	48
Logout .....	49
Logout from the CLI .....	49
User Account Page.....	49
Changing the User Mode .....	49
Creating a New User.....	50

Changing an Existing User Account.....	51
User Privilege Configuration .....	52
User Account Settings using the CLI.....	54
Multi-User Mode.....	54
Single User Mode .....	54
Creating a New User.....	55
Permissions .....	55
<b>Diagnostics .....</b>	<b>56</b>
Utilization.....	56
System Log.....	56
System log using CLI command .....	57
Remote Logging .....	57
Remote Logging using CLI commands .....	59
Enable/Disable Remote Logging .....	59
Add/Delete a Remote Logging Host.....	59
ARP Table .....	59
ARP Table using CLI Commands .....	60
Route Table .....	61
Route Table Using CLI Commands .....	61
Alarm Setting .....	62
Alarm Setting Using CLI Commands.....	63
Setting EEE (Energy-Efficient Ethernet).....	64
<b>Port .....</b>	<b>65</b>
Configuration .....	65
Port Status.....	66
Rate Control .....	67
RMON Statistics .....	68
Per Port VLAN Activities .....	69
Port Configuration Examples Using CLI Commands .....	70
Setting the Port Description .....	70
Enable or Disable a Port .....	71
Setting the Port Speed.....	71
Setting Port Duplex .....	72
Enable or Disable Port Flow Control .....	72
Display Port Status .....	72
Setting a Port's Rate Control.....	72
Display a Port's RMON Statistics .....	73
Display a Port's VLAN Activities .....	73
<b>Switching.....</b>	<b>73</b>
Bridging .....	73

Aging Time.....	74
Threshold Level .....	75
Storm Control Type.....	75
Loopback Detect.....	76
Loopback Detection (Global).....	76
Loopback Detect Action .....	77
Loopback Detect Recovery Time .....	77
Polling Interval .....	77
Loopback Detection (Per Port) .....	78
Storm Detect.....	79
Enable/Disable Storm Detection .....	79
Static MAC Entry .....	80
Adding a Static MAC Address to a Port.....	81
Removing a Static MAC Address from a Port.....	81
Adding a MAC to the Static-MAC-Entry Discard Table .....	82
Removing a MAC address from the Static-MAC-Entry Discard Table .....	82
Port Mirroring.....	83
Link State Tracking.....	85
Enable/Disable Link State Tracking.....	85
Port Settings .....	85
PoE (Power over Ethernet) - System and Port Settings .....	86
PoE System Setting .....	86
PoE Port Setting .....	87
PoE Scheduling .....	88
PoE Watchdog.....	90
Switch Configuration Examples Using CLI Commands .....	92
Setting the Aging Time Value.....	92
Enabling Port Isolation .....	92
Setting Storm Control.....	92
Enabling Loopback Detect (Global).....	93
Setting the Loopback Detect Action .....	93
Setting the Loopback Detect Recovery Time .....	93
Setting the Loopback Detect Polling Interval .....	94
Enabling Loopback Detect (Port) .....	94
Configuring Storm-Detect.....	94
Adding a MAC Address for Static-MAC-Entry Forwarding.....	98
Discard a Static MAC Entry.....	98
Configuring Port Mirroring .....	98
Enabling a Link State Tracking Group.....	99
Assigning a Port to a Link State Tracking Group .....	99
Setting PoE Power Budget.....	99
PoE Port Settings.....	100
Fixed Power Limit .....	101

Power-priority.....	103
PoE Scheduling .....	103
PoE Watchdog.....	105
PoE 4-Pair Delivery.....	106
PoE Extender.....	106
<b>Trunking .....</b>	<b>106</b>
Overview .....	106
Static Channel Trunking.....	107
Link Aggregation Control Protocol.....	107
Port Trunking .....	108
LACP Trunking .....	109
Trunking Configuration Using CLI Commands.....	113
Adding an Interface to a Static Trunk .....	113
Adding an Interface to a LACP Trunk.....	113
Setting the LACP Port Priority .....	113
Setting the LACP Timeout.....	114
<b>STP/Ring Page – Overview .....</b>	<b>114</b>
Choosing the Spanning Tree Protocols.....	114
Spanning Tree Protocol (STP) .....	115
Rapid Spanning Tree protocol (RSTP).....	115
Multiple Spanning Tree Protocol (MSTP) .....	115
<b>STP/Ring Page - Configuring RSTP .....</b>	<b>115</b>
Global Configuration Page.....	115
Enabling the RSTP Protocol .....	116
Additional Global Configuration page settings.....	116
The Root Bridge & Backup Root Bridge .....	118
Setting the MAX Age, Forward Delay and Hello Timer .....	119
RSTP Port Setting Page .....	120
Spanning Tree Port Roles.....	120
Path Cost & Port Priority .....	121
Point to Point Link .....	123
Edge Port.....	123
RSTP Configuration Using CLI Commands .....	123
Enabling the Spanning Tree Protocol.....	123
Bridge Priority, Max Age, Forward Delay, and Hello Time .....	124
Modifying the Port Priority and Path Cost.....	124
Manually Setting a Port to be a Shared or Point to Point Link .....	125
Enabling/Disabling a port to be an Edge Port .....	125
Enabling/Disabling automatic edge detection .....	126

<b>STP/Ring Page - Configuring MSTP .....</b>	<b>126</b>
Global Configuration Page.....	126
Enabling the MSTP Protocol .....	126
The CIST Root Bridge & Backup CIST Root Bridge .....	127
Setting Bridge Priority .....	128
Configuring the CST Network Diameter .....	129
MSTP Properties Page .....	130
Configuring an MSTP Region.....	130
Configuring the IST Network Diameter.....	131
MSTP Instance Setting Page .....	132
Setting an MSTP Instance .....	132
Modifying MSTP parameters for load balancing.....	133
MSTP Port Setting page .....	135
Adjusting the blocking port in a MSTP network .....	135
MSTI Instance Port Membership.....	136
MSTP Configuration Using CLI Commands.....	137
Enabling Spanning Tree for MSTP.....	137
Bridge Priority, Max Age, Forward Delay, and Hello Time.....	138
Configure IST MAX Hops.....	138
MSTP Regional Configuration Name and the Revision Level.....	139
Creating an MSTI Instance .....	139
Setting MSTI Priority .....	139
Modifying CIST Port Priority and Port Path Cost .....	140
Adding a Port to an MSTI Instance .....	141
<b>STP/Ring Page - Alpha Ring .....</b>	<b>141</b>
Alpha Ring Setting Page.....	141
EtherWAN Alpha-Ring Technology .....	141
Implementing a Simple Alpha-Ring .....	142
Alpha-Ring V2.....	142
Connecting two Alpha-Ring Networks together (Ring Coupling).....	143
Configuring Alpha Ring using CLI commands.....	145
Enable Alpha Ring and Alpha Ring V2 Protocols .....	145
Set the Ring Ports.....	145
Show Ring, Port and All States .....	145
Define a Ring's Blocked Port.....	146
Set Delay Time for Restoration of a Failed Port .....	146
Enable Ring Coupling .....	147
Set Ring Coupling Ports.....	147
Show Ring Coupling and Port Coupling States .....	147
<b>STP/Ring Page – Alpha Chain .....</b>	<b>148</b>
The Alpha Chain Protocol .....	148

General Overview .....	148
Alpha Chain Settings .....	149
Global Settings .....	149
Configuring the Alpha Chain Ports .....	150
Alpha Chain Pass-Through Ports.....	151
Configuring Alpha Chain using CLI commands.....	152
Storm Control.....	152
Configuring Chain Ports.....	152
Configuring Chain Pass-Through Ports.....	153
<b>STP/Ring Page - Advanced Setting.....</b>	<b>153</b>
Advanced Bridge Configuration .....	154
Advanced Per Port Configuration.....	154
Configuring Spanning Tree Advanced Settings using CLI commands.....	156
Enabling BPDU Guard Globally .....	156
Enabling BPDU Guard on a Port.....	156
Enabling BPDU Guard Error Disable-timeout.....	156
<b>VLAN.....</b>	<b>158</b>
Configuring VLANs .....	158
Add and delete VLANs.....	158
Port Setting .....	159
Tag Based VLAN Configuration Using CLI Commands.....	160
Configuring a 802.1Q VLAN.....	160
Configuring an IP Address for a Management VLAN .....	161
Removing an IP Address from a Management VLAN.....	161
Configuring an Access Port.....	162
Configuring a Trunk Port.....	162
Add an IP to the Management VLAN .....	162
<b>QoS .....</b>	<b>163</b>
Global Configuration Page.....	164
Web GUI Interface .....	164
QoS Global Configuration using the CLI Interface.....	167
Enable/Disable QoS Trust.....	167
Configuring the Egress Expedite Queue .....	168
802.1p Priority Page .....	169
Web GUI Interface .....	169
802.1p Priority Submenu – CLI Interface .....	170
DSCP Page – HTTP Interface .....	170
DSCP Submenu – CLI Interface .....	172
QoS Interface Commands – CLI Interface .....	172

---

<b>IP ACL (Access Control List).....</b>	<b>173</b>
Configuring IP ACL.....	173
Port ACL Settings.....	174
ACL Configuration Using CLI Commands.....	175
Enabling QoS.....	175
Creating a Standard IP Access List.....	175
Creating an Extended IP Access List .....	176
Creating a MAC Access List.....	177
Creating an ACL Class Map with Layer 4 Access List.....	177
Creating a ACL Class Map with an IP or MAC Access List .....	178
Creating an ACL Policy Map .....	179
Appling an Existing ACL Policy to a Port.....	180
Deleting an ACL Class .....	180
Deleting an ACL Policy .....	181
<b>SNMP .....</b>	<b>181</b>
SNMP General Settings.....	181
Configuring SNMP v1 & v2 Community Groups.....	185
Configuring SNMP v3 Users .....	186
Adding SNMP v3 Users to the switch.....	186
Deleting SNMP v3 Users from the switch.....	189
Create SNMPv3 Group and View.....	190
SNMP Configuration Using CLI Commands.....	192
Enabling SNMP and configuring general settings.....	192
Configuring SNMP Traps .....	192
Configuring SNMP v1 & v2 Community Groups .....	194
Adding SNMP v3 Users .....	194
Configuring a New SNMP Group .....	195
Create or Update a View Entry.....	195
<b>802.1x.....</b>	<b>197</b>
Configuring Radius from the GUI.....	197
Enabling Radius.....	197
Adding a Radius Server .....	198
Port Authentication.....	199
802.1x Configuration Using the CLI .....	200
View RADIUS Status .....	200
Enable RADIUS Globally .....	201
Configure RADIUS on Ports.....	201
Configure MAC-Based Authentication.....	202
<b>LLDP .....</b>	<b>202</b>
LLDP General Settings .....	202

---

Enable/Disable LLDP .....	203
Holdtime Multiplier .....	203
Global TLV Setting.....	203
LLDP Ports Settings .....	205
Enabling LLDP transmission for a specific Port .....	205
Enabling LLDP Reception for a specific Port.....	205
Enabling Notifications .....	205
LLDP Neighbors .....	207
LLDP Statistics .....	208
LLDP MED Network Policy .....	208
LLDP MED Location ID.....	210
LLDP MED Port Settings .....	212
LLDP Configuration Using CLI Commands.....	213
Enable/Disable LLDP .....	213
LLDP Holdtime Multiplier.....	213
LLDP Transmit Interval .....	214
Enable/Disable Global LLDP TLVs .....	214
Enabling LLDP Transmit on a Port.....	215
Enabling LLDP Receive on a Port.....	215
Enabling LLDP Notify.....	216
Enabling Transmission of the Management IP .....	216
Enabling Specific TLV's on a Port .....	216
Enabling LLDP MED TLV's on a Port.....	217
Set LLDP-MED location information.....	217
<b>Routing.....</b>	<b>218</b>
Static Route Configuration .....	218
Creating a Static Route .....	218
Routing Table .....	219
Route Map .....	220
Proxy ARP .....	220
Static Routing with CLI Commands .....	221
Create or Delete Static Route .....	221
Show Existing IP Routes.....	221
Create or Delete Access List.....	222
Configure Route Map.....	222
Enable Proxy ARP .....	223
VRRP .....	223
VRRP with CLI Commands.....	225
Enable or Disable VRRP .....	225
Enable or Disable Virtual MAC feature.....	226
Set the Virtual IP Address for the VRRP Session.....	226
Specify the Interface for Virtual Routing .....	226

Configure VRRP Router Priority .....	226
Enable/Disable Preempt Mode.....	227
Set the Advertisement Interval .....	227
Enable the VRRP Session .....	227
Configure Circuit Failover.....	227
<b>OSPF.....</b>	<b>227</b>
OSPF Configuration.....	228
Stub Area Configuration.....	229
NSSA Configuration.....	230
OSPF Network.....	231
OSPF Interface.....	232
OSPF Virtual Link .....	233
OSPF Redistribute .....	234
OSPF Area Range .....	235
OSPF Neighbor.....	236
OSPF Route .....	236
OSPF Configuration with CLI Commands .....	236
Enable or Disable OSPF .....	236
Show OSPF Configuration and Settings .....	236
Enable authentication for an OSPF area.....	237
Specify a cost for the default summary route .....	237
Configure a filter to advertise summary routes .....	237
Summarize OSPF routes at an area boundary.....	237
Set an area as a Not-So-Stubby-Area (NSSA).....	238
Configure the short-cutting mode of an area .....	238
Define an area as a stub area .....	238
Configure a link between two separated backbone areas .....	239
Control how OSPF calculates the default metric for the interface .....	239
Enable / disable RFC 2328 compatibility .....	239
Create a default external route into an OSPF routing domain .....	240
Set OSPF administrative distances .....	240
Configure a stub host entry belonging to a particular area .....	240
Limit number of Database Descriptors (DD) that can be processed concurrently .....	240
Set maximum number of OSPF areas.....	241
Specify and configure neighbor routers.....	241
Enable OSPF routing with a specified area .....	241
Set an OSPF Area Border Router (ABR) type .....	242
Specify a router ID for the OSPF process .....	242
Set maximum number of LSAs that can be supported .....	242
Suppress sending Hello packets .....	242
Redistribute routes into an OSPF routing table .....	242

Summarize or suppress external routes.....	243
Adjust route-calculation timers .....	243
Set OSPF authentication method on an interface.....	243
Specify OSPF authentication password for neighboring routers .....	243
Specify the cost of the link-state metric in a router-LSA .....	244
Turn on LSA database-filter .....	244
Set interval after which a neighbor is declared dead .....	244
Disable OSPF on an interface.....	245
Set Hello packet interval .....	245
Register an MD5 key for OSPF authentication.....	245
Set MTU size for OSPF to construct packets .....	245
Ignore MTU in DBD packets.....	245
Set the OSPF network type.....	246
Set designated router priority .....	246
Set time between retransmitting lost link state advertisements.....	246
Set the link state transmit delay .....	246
Configure a distribution list.....	247
<b>RIP.....</b>	<b>247</b>
RIP General Settings .....	247
RIP Port Settings .....	248
RIP Route .....	249
RIP Network.....	250
RIP Neighbor .....	250
Add or Delete RIP Passive Interface .....	251
RIP Redistribute.....	251
RIP Configuration with CLI Commands.....	252
Enable or Disable RIP.....	252
Enable RIP Routing on a Specific Network .....	252
Show RIP Routing Table.....	252
Define RIP Neighbor .....	252
Set Interface to Passive .....	252
RIP Default Metric.....	253
RIP Send Version .....	253
Redistribute.....	253
RIP Default Route .....	253
Define RIP Administrative Distance.....	254
Define RIP Timers.....	254
RIP Authentication .....	254
<b>Other Protocols.....</b>	<b>255</b>
GVRP .....	255
General Overview .....	255

Enabling the GVRP Protocol at the Global Level.....	256
Enabling the GVRP Protocol at the Port Level .....	257
GVRP Configuration Examples Using CLI Commands.....	258
IGMP Snooping .....	261
General Overview .....	261
Enabling the IGMP Snooping Modes .....	262
Configuring IGMP Snooping General properties .....	262
Configuring IGMP Passive Mode Specific properties .....	263
Configuring IGMP Querier Mode Specific properties .....	264
Configuring IGMP Unknown Multicast Forwarding .....	265
Monitoring Registered Multicast Groups .....	269
IGMP Configuration Examples Using CLI Commands.....	270
Network Time Protocol (NTP) .....	277
Setting RTC Time .....	277
Enabling NTP.....	278
Setting the NTP Server IP Address .....	278
Setting the Time Zone.....	278
Setting the Polling Period.....	278
Manually Syncing Time.....	278
Daylight Savings Time - Weekday Mode.....	279
Daylight Savings Time – Date Mode .....	280
Network Time Protocol Configuration Examples Using CLI Commands.....	281
GMRP.....	284
General Overview .....	284
GMRP Normal mode.....	284
GMRP Fixed mode .....	284
GMRP Forbidden mode .....	285
GMRP Forward All mode .....	285
GMRP Disabled mode .....	285
Enabling the GMRP Feature Globally on the Switch .....	285
Configuring the GMRP Feature Per Port.....	286
GMRP Configuration Examples Using CLI Commands .....	288
DHCP Server.....	290
General Overview .....	290
Configuring the DHCP Server .....	290
DHCP Configuration Examples Using CLI Commands.....	293
Configuring DHCPv6 Server .....	294
DHCPv6 Configuration Examples CLI Commands.....	295
Contact Information .....	297

# PREFACE

## Audience

This guide is designed for the person who installs, configures, deploys, and maintains the Ethernet network. This document assumes the reader has moderate hardware, computer, and Internet skills.

## Document Revision Level

This section provides a history of the revision changes to this document.

Revision	Document Version	Date	Description
A	Version 1	07/04/2019	Initial release for Firmware version 2.02.2
A	Version 2	08/05/2019	Modified PoE description
A	Version 3	08/20/2019	Corrected VLAN description and screenshots
A	Version 4	12/19/2019	Corrected Static trunking information
A	Version 5	04/28/2020	Changed spanning-tree guard loop to spanning-tree guard root
A	Version 6	09/24/2020	Added PoE Extend Mode information
B	Version 1	01/14/2021	Removed Redundancy Pairs from GUI and CLI
B	Version 2	04/13/2021	Added snmp-server group and view commands

## Applicable Models

EX78900, EX73900, EX77900, EX77964, EX83304

## Document Conventions

This guide uses the following conventions to draw your attention to certain information.

### Safety and Warnings

This guide uses the following symbols to draw your attention to certain information.

Symbol	Meaning	Description
	Note	Notes emphasize or supplement important points of the main text.
	Tip	Tips provide helpful information, guidelines, or suggestions for performing tasks more effectively.
	Warning	Warnings indicate that failure to take a specified action could result in damage to the device, or could result in serious bodily injury.
	Electric Shock Hazard	This symbol warns users of electric shock hazard. Failure to take appropriate precautions such as not opening or touching hazardous areas of the equipment could result in injury or death.

### Typographic Conventions

This guide also uses the following typographic conventions.

Convention	Description
<b>Bold</b>	Indicates text on a window, other than the window title, including menus, menu options, buttons, fields, and labels.
<i>Italic</i>	Indicates a variable, which is a placeholder for actual text provided by the user or system. Angled brackets (< >) are also used to indicate variables.
screen/code	Indicates text that is displayed on screen or entered by the user.
< > angled brackets	Indicates a variable, which is a placeholder for actual text provided by the user or system. Italic font is also used to indicate variables.
[ ] square brackets	Indicates optional values.
{ } braces	Indicates required or expected values.
vertical bar	Indicates that you have a choice between two or more options or arguments.

---

## COMPUTER SETUP

The end user's management computer may need to be reconfigured prior to connecting to the switch in order to access the switch's web interface through its default IP address (See [Default IP](#)).

## Management Methods and Protocols

There are several methods that can be used to manage the switch. This manual will show the details of configuring the switch using a web browser. Each section will be followed by the CLI (Command Line Interface) commands needed to achieve the same results as described in that section.

The methods available to manage the switch include:

- **SSH** - Secure Shell CLI that is accessible over TCP/IP networks which and is generally regarded as the most secure method of remotely accessing a device.
- **Telnet** - is like SSH in that it allows a CLI to be established across a TCP/IP network, but it does not encrypt the data stream. This type of connection requires a terminal, or a computer running a terminal emulation application (such as HyperTerminal or Putty).
- **HTTP** (Hypertext Transfer Protocol) is the most popular switch management protocol involving the use of a web browser.
- **RS-232** – The switch is equipped with a RS-232 serial port that can be used to access the switch's CLI. The Serial port is DCE DB9F. A straight through serial cable is used to connect to a typical computer serial port (Also requires terminal emulation application).

## Default IP

The switch's default IP address is 192.168.1.10. The management computer must be set up so that it is on the same network as the switch. For example, the IP address of the management computer can be set to 192.168.1.100 with a subnet mask of 255.255.255.0.

## Login Process and Default Credentials

Once a compatible IP address has been assigned to the management computer, the user is ready to log in to the switch. To log in, type the URL <http://192.168.1.10/> into the address field of the browser and hit return. The following will appear in the browser window (See [Figure 1](#))

- The Default Login is **root** (case sensitive)
- There is no password by default
- Enter the login name and click the Login button

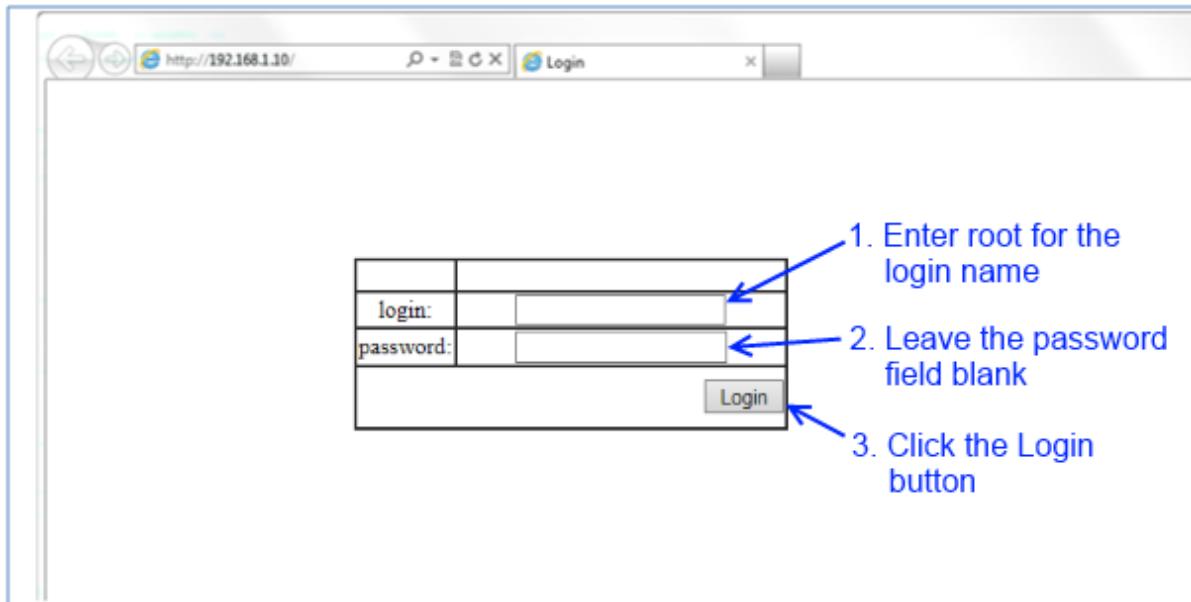


Figure 1: Login screen

# SETTING THE INITIAL IP ADDRESS

Once logged in the user can now configure the switch per the network requirements. The two major addressing options are:

- Simple IP addressing
- Multiple VLAN addressing (See [Add an IP to the Management VLAN on page 162](#)).

## Simple IP Addressing

A new IP address can now be assigned to the switch. From the System Information screen, go to the left hand navigation menu.

1. Click on the + next to **System**
2. Click on **IP address**
3. Enter the desired IP address and subnet mask in the **IP Address/Subnet Mask** fields associated with VLAN 1
4. Click the **Apply & Save** button (See [Figure 2](#))

The screenshot shows the Management Switch configuration interface. On the left, there is a navigation tree with the following structure:

- Management Switch
- System
  - [System Information](#)
  - [System Name/Password](#)
  - IP Address**
  - [Management Interface](#)
  - [Save Configuration](#)
  - [Firmware Upgrade](#)
  - [Reboot](#)
  - [Logout](#)
  - [User Account](#)
  - [User Privilege](#)
- Diagnostics
- Port
- Switching
- Trunking
- STP/Ring
- VLAN

The main right panel displays two tables for IP address assignment:

VLAN ID	IP Address	IP Subnet Mask
1	192.168.1.10	255.255.255.0

IPv6	
	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
<input type="button" value="Submit"/>	

VLAN ID	IPv6 Address	IPv6 Prefix Length
1	fe80::2e0:b3ff:fe26:9e20	64

**Figure 2: Assigning an IP address**

# CLI COMMAND USAGE

This chapter describes accessing the switch by using Telnet, SSH, or serial ports to configure the switch, navigating the Command Line Interface (CLI), typing keyboard shortcuts, and moving between the levels. This chapter assumes the user has a working understanding of Telnet, SSH and Terminal emulation applications.



**Note:** For a serial port connection use a standard DB9F to DB9M Modem Cable. The default Serial port parameters are Baud rate: 115,200bps, Data bits: 8, Parity: none, Stop bit: 1, Flow control: none.

## Navigating the CLI Hierarchy

The CLI is organized into a hierarchy of command modes. The basic modes are User exec mode, Privileged exec mode, and Global configuration mode. There are also other modes, specific to certain configurations. Each mode has its own group of commands for a specific purpose. Below are the CLI commands needed to enter a specific mode:

```
switch_a> ← User exec mode
switch_a>enable
switch_a# ← Privileged exec mode
switch_a#configure terminal
switch_a(config) ← Global configuration mode
switch_a(config) spanning-tree mst configuration
switch_a(config-mst)# ← MSTP configuration mode

switch_a(config)#line console 0
switch_a(config-line) ← Line configuration mode

switch_a(config)# interface fe1
switch_a(config-if)# ← Interface configuration mode

switch_a(config)#vlan database
switch_a(config-vlan)# ← VLAN database configuration mode
```

## CLI Keyboard Shortcuts

Ctrl + a: place cursor at the beginning of a line  
Ctrl + b: backspace one character  
Ctrl + d: delete one character  
Ctrl + e: place cursor at the end of the line  
Ctrl + f: move cursor forward one character  
Ctrl + k: delete from the current position to the end of the line  
Ctrl + l: redraw the command line  
Ctrl + n: display the next line in the history  
Ctrl + p: display the previous line in the history  
Ctrl + u: delete entire line and place cursor at start of prompt  
Ctrl + w: delete one word back

## CLI Command modes

Throughout this manual, each section that has CLI commands relevant to that section requires that the CLI be in a specific configuration mode. This section shows the main CLI commands to needed to enter a specific mode.

### Global Configuration Mode

To set the switch to Global Configuration Mode, run the following commands from the CLI:

1. enable
2. configure terminal

Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config) #
```

### MSTP Configuration Mode

To set the switch to General MSTP configuration mode, run the following commands from the CLI:

1. enable
2. configure terminal

### 3. spanning-tree mst configuration

Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#spanning-tree mst configuration
switch_a(config-mst) #
```

## Interface Configuration Mode

Interface mode on the switch is used to configure the Ethernet ports and VLAN information.  
Valid interfaces are:

- **fe<port #>** - 100mb ports use fe followed by the port number. Example: **fe1**
- **ge<port #>** - Gigabit ports use ge followed by the port number. Example: **ge1**
- **vlan1.<vlan#>** - VLAN's use vlan. Followed by the VLAN ID. Example: **vlan1.10**

Example 1 configures 100mb port 1

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#interface fe1
switch_a(config-if)
```

Example 2 configures VLAN ID 9

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#interface vlan1.9
switch_a(config-if)
```

## VLAN Database Configuration Mode

VLAN Database Configuration Mode on the switch is used to configure the VLAN settings.

Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#vlan database
switch_a(config-vlan) #
```

## Router Configuration Mode

Used for RIP and OSPF configuration

Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#router rip
switch_a(config-router)#
switch_a>
```

## Saving a Configuration from the CLI

Example:

```
switch_a>enable
switch_a#write memory
Building configuration.....
[OK]
switch_a>
```


# SYSTEM MENU (WEB INTERFACE)

## System Information

The System information link on the Left menu of the Web Configuration page takes you to a page that shows the following (see [Figure 3](#)):

- **System Name**
  - The System name is typically used by network administrators. If SNMP is enabled on the switch, the system name can be found using MIB II (RFC1213) in the sysName property.
- **Firmware Version**
  - If SNMP is enabled on the switch, the Firmware version can be found using MIB II in the sysDesc property
- **System Time**
  - System time can be changed using [NTP](#)
- **MAC Address**
  - The hardware (MAC) address of the Management interface
- **Default Gateway**
  - The IP address of your networks Gateway (Typically a Router on your network)

- **DNS Server**
  - The Dynamic Name Server (DNS) for your network
- **System Location**
  - SNMP location information
- **VLAN ID**
  - One or more listings depending on the number of VLANs defined on the switch
  - Lists VLAN ID, IP address, and subnet mask of the VLAN Interface(s)
- **Current User Information**
  - Lists the current the currently logged in user and their user privileges

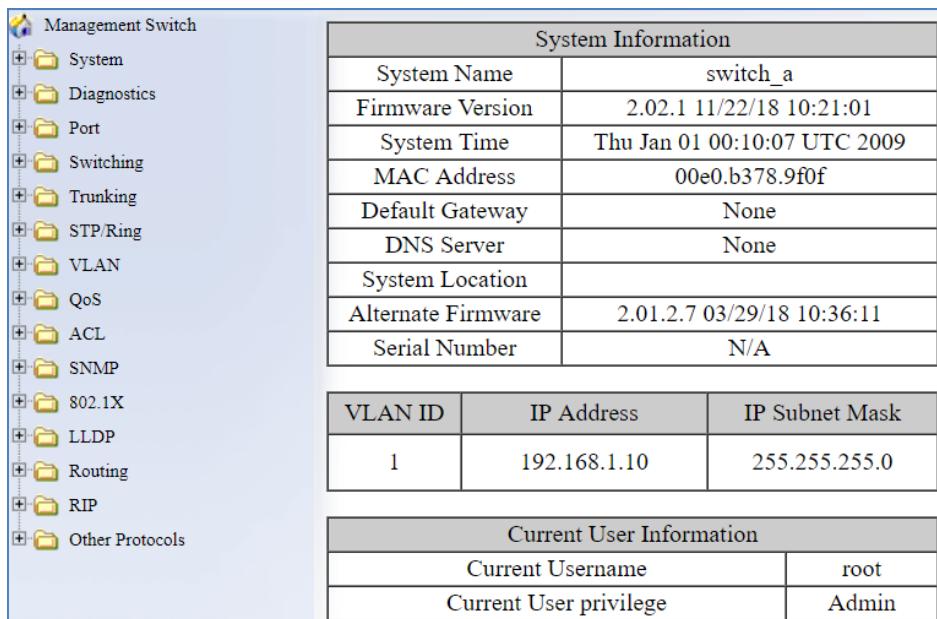

The screenshot shows the Management Switch interface. On the left is a navigation tree with the following items:

- Management Switch
- System
- Diagnostics
- Port
- Switching
- Trunking
- STP/Ring
- VLAN
- QoS
- ACL
- SNMP
- 802.1X
- LLDP
- Routing
- RIP
- Other Protocols

The main area displays three tables:

System Information	
System Name	switch_a
Firmware Version	2.02.1 11/22/18 10:21:01
System Time	Thu Jan 01 00:10:07 UTC 2009
MAC Address	00e0.b378.9f0f
Default Gateway	None
DNS Server	None
System Location	
Alternate Firmware	2.01.2.7 03/29/18 10:36:11
Serial Number	N/A

VLAN ID	IP Address	IP Subnet Mask
1	192.168.1.10	255.255.255.0

Current User Information	
Current Username	root
Current User privilege	Admin

**Figure 3: System Information**

## System Name/Password


The System name is typically used by network administrators to make it easier to document a networks infrastructure and locate equipment on large networks. If SNMP is enabled on

the switch, the system name can be found using MIB II (RFC1213) in the sysName property. To change the system name:

1. Click on the + next to **System**.
2. Click on **System Name/Password** (see [Figure 4](#)).
3. Use your mouse to place the cursor in the **System Name** text box.
4. Replace the existing name with the name you want to assign to the switch.
5. Click on the **Update Setting** button.

By default there is no password assigned to the switch. To add or change a password:

1. Click on the + next to **System**.
2. Click on **System Name/Password** (see [Figure 4](#)).
3. Use your mouse to place the cursor in the **Password** text box.
4. Enter the new password.
5. Retype the password in the **Retype Password** text box.
6. Click on the **Update Setting** button below the **Retype Password** text box.

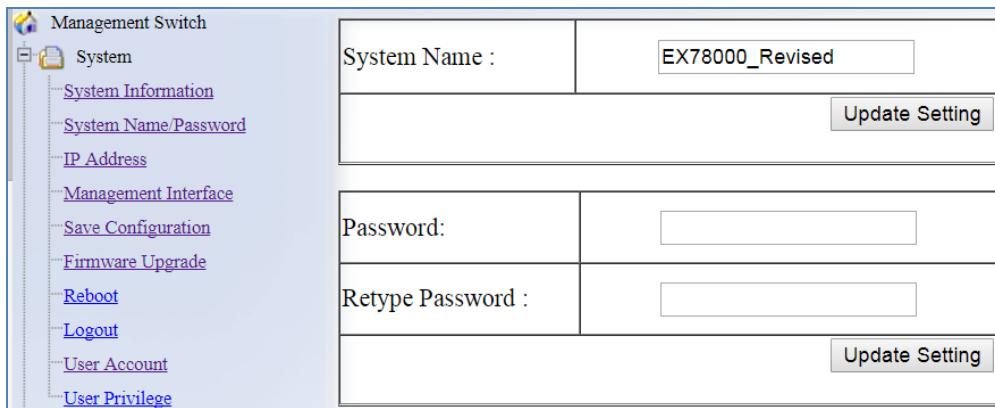

**Figure 4: System Name/Password**

**NOTE:** To reboot the switch, press and hold the reset button for less than 10 seconds.

To reset the switch to the default password, press and hold the reset button for more than 10 seconds.

## System Name/Password using the CLI

For more information on CLI command usage see [CLI Command Usage](#).

## **System Name**

To set the system name on a switch, use the following CLI commands (Hostname must not contain spaces. Use the dash and underscore characters):

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
hostname <name>
no hostname
```

Usage Example 1: Setting a Hostname

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#hostname switch_a
switch_a(config)#write memory
```

Usage Example 2: Removing a Hostname

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#no hostname
switch_a(config)#write memory
```

## **Password**

To enable a password on a switch, use the following CLI commands:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
enable password <password>
```

Usage Example

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#enable password mypassword
switch_a(config)#write memory
```

# Show Switch Model/Serial Number using the CLI

For more information on CLI command usage see [CLI Command Usage](#).

## **System Name**

To see the model number of a switch, use the following CLI command:

CLI Command Mode: **User Exec Mode or Privileged Exec Mode**

CLI Command Syntax:

**show integrate product series**

Usage Example 1:

```
switch_a>enable
switch_a# show integrate product series
EX78000 series
```

## **Serial Number**

To see the serial number of a switch, use the following CLI command:

CLI Command Mode: **User Exec Mode or Privileged Exec Mode**

CLI Command Syntax:

**show serial number**

# **IP Address**

To navigate to the **IP Address** page:

1. Click on the + next to **System**
2. Click on **IP Address** (see Figure 5)

There are 4 settings on this page:

**Static IP** (see Simple IP Addressing)

### **DHCP Client**

Use this to enable or disable DHCP on a VLAN.

To enable the DHCP Client:

1. Use the drop down box to enable the DHCP client on a particular VLAN
2. Click the **Submit** Button

### **Default Gateway**

If DHCP is enabled, the gateway setting is controlled by the DHCP server. The setting will be grayed out and the gateway supplied by the DHCP server will be displayed. The default gateway setting can be used when using a Static IP address.

To enable the default gateway:

1. Use the dropdown box to enable the default gateway.
2. Type in the default gateway in the **Default Gateway** text box.
3. Click on the **Apply & Save** button.

## DNS Server

If DHCP is enabled, the DNS Server setting is controlled by the DHCP server. The setting will be grayed out and the DNS Server supplied by the DHCP server will be displayed. The DNS Server setting can be used when using a Static IP address. To enable the DNS Server:

1. Use the dropdown box to enable the DNS Server.
2. Type in the default gateway in the **Default Gateway** text box.
3. Click on the **Submit** button.



Note: After making changes to settings in the IP address section, the configuration needs to be saved using the **System/Save configuration** page (See Save Configuration)

Management Switch

System

- [System Information](#)
- [System Name/Password](#)
- [IP Address](#)
- [Management Interface](#)
- [Save Configuration](#)
- [Firmware Upgrade](#)
- [Reboot](#)
- [Logout](#)
- [User Account](#)
- [User Privilege](#)

Static IP:

VLAN ID	IP Address	IP Subnet Mask
1	192.168.1.10	255.255.255.0
Default Gateway	Disable ▾	

[Apply & Save](#)

DHCP Client:

DHCP Client	Disable ▾	
VLAN ID	IP Address	IP Subnet Mask
DHCP Disabled		

[Submit](#)

DNS Server	Disable ▾

[Submit](#)

MAC Address	00e0.b378.9f0f

Figure 5: IP Address

## IP Address - Configuration using the CLI

For more information on CLI command usage see [CLI Command Usage](#).

### Set the IP Address

CLI Command Mode: **Global Configuration** and **Interface Configuration**

CLI Command Syntax:

```
ip address <A.B.C.D/M> (IP Address/Mask e.g. 10.0.0.1/8)
no ip address
```



**Note:** The Subnet Mask is defined as a **Network Prefix** instead of the common **dotted decimal** (ex. 255.255.255.0).

The most commonly used Network Prefixes are:

- /8 – Known as Class A. Also known in dotted decimal as 255.0.0.0
- /16– Known as Class B. Also known in dotted decimal as 255.255.0.0
- /24– Known as Class C. Also known in dotted decimal as 255.255.255.0

Usage Example 1: Assigning an IP address

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#ip address 192.168.1.1/24
switch_a(config)#q
switch_a#write memory
Building configuration.....
[OK]
switch_a#q
switch_a#
```

Usage Example 2: Removing an IP address

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#no ip address
switch_a(config)#q
switch_a#write memory
Building configuration.....
[OK]
switch_a#q
switch_a#
```

## Set the Default Gateway

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:  
**ip default-gateway <A.B.C.D>**  
**no ip default gateway**

Usage Example 1: Setting the Gateway

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#ip default-gateway 192.168.1.254
switch_a(config)#q
switch_a#write memory
Building configuration.....
[OK]
switch_a#q
```

```
switch_a#
```

#### Usage Example 2: Removing the Gateway

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#no ip default-gateway
switch_a(config)#q
switch_a#write memory
Building configuration.....
[OK]
switch_a#q
switch_a#
```

### Set the Domain Name Server (DNS)

#### CLI Command Mode: Global Configuration Mode

CLI Command Syntax:

```
ip dns <A.B.C.D>
no ip dns
```

#### Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#ip dns 192.168.1.253
switch_a(config)#q
switch_a#write memory
Building configuration.....
[OK]
switch_a#q
switch_a#
```

#### Usage Example 2: Remove a DNS IP Address

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#no ip dns
switch_a(config)#q
switch_a#write memory
Building configuration.....
[OK]
switch_a#q
switch_a#
```

## **Enable/Disable DHCP Client on a VLAN**

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

```
get ip dhcp enable  
no get ip dhcp enable
```

Usage Example – Enable DHCP Client on VLAN2:

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config)#interface vlan1.2  
switch_a(config-if)#get ip dhcp enable  
switch_a(config-if)#q  
switch_a(config)#q  
switch_a#write memory  
Building configuration.....  
[OK]  
switch_a#q  
switch_a#
```

## **Enable/Disable Static IP on a VLAN**

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

```
ip address <A.B.C.D>  
no ip address <A.B.C.D>
```

Usage Example 1 – Enable Static IP on VLAN2:

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config)#interface vlan1.2  
switch_a(config-if)#ip address 192.168.1.11  
switch_a(config-if)#q  
switch_a(config)#q  
switch_a#write memory  
Building configuration.....  
[OK]  
switch_a#q  
switch_a#
```

Usage Example 2 – Disable Static IP on VLAN2:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#interface vlan1.2
switch_a(config-if)#no ip address 192.168.1.11
switch_a(config-if)#q
switch_a(config)#q
switch_a#write memory
Building configuration.....
[OK]
switch_a#q
switch_a#
```

## Set the IPv6 Address of an Interface

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:  
**ipv6 address X:X::X:X/M**  
**no ipv6 address (X:X::X:X/M |)**

Usage Example 1 – Set IPv6 address on VLAN1:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#interface vlan1.1
switch_a(config-if)#ipv6 address 3ffe:506::1/48
switch_a(config-if)#q
switch_a(config)#q
switch_a#write memory
```

## Set the IPv6 Address through DHCP

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:  
**get ipv6 dhcpcv6 enable**  
**no get ipv6 dhcpcv6 enable**

Usage Example –

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#interface vlan1.2
switch_a(config-if)#get ipv6 dhcpcv6 enable
switch_a(config-if)#q
switch_a(config)#q
```

```
switch_a#write memory
```

## Enable/Disable DHCP Server for IPv6

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

```
dhcpv6-server enable
```

```
no dhcpv6-server enable
```

Usage Example –

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#interface vlan1.2
switch_a(config-if)#dhcpv6-server enable
switch_a(config-if)#q
switch_a(config)#q
switch_a#write memory
```

## Configure DHCPv6 server settings

CLI Command Mode: **Configuration Mode**

CLI Command Syntax:

```
dhcpv6-server lease-time <0-864000>
```

```
dhcpv6-server range <A:B :C:D>
```

Usage Example –

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#dhcpv6-server lease-time 5000
switch_a(config)#q
switch_a#write memory
```

## IPv6 Address

To navigate to the **IPv6 Address** page:

1. Click on the + next to **System**
2. Click on **IPv6 Address**

Use the drop-down menu to select the VLAN ID. Then select a radio button **Static IP** or **DHCP**. If Static IP is selected, enter the IPv6 address and prefix length in the corresponding field below. Then click **Apply & Save**.

Add IPv6 Address		
VLAN ID	-- ▾	
<input type="radio"/> Static IP <input checked="" type="radio"/> DHCP		
Address/Prefix Length		
<b>Apply &amp; Save</b>		
IPv6 Address List		
VLAN ID	IPv6 address	Select
1	fe80::2e0:b3ff:fe78:9f0f/64	<input checked="" type="radio"/>
		<b>Delete</b>

**Figure 6: Set IPv6 address**

## IP Address - Configuration using the CLI

### Set the IPv6 Address

CLI Command Mode: **Interface Configuration**

CLI Command Syntax:

```
ipv6 address < X:X::X:X/M>
no ipv6 address
```

### Configure IPv6 Neighbor Discovery

CLI Command Mode: **Interface Configuration**

CLI Command Syntax:

```
ipv6 nd managed-config-flag
ipv6 nd other-config-flag
ipv6 nd prefix
ipv6 nd ra-interval
ipv6 nd ra-lifetime
ipv6 nd reachable-time
ipv6 nd suppress-ra
```

## Management Interface

To navigate to the **Management Interface** page:

1. Click on the + next to **System**
2. Click on **Management Interface**

The Management Interface configuration page has three settings that allow the user to configure the methods available to manage the switch.

## HTTPS

HTTPS (Hypertext Transfer Protocol Secure) allows the user to determine what method, if any, is used to configure the switch. The default is unencrypted HTTP (see [Figure 7](#)).

To disable the Web interface:

1. Uncheck **Http** and **Https**.
2. Click on the **Update setting** button.



Warning! Once the Submit button is pressed, the Web console will no longer function. As a safety precaution, the configuration is not saved by default. Rebooting the switch will restore the Web Console. To save the configuration, connect using the new IP address.

To enable the Web Interface:

1. Check **HTTP**, **HTTPS** or both
2. Click on the **Update Setting** button.
3. Save the Configuration (see [Save Configuration](#))

## Telnet

Telnet is a network protocol that allows a remote computer to log into the to access its CLI (Command Line Interface). The CLI can be access using Telnet, SSH and the serial port on the switch. The secure method of accessing the CLI over a network is SSH.

To enable or disable Telnet:


1. Click the **Enable** or **Disable** radio button in the Telnet section on the Management Interface page (see [Figure 7](#) below)
2. Click on the **Update Setting** button
3. Save the Configuration (see [Save Configuration](#))

## SSH (Secure Shell)

Secure Shell or SSH is a network protocol that allows data to be exchanged using a secure channel between two networked devices such as a computer and the switch. SSH is disabled by default on the switch.

To enable or disable SSH:

1. Click the **Enable** or **Disable** radio button in the SSH section on the Management Interface page (see [Figure 7](#))
2. Click on the **Update Setting** button
3. Save the Configuration (see [Save Configuration](#))

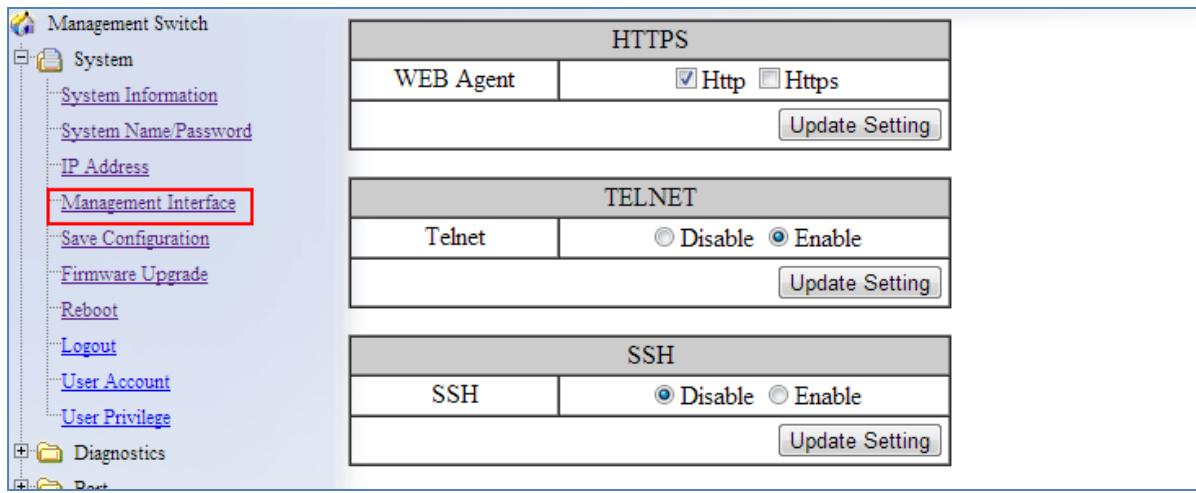

**Figure 7: Management Interface**

## Management Interface Configuration using the CLI

### Enabling/Disabling Telnet

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
ip telnet
no ip telnet
```

Usage Example 1: Enabling Telnet:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#ip telnet
switch_a(config)#q
```

```
switch_a#write memory
Building configuration.....
[OK]
switch_a#q
switch_a#
```

#### Usage Example 2: Disabling Telnet:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#no ip telnet
switch_a(config)#q
switch_a#write memory
Building configuration.....
[OK]
switch_a#q
```



**Note:** If using Telnet to run the CLI Commands that disable Telnet you will lose your connection. To Disable Telnet using the CLI, use SSH or the RS-232 Console port on the switch.

## Enabling/Disabling SSH

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
ip ssh
no ip ssh
```

#### Usage Example 1: Enabling SSH:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#ip ssh
switch_a(config)#q
switch_a#write memory
Building configuration.....
[OK]
switch_a#q
switch_a#
```

#### Usage Example 2: Disabling SSH:

```
switch_a>enable
```

```
switch_a#configure terminal
switch_a(config)#no ip ssh
switch_a(config)#q
switch_a#write memory
Building configuration.....
[OK]
switch_a#q
```



**Note:** If using SSH to run the CLI Commands that disable SSH you will lose your connection. To Disable SSH using the CLI, use Telnet or the RS232 Console port on the switch.

## Enabling/Disabling HTTP and/or HTTPS

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
ip http server
ip http secure-server
no ip http server
no ip http secure-server
```

### Usage Example 1: Enabling HTTP:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#ip http server
switch_a(config)#q
switch_a#write memory
Building configuration.....
[OK]
switch_a#q
switch_a#
```

### Usage Example 2: Disabling HTTP:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#no ip http server
switch_a(config)#q
switch_a#write memory
Building configuration.....
```

```
[OK]  
switch_a#q
```

#### Usage Example 3: Enabling HTTPS:

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config)#ip http secure-server  
switch_a(config)#q  
switch_a#write memory  
Building configuration.....  
[OK]  
switch_a#q  
switch_a#
```

#### Usage Example 4: Disabling HTTPS:

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config)#no ip http secure-server  
switch_a(config)#q  
switch_a#write memory  
Building configuration.....  
[OK]  
switch_a#q
```

## Save Configuration Page

To navigate to the **Save Configuration** page:

1. Click on the + next to **System**
2. Click on **Save Configuration**

The Save Configuration page contains the following configuration functions (see [Figure 8](#)):

### Save Configuration

To save the currently running configuration to the flash memory on the switch:

1. Click the **Save Configuration** button
2. If the save is successful you will see the message:  
Building configuration.... [OK]

## Load Configuration

This function is used to load a previously saved configuration. Backing up and loading a configuration is achieved using a TFTP server.

To load a configuration:

1. Enter the IP address of your TFTP server in the **TFTP Server** text box
2. Enter the name of the configuration file in the **FILE** text box
3. Click on the **Backup** button
4. If the file is successfully loaded the following message will be shown:  
Success! System reboot is required!

## Backup Configuration

This function is used to back up the current configuration of the switch. Backing up the configuration is achieved using a TFTP server such as TFTPD32.

To back up a configuration:

1. Enter the IP address of your TFTP server in the **TFTP Server** text box
2. Enter the name of the configuration file in the **FILE** text box
3. Click on the **Backup** button
4. If the backup is successful the following message will be shown:  
`tftp <filename> to ip <ip address> success!!`

## Restore Default

To restore the switch to factory defaults:

1. Click on the **Restore Default** button.

## Auto Save


The Auto Save function is used to set the switch to automatically save the configuration to flash. If the saved configuration is the same as the running configuration then a save is not made. The Auto Save interval is used to determine how often the running configuration is checked for changes.

To set the Auto Save function:

1. Click the dropdown box next to **Auto Save**.
2. Set the Auto Save interval (5~65535 sec)



Note: If a Firewall is running on the PC that is running the TFTP server, it may need to be temporarily disabled.

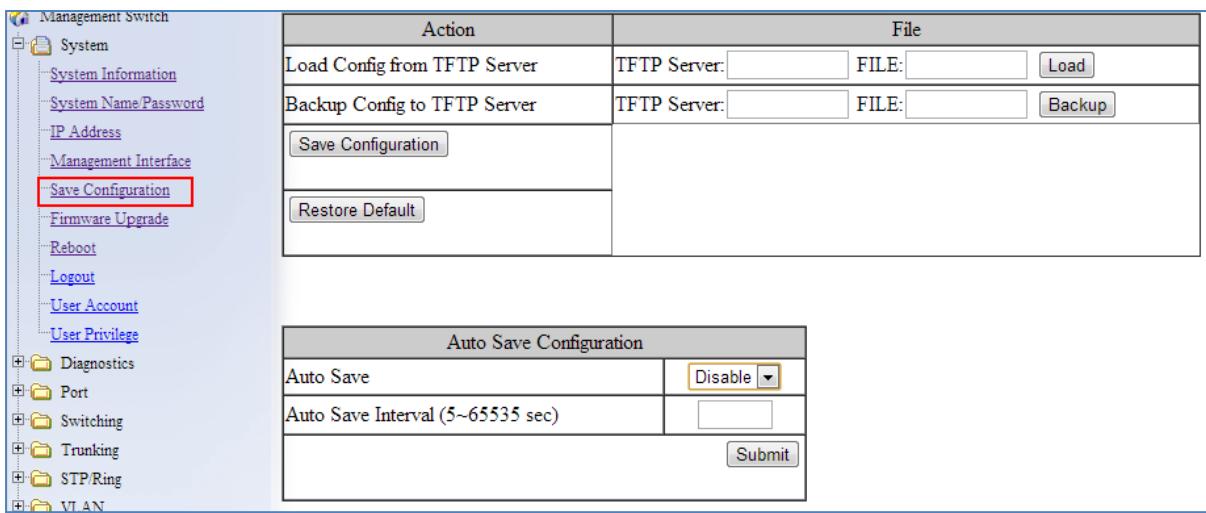

**Figure 8: Save Configuration Page**

## Saving and Loading Configurations Using EB-232

The EB-232 dongle (sold separately) can save and load configuration files for EtherWAN managed switches. This improves maintenance efficiency, and allows for a failed switch to be quickly replaced with a new one running the same configuration. To use, simply plug the EB-232 into the switch's RS-232 serial interface. The various functions are described below.

### Enable / Disable Automatic Restore

When the Restore function is enabled, the configuration currently saved on the EB-232 will automatically be loaded onto the switch when the EB-232 is connected to the switch's serial (RS-232) port and the switch is rebooted or power cycled. This function is enabled by default.

### Save switch configuration to EB-232

By selecting this options and clicking Submit, the switch's configuration settings will be saved to the EB-232. Note that the data to be backed up will be the saved configuration on the switch regardless of what is currently running. When the save operation is complete, the Power LED will flash momentarily, and then both LEDs will light up for a few seconds. When only the green Power LED is lit, the EB-232 can be operated further on the same switch or removed.

### Load switch configuration from EB-232

This operation will load configuration settings from the EB-232 to the switch. When the transfer is complete, the switch will reboot with the new settings in effect. Wait at least 3 minutes for the switch to fully reboot, then refresh the browser window (you will have to log

into the web interface again). Note that the configuration loaded onto the switch includes the switch name. If you are using a specific naming convention, you will need to rename the switch and save changes.

### **Save configuration from TFTP server to EB-232**

Use this feature to transfer switch configuration data from a TFTP server to the EB-232. Enter the TFTP server IP address and file name in the fields provided, and click Submit. When the transfer is complete, the Power LED will flash momentarily, and then both LEDs will light up for a few seconds.

### **Delete configuration data on EB-232**

This option will erase all data from the EB-232. Data erased from the dongle in this way cannot be recovered.

### **Compare configuration data on EB-232 to switch**

This feature will compare the configuration data on the switch with the data stored on the EB-232, notifying the user if the data differ or are identical. This allows the administrator to quickly assess if a switch is running a specific configuration.

### **EB-232 Firmware upgrade**

Enter TFTP server IP address and file name, then click “Submit.” When the EB-232 firmware has been upgraded, the Power LED will flash momentarily, and then both LEDs will light up for a few seconds.

### **Show firmware version on EB-232**

Displays the current firmware version running on the EB-232 (not on the switch).

**EB-232 Functionality**

<input type="radio"/> Restore function:	<input checked="" type="checkbox"/> Enable <input type="button" value="▼"/>
<input type="radio"/> Save switch configuration to EB-232	
<input type="radio"/> Load switch configuration from EB-232	
<input type="radio"/> Save configuration from TFTP server to EB-232	TFTP Server: <input type="text"/> File name: <input type="text"/>
<input type="radio"/> Delete configuration data on EB-232	
<input type="radio"/> Compare configuration data on EB-232 to switch	
<input type="radio"/> EB-232 Firmware upgrade	TFTP Server: <input type="text"/> File name: <input type="text"/>
<input type="radio"/> Show firmware version on EB-232	

Figure 9: EB-232 Dongle Functions

## Save Configuration Page using the CLI

For more information on CLI command usage see [CLI Command Usage](#).

### Saving a Configuration

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

**write memory**

#### Usage Example 1: Saving a Configuration

```
switch_a>enable
switch_a#write memory
Building configuration.....
[OK]
switch_a#q
switch_a#
```

## Restore Default Settings

CLI Command Mode: **Privileged Exec Mode**

CLI Command Syntax:  
**restore default**

### Usage Example 1: Restoring Defaults

```
switch_a>enable
switch_a#restore default
switch_a#q
switch_a#
```

## Load Configuration from a TFTP Server

CLI Command Mode: **Privileged Exec Mode**

CLI Command Syntax:  
**install config-file <tftpserver\_ipaddress> <filename>**

### Usage Example: Loading a Configuration

```
switch_a>enable
switch_a#install config-file 192.168.1.100 file_name.txt
switch_a#q
switch_a#
```

## Save Configuration to a TFTP Server

CLI Command Mode: **Privileged Exec Mode**

CLI Command Syntax:  
**write config-file <tftpserver\_ipaddress> <filename>**

### Usage Example: Saving a Configuration

```
switch_a>enable
switch_a#write config-file 192.168.1.100 flash.tgz
switch_a#q
switch_a>
```

## Auto Save Configuration

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
service auto-config enable  
no service auto-config enable  
service auto-config interval <number>
```

Usage Example 1: Enabling Auto Save and setting the interval

```
switch_a>enable  
switch_a#service auto-config enable  
switch_a#service auto-config interval 10  
switch_a#q  
switch_a>
```

Usage Example 2: Disabling Auto Save

```
switch_a>enable  
switch_a#no service auto-config enable  
switch_a#q  
switch_a>
```

## Firmware Upgrade

To navigate to the **Firmware Upgrade** page:

1. Click on the **+** next to **System**
2. Click on **Firmware Upgrade**

To upgrade the firmware on the switch, a TFTP server is required. The firmware file is in a .TGZ or .IMG format. This is a compressed file; however, it should not be decompressed before updating the switch.

To update the firmware on the switch (see [Figure 10](#)):

1. Copy the firmware file to the correct directory for your TFTP server. The correct directory depends on your TFTP server settings
2. Enter the filename of the firmware in the **Filename** text box.
3. Enter the IP Address of your TFTP server in the **TFTP Server IP** text box.
4. Click on the **Upgrade** button.
5. During the firmware upgrade you will see the following messages. Do not reboot or unplug the switch until the final message is received.
  - a. Downloading now, please wait...

- b. tftp <filename>.img from ip <ip address> success!!  
Install now. This may take several minutes, please wait...
- c. Firmware upgrade success!



Note: If a Firewall is running on the PC that is running the TFTP server it may need to be temporarily disabled.

Firmware Version	2.01.2.7 03/29/18 10:36:11
Filename	<input type="text"/>
TFTP Server IP	<input type="text"/>
<input type="button" value="Upgrade"/>	

**Figure 10: Firmware Upgrade Page**

## Firmware Update using the CLI

CLI Command Mode: **Privileged Exec Mode**

CLI Command Syntax:

**install image <tftpserver\_ipaddress> <filename>**

Usage Example:

```
switch_a>enable
switch_a#install image 192.168.1.100 flash.tgz
switch_a#q
switch_a#
```



Note: Depending on the firmware being loaded, the extension may not be .tgz. The Switch does not use the extension to validate firmware.

## Booting From Alternate (Backup) Firmware

Under certain circumstances, such as when there is a loss of power during an upgrade, the firmware build on the switch can become unstable. To prevent the switch from becoming

unbootable in this situation, there are two firmware images stored on the switch: primary and backup. If the primary firmware image becomes unstable, the switch will detect it automatically and boot from the backup image on the next boot.

You can also manually boot from the backup firmware image. To do so, follow these steps:

1. Connect to the switch's RS-232 port with a terminal emulator.
2. Power cycle the switch (turn the power off and then on).
3. While the switch is rebooting, hold down **Ctrl + C**. This will cause the switch to enter CFE mode. The prompt should look like this:

```
CFE_1.5>
```

4. Use the command **boot\_image0** and **boot\_image1** to manually boot from the primary and alternate firmware images respectively. Future boots will be from the image selected with this command.

## Reboot

To navigate to the **Reboot** page:

1. Click on the **+** next to **System**
2. Click on **Reboot**

To reboot the switch:

1. Click on the **Reboot** button.
2. Click OK on the popup message.

## Reboot using the CLI

CLI Command Mode: **Privileged Exec Mode**

CLI Command Syntax:

**reload**

Usage Example:

```
switch_a>enable
switch_a#reload
Reboot now, please wait...
```

## Logout

To logout of the Web Configuration Console:

1. Click on the + next to **System**
2. Click on **Logout**

## Logout from the CLI

CLI Command Mode: **User Exec mode or Privileged Exec Mode**

CLI Command Syntax:

**logout**

## User Account Page

To navigate to the **User Account** page:

1. Click on the + next to **System**
2. Click on **User Account**

From the **User Account** page, multiple users can be setup with different access privileges to the switch. There are two modes that can be used, **Single-User** or **Multi-User**.


### Changing the User Mode

To set the user mode (see [Figure 11](#)):

1. Select **Single-User** or **Multi-User** in the dropdown box in the Multi-User Mode section.
2. Click on the **Update Setting** button.
3. Click OK on the Popup message that appears.



Note: Changing the user mode saves the configuration and reboots the switch.

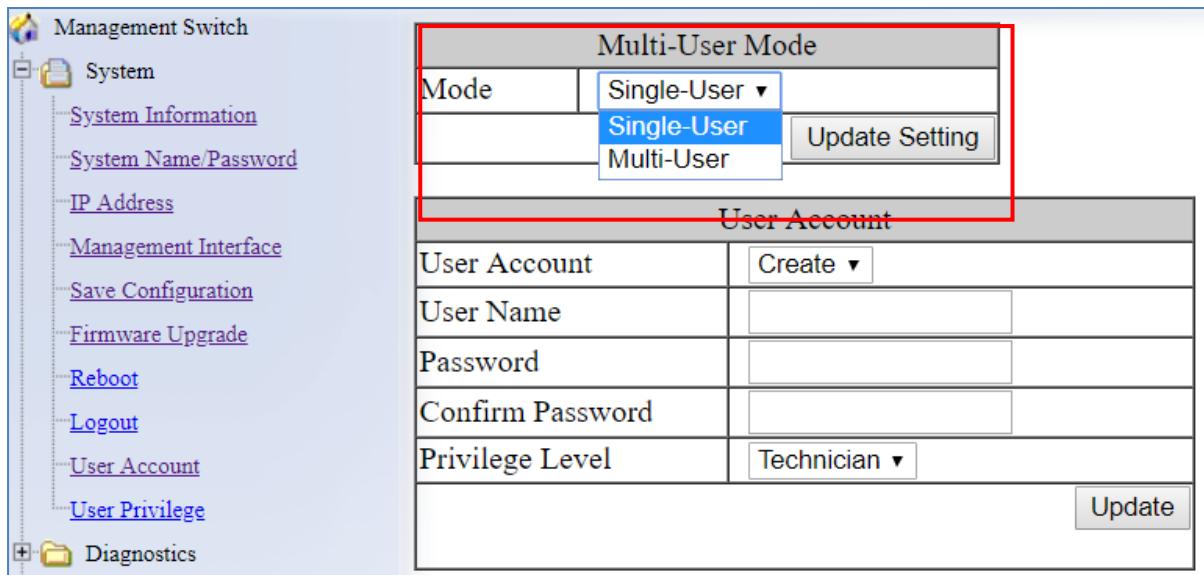


**Figure 11: User Mode**

## Creating a New User

To create a new user (see [Figure 12](#)):

1. Choose the **Create** option from the dropdown list next to the **User Account** row heading.
2. Enter a User Name (case sensitive) for the new user in the **User Name** text box.
3. Enter a Password for the new user in the **Password** text box.
4. Re-enter the Password in the **Confirm Password** text box.
5. Select a Privilege Level from the dropdown list next to the **Privilege Level** row heading. For more information on Privilege levels see the [User Privilege Configuration](#).
6. Click on the **Update** button.
7. Save the configuration (See the [Save Configuration Page](#))

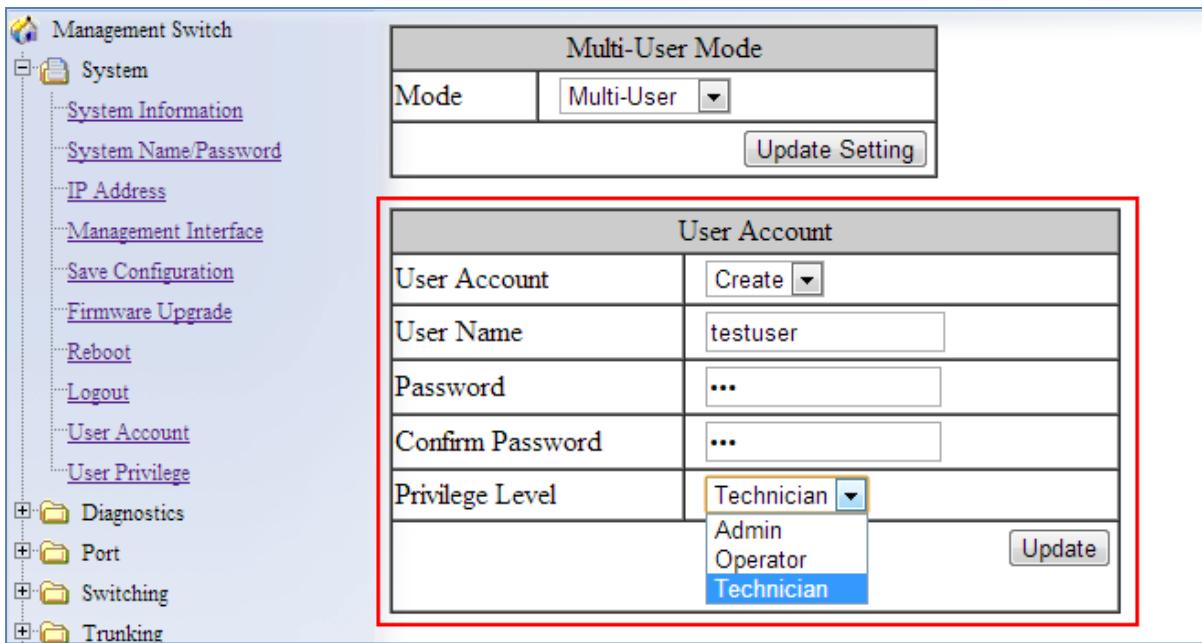

**Figure 12: Creating Users**

## Changing an Existing User Account

To make modifications to an existing user account:

1. Choose an existing user from the dropdown list next to the **User Account** row heading (see [Figure 13](#)).
2. Change the password and/or access level following the steps in [Creating a New User](#).
3. To delete an existing user, select the user as in step 1 and then click on the **Delete** button (see [Figure 14](#)).

User Account	
User Account	<input type="text" value="testuser"/> <input type="button" value="▼"/>
User Name	<input type="text" value="Create User"/> <input type="button" value="testuser"/>
Password	<input type="text"/>
Confirm Password	<input type="text"/>
Privilege Level	<input type="text" value="Technician"/> <input type="button" value="▼"/>
<input type="button" value="Update"/>	

Figure 13: Selecting an Existing User Account

User Account	
User Account	<input type="text" value="testuser"/> <input type="button" value="▼"/>
User Name	<input type="text" value="testuser"/>
Password	<input type="text"/>
Confirm Password	<input type="text"/>
Privilege Level	<input type="text" value="Technician"/> <input type="button" value="▼"/>
<input type="button" value="Update"/> <input type="button" value="Delete"/>	

Figure 14: Deleting a User Account

## User Privilege Configuration

To navigate to the **User Privilege** page:

1. Click on the + next to **System**.
2. Click on **User Privilege**.

There are 3 different Privilege levels on the switch.

- **Admin** – Has access to all configuration and administration of the switch.
- **Technician** – Configurable by Admin – By default no configuration ability is given.
- **Operator** – Configurable by Admin – By default no configuration ability is given.

The User Privilege Configuration page allows specific configuration and/or administration levels to be assigned or removed from the Technician and Operator user roles.



Note: For each function, an operator's privilege cannot be higher than a technician's

To configure the privileges for each user access level, follow the below steps:

1. For each of the configuration options listed under **Web function \ User Privilege** (see [Figure 15](#)), select the proper privilege from the drop-down list under the appropriate user access level (**Technician** or **Operator**). The valid options are:
  - a. **Show, Hidden, Read-Only, Read-Write**
2. Click on the **Update** button at the bottom of the page.
3. Save the configuration (see [Save Configuration](#))

The screenshot shows the 'User Privilege' configuration page. On the left, there is a navigation tree with categories like Management Switch, System, Diagnostics, Port, Switching, Trunking, STP/Ring, VLAN, QoS, ACL, SNMP, and 802.1X. Under 'System', 'User Account' and 'User Privilege' are listed. The main area contains a table titled 'Web Function \ User Privilege' with three columns: 'Web Function \ User Privilege', 'Technician', and 'Operator'. The table lists various management functions with their corresponding privilege levels for both user roles. The 'User Privilege' row in the table has a yellow border around its entire row.

Web Function \ User Privilege	Technician	Operator	Detail
System	Show	Show	
System Information	Show	Show	
System Name/Password	Hidden	Hidden	
IP Address	Read-Only	Read-Only	
Management Interface	Read-Only	Read-Only	
Save Configuration	Hidden	Hidden	
Firmware Upgrade	Hidden	Hidden	
Reboot	Hidden	Hidden	
Logout	Show	Show	
User Account	Hidden	Hidden	
User Privilege	Hidden	Hidden	
Diagnostics	Show	Show	
Utilization	Show	Show	
System Log	Show	Show	
Remote Logging	Read-Only	Read-Only	
ARP Table	Show	Show	

**Figure 15: User Privilege Page**

# User Account Settings using the CLI

## Multi-User Mode

To enable the multi-user feature, use the following CLI commands:

CLI Command Mode: **Line Configuration Mode**

CLI Command Syntax: **login local**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#line console 0
switch_a(config-line)#login local
% Switching Single/Multi/Radius-User mode need to reboot the
switch to take effect!
switch_a(config-line)#q
switch_a(config)#q
switch_a#
```

## Single User Mode

To enable the single-user feature, use the following CLI commands:

CLI Command Mode: **Line Configuration Mode**

CLI Command Syntax: **login**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#line console 0
switch_a(config-line)#login
% Switching Single/Multi/Radius-User mode need to reboot the
switch to take effect!
switch_a(config-line)#q
switch_a(config)#q
switch_a#
```

## Creating a New User

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
username <user name-4 to 16 characters> privilege  
<admin/operator/technician> password <8/blank> <password-1 to 35  
characters>
```



**Note:** The optional <8> CLI command after the CLI command **password** is used to specify that the password should be displayed in encrypted form in the configuration file.

Usage Example:

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config)#username user1 privilege operator password 1234  
switch_a(config)#username user1 privilege operator password 8 1234  
switch_a(config)#username user2 privilege technician password 4321  
switch_a(config)#username user2 privilege technician password 8 4321  
switch_a(config)#username user3 privilege admin password 5678  
switch_a(config)#username user3 privilege admin password 8 5678  
switch_a(config)#q  
switch_a#
```

## Permissions

Permissions must be set using the Web GUI. See [User Privilege Configuration](#).

# DIAGNOSTICS

## Utilization

To navigate to the **Utilization** page:

1. Click on the + next to **Diagnostics**.
2. Click on **Utilization**.

The **Utilization** page shows (see [Figure 16](#)):

- **CPU Utilization** – Current and Max Utilization
- **Memory Utilization** – Total, Used and Free Memory

CPU Utilization	
Current utilization	24%
Max utilization	26%
Memory Utilization	
Total	Used
63200 KB	46112 KB
	Free
	17088 KB

**Figure 16: Utilization Page**

## System Log

To navigate to the **System Log** page:

1. Click on the + next to **Diagnostics**.
2. Click on **System Log**.

The System Log shows the date and time of port links going up or down (see [Figure 17](#))

The screenshot shows the Management Switch interface with a sidebar containing navigation links like System, Diagnostics, Port, Switching, Trunking, STP/Ring, VLAN, and QoS. The 'Diagnostics' section is expanded, showing 'Utilization', 'System Log', 'Remote Logging', 'ARP Table', and 'Route Table'. The 'System Log' table is displayed, titled 'System Log' with columns for ID and Log Message.

System Log	
1	At Jan 01 2010 20:00:20 (00:00:56) : Link up on Port 25
2	At Jan 01 2010 20:00:20 (00:00:56) : Link up on Port 26
3	At Jan 02 2010 00:56:49 (04:57:25) : Link down on Port 26
4	At Jan 02 2010 00:56:52 (04:57:28) : Link up on Port 16
5	At Jan 02 2010 00:56:56 (04:57:32) : Link down on Port 25
6	At Jan 02 2010 00:57:00 (04:57:36) : Link up on Port 24
7	At Jan 02 2010 00:57:05 (04:57:41) : Link down on Port 16
8	At Jan 02 2010 00:57:08 (04:57:44) : Link up on Port 14
9	At Jan 02 2010 00:57:09 (04:57:45) : Link down on Port 24
10	At Jan 02 2010 00:57:12 (04:57:49) : Link up on Port 19

**Figure 17: System Log**

## System log using CLI command

CLI Command Mode: **Exec Mode or Privileged Exec Mode**

CLI Command Syntax:

**show system-log**

Usage Example:

```
switch_a#show system-log
switch_a#q
switch_a#
```

## Remote Logging

To navigate to the **Remote Logging** page:

1. Click on the + next to **Diagnostics**.
2. Click on **Remote Logging**.

Remote Logging to a Syslog server allows administrators to log important system and debugging information. The Remote Logging configuration page allows reporting to a Syslog server to be enabled or disabled as well as management of a list of Syslog servers to report to (see [Figure 18](#)).

To configure the Remote Logging on the switch:


1. Click on the **Enable** or **Disable** radio button under Remote Logging.
2. Click on the **Update Setting** button.

To add a Syslog server:

1. Enter the IP Address of the Syslog Server in the **Syslog Server IP** text box.
2. Click on the **Add Syslog Server** button.

To delete a Syslog server from the list of servers currently on the switch:

1. Select the Syslog server from the Drop down box

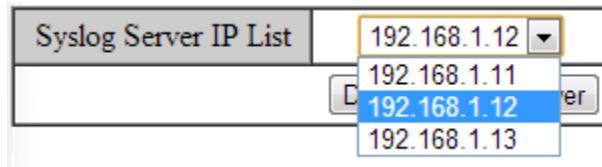

2. Click on the **Delete Syslog Server** button



The screenshot displays the 'Management Switch' interface. On the left, a tree view shows 'System', 'Diagnostics' (expanded to show 'Utilization', 'System Log', 'Remote Logging' (selected), 'ARP Table', and 'Route Table'), 'Port', 'Switching', 'Trunking', 'STP/Ring', and 'VLAN'. The right side shows the 'Remote Logging' configuration. It includes a 'Status' section with 'Enable' and 'Disable' radio buttons ('Enable' is selected) and an 'Update Setting' button. Below that is a 'Syslog Server IP' input field and an 'Add Syslog Server' button. At the bottom is a 'Syslog Server IP List' dropdown set to '192.168.1.11' and a 'Delete Syslog Server' button.

Figure 18: Remote Logging Page

# Remote Logging using CLI commands

## Enable/Disable Remote Logging

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
remote-log enable  
no remote-log enable
```

Usage Example 1: Enable Remote Logging

```
switch_a>enable  
switch_a#remote-log enable  
switch_a#q  
switch_a#
```

Usage Example 2: Disable Remote Logging

```
switch_a>enable  
switch_a#no remote-log enable  
switch_a#q  
switch_a#
```

## Add/Delete a Remote Logging Host

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
remote-log add <ip_address>  
remote-log del <ip_address>  
remote-log del all
```

Usage Example 1: Add a Remote Logging Host

```
switch_a>enable  
switch_a#remote-log add 192.168.1.100  
switch_a#q  
switch_a#
```

Usage Example 2: Delete a Remote Logging Host

```
switch_a>enable  
switch_a#remote-log del 192.168.1.100  
switch_a#q  
switch_a#
```

# ARP Table

To navigate to the **ARP Table** page:

1. Click on the + next to **Diagnostics**.
2. Click on **ARP Table**.

The ARP Table page shows ARP (Address Resolution Protocol) entries that are stored in the Switches ARP Table. This is useful for System Administrators for troubleshooting purposes. The information shown is:

- **IP Address** of the listed device
- **Hardware Type** – For Ethernet devices this will always be **1**.
- **Flags**
  - **2** = Device responded to ARP Request
  - **0** = No response to ARP Request
- **Hardware Address** – MAC Address of the listed device
- **VLAN** – The VLAN that the listed device is on

ARP Table					
IP Address	Hardware Type	Flags	Hardware Address	Mask	VLAN
10.58.7.114	1	2	00:18:8B:5B:B7:11	*	1
10.58.7.112	1	2	90:18:7C:1F:D0:2B	*	1
10.58.7.113	1	2	BC:30:5B:C7:43:49	*	1
10.58.7.119	1	2	5C:51:4F:10:E9:01	*	1
10.58.7.117	1	2	2C:B4:3A:EB:7C:AE	*	1
10.58.7.81	1	2	00:25:64:50:82:37	*	1
10.58.7.105	1	0	00:00:00:00:00:00	*	1
10.58.7.32	1	2	9C:93:4E:19:38:57	*	1
10.58.7.107	1	2	00:50:B6:65:2A:22	*	1
10.58.7.106	1	2	00:26:B9:88:49:4B	*	1
10.58.7.7	1	2	B8:A3:86:56:E2:9E	*	1
10.58.7.109	1	2	00:18:8B:5B:B2:AA	*	1
10.58.7.1	1	2	00:16:B6:86:67:14	*	1

**Figure 19: ARP Table**

## ARP Table using CLI Commands

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:  
**show arp-table**

Usage Example:


```
switch_a>enable
switch_a#show arp-table
IP address      HW type   Flags   HW address           Mask     VLAN
10.58.7.130    1         2        00:50:B6:65:2A:22    *        1
switch_a#q
switch_a#
```

## Route Table

To navigate to the **Route Table** page:

1. Click on the + next to **Diagnostics**.
2. Click on **Route Table**.

The Route Table lists the routes to network destinations and metrics (distances) that are associated with those routes. The Route Table contains information about the topology of the network around it.

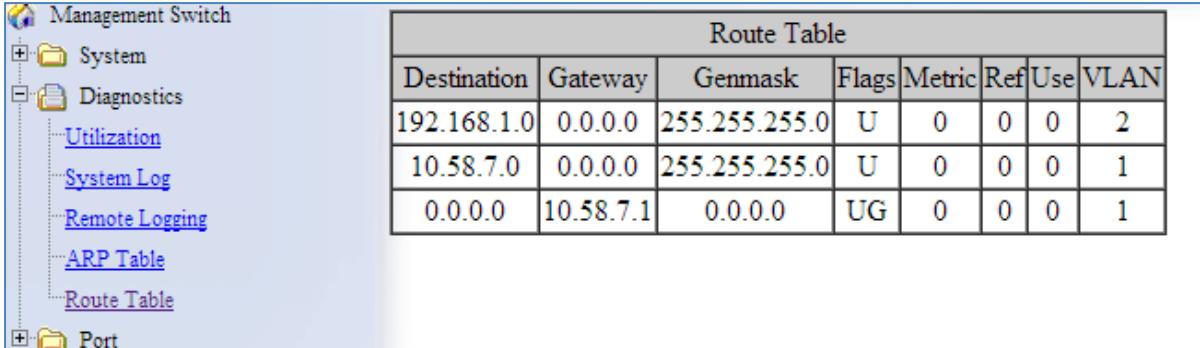

The screenshot shows the Management Switch interface with a sidebar navigation menu. The menu includes System, Diagnostics (with Utilization, System Log, Remote Logging, ARP Table, and Route Table), Port, and a plus sign icon. The Route Table page is currently active, displaying a table titled "Route Table". The table has columns: Destination, Gateway, Genmask, Flags, Metric, Ref, Use, and VLAN. The data in the table is as follows:

Destination	Gateway	Genmask	Flags	Metric	Ref	Use	VLAN
192.168.1.0	0.0.0.0	255.255.255.0	U	0	0	0	2
10.58.7.0	0.0.0.0	255.255.255.0	U	0	0	0	1
0.0.0.0	10.58.7.1	0.0.0.0	UG	0	0	0	1

Figure 20: Route Table

## Route Table Using CLI Commands

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:  
**show route-table**

#### Usage Example:

```
switch_a>enable
switch_a#show route-table
Destination      Gateway          Genmask        Flags Metric Ref  Use   VLAN
10.58.7.0        0.0.0.0          255.255.255.0 U     0      0      0      1
switch_a#q
switch_a#
```

## Alarm Setting

This setting applies only to Switch models that have a hardware relay.

To navigate to the **Alarm Setting** page:

1. Click on the + next to **Diagnostics**.
2. Click on **Alarm Setting**.

The Alarm Setting page allows users to define Ethernet port **Link-down** and Power failure alarms for triggering an alarm using the relay on the switch.

To configure an Ethernet port or Power input:

1. Select an Ethernet port or Power input from the dropdown box (see [Figure 21](#)).

Alarm Trigger Setting		
Name	Trig	
Trigger Enabled	Power1	
	fe1	
	fe2	
	fe3	
	fe4	
	fe5	
	fe6	
	fe7	
	fe8	
	fe9	
	fe10	
	ge1	
	ge2	
	Power1	
	Power2	
	Power3	
fe6		

**Figure 21: Alarm Trigger**

3. Select **YES** or **NO** from the dropdown box next to Trigger Enabled (see [Figure 22](#)).
4. Click **Update Setting** to save any changes made.

Alarm Trigger Setting	
Name	Power1 <input type="button" value="▼"/>
Trigger Enabled	YES <input type="button" value="▼"/>
<input type="button" value="Update Setting"/>	

**Figure 22: Trigger Enable**

To configure the normal state for the alarm relay, check the corresponding radio button for either closed or open, and click **Update Setting**.

Relay Control	
Status	<input type="radio"/> Normally Closed <input checked="" type="radio"/> Normally Open
<input type="button" value="Update Setting"/>	

**Figure 23: Relay Control**

## Alarm Setting Using CLI Commands

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
alarm-trigger if <interface> | power <1 - 3>
no alarm-trigger if <interface> | power <1 - 3>
```

Usage Example:

Enable alarm on interface fe1

```
switch_a>enable
switch_a#conf t
switch_a(config)alarm-trigger if fe1
switch_a(config)#q
switch_a#
```

Enable alarm on input power 2

```
switch_a>enable
switch_a#conf t
switch_a(config)alarm-trigger power 2
switch_a(config)#q
switch_a#
```

## Setting EEE (Energy-Efficient Ethernet)

Energy-Efficient Ethernet (EEE) reduces the switch's power consumption during periods of low activity. Use the **show eee** command in Privileged Exec mode to view the EEE status of all ports. EEE is disabled by default.

For more information on CLI command usage see [CLI Command Usage](#).

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

**eee enable**  
**no eee enable**

Usage Example:

Enable alarm on interface fe1

```
switch_a>enable
switch_a#conf t
switch_a#int ge5
switch_a(config-if)eee enable
```

# PORT

## Configuration

To navigate to the **Configuration** page:

1. Click on the + next to **Port**.
2. Click on **Configuration**.

Port configuration contains such useful features as flow control, port speed, and duplex settings. Some users will find these settings very valuable such as when the switch is connect to a latency-critical device such as a VOIP phone or IP camera or video multiplexor. In these cases and others the ability to alter the port settings can make the difference between a poorly responding device and one that functions without loss of data or clarity.

The **Configuration** page shows (see [Figure 24](#)):

- **Port Number** – fe(n) for 100mb ports and ge(n) for Gigabit ports
- **Link Status** – Operational State of the Port's Link (Read-Only)
- **Port Description** – User-supplied Port Description
- **Admin Setting** – Administratively Enable or Disable the Port.
- **Speed** – Speed and Duplex Settings for Port.
- **Flow Control** – State of Flow Control for the Port.

To provide a description to a port on the switch:

1. Click in the **Description** text box for the appropriate port.
2. Type in the description of the port.
3. Click on the **Submit** button.

To enable or disable a port on the switch:

1. Click on the drop-down box under Admin Setting and select either **Link Up** or **Link Down**.
2. Click on the **Submit** button.

To set the Port Speed and/or Port Duplex Settings on the switch:

1. Click on the drop-down box under Speed and select the desired port speed / duplex settings for that port. Please note, not all port types will have the same options. For

example, 100Mb fiber ports will typically be limited to a single option of 100M/FD (100Mbps and Full Duplex) while running 1Gb UTP ports will have six options for speed/duplex.

2. Click on the **Submit** button.

To enable or disable a port's Flow Control settings on the switch:

1. Click on the drop-down box under Flow Control and select either Enable or Disable. Flow Control is disabled by default.
2. Click on the **Submit** button.

Port	Link Status	Port Description	Port type	IP address (A.B.C.D/M)	Admin Setting	Speed	Flow Control
ge1	Down		Switch port ▾		Link Up ▾	Auto ▾	Enable ▾
ge2	Down		Switch port ▾		Link Up ▾	Auto ▾	Enable ▾
ge3	Down		Switch port ▾		Link Up ▾	Auto ▾	Enable ▾
ge4	Down		Switch port ▾		Link Up ▾	Auto ▾	Enable ▾
ge5	Down		Switch port ▾		Link Up ▾	Auto ▾	Enable ▾
ge6	Down		Switch port ▾		Link Up ▾	Auto ▾	Enable ▾
ge7	Down		Switch port ▾		Link Up ▾	Auto ▾	Enable ▾
ge8	Down		Switch port ▾		Link Up ▾	Auto ▾	Enable ▾
ge9	Running		Switch port ▾		Link Up ▾	Auto ▾	Enable ▾
ge10	Down		Switch port ▾		Link Up ▾	Auto ▾	Enable ▾
ge11	Down		Switch port ▾		Link Up ▾	Auto ▾	Enable ▾
ge12	Down		Switch port ▾		Link Up ▾	Auto ▾	Enable ▾
ge13	Down		Switch port ▾		Link Up ▾	Auto ▾	Enable ▾
ge14	Down		Switch port ▾		Link Up ▾	Auto ▾	Enable ▾
ge15	Down		Switch port ▾		Link Up ▾	Auto ▾	Enable ▾
ge16	Down		Switch port ▾		Link Up ▾	Auto ▾	Enable ▾

**Figure 24: Port Configuration**

## Port Status

To navigate to the **Port Status** page:

1. Click on the + next to **Port**.
2. Click on **Port Status**.

This page is a read-only page that lists the settings described in the previous section. It is useful if all the user intends to do is read the values of the port settings, not modify the port settings. The Port Status page shows (see [Figure 25](#)):

- **Port Number** – fe(n) for 100mb ports and ge(n) for Gigabit ports

- **Link Status** – Operational State of the Port's Link
- **Medium type** – Indicates whether the cable is copper or fiber
- **Port Description** – User-supplied Port Description
- **Speed** – Speed Settings for Port
- **Duplex** – Duplex status
- **Flow Control** – State of Flow Control for the Port

Port	Medium Type	Link Status	Port Description	Speed	Duplex	Flow Control
fe1	copper	Running		100M	Auto	Disable
fe2	copper	Running		100M	Auto	Disable
fe3	copper	Down		100M	Auto	Disable
fe4	copper	Running		100M	Auto	Disable
fe5	copper	Down		100M	Auto	Disable
fe6	copper	Down		100M	Auto	Disable
fe7	copper	Down		100M	Auto	Disable
fe8	copper	Down		100M	Auto	Disable
ge1	SFP	Down		1000M	Auto	Disable
ge2	SFP	Down		1000M	Auto	Disable

**Figure 25: Port Status**

## Rate Control

To navigate to the **Rate Control** page:

1. Click on the + next to **Port**.
2. Click on **Rate Control**.

The Rate Control page allows the user to set the maximum throughput on a port or ports on both packets entering the port (from the connected device) or packets leaving the port.

The **Ingress** text box controls the rate of data traveling into the port while the **Egress** text box controls the rate of data leaving the port.



**Note:** Entries will be rounded down to the nearest acceptable rate value. If the value entered is below the lowest acceptable value then the lowest acceptable value will be used.

The Rate Control page is shown below (see [Figure 26](#)):

To provide either an ingress or egress rate control for a port on the switch:

1. Click in the Ingress or Egress Text Box for the appropriate port.
2. Type in the ingress/egress rate for the port according to the values listed above.
3. Click on the **Update Setting** button.

Port	Ingress	Egress
fe1	992 kbps	800 kbps
fe2	0 kbps	0 kbps
fe3	0 kbps	0 kbps
fe4	0 kbps	0 kbps
fe5	0 kbps	0 kbps
fe6	0 kbps	0 kbps
fe7	0 kbps	0 kbps
fe8	0 kbps	0 kbps
ge1	0 kbps	0 kbps
ge2	0 kbps	0 kbps

**Figure 26: Rate Control**

## RMON Statistics

To navigate to the **RMON Statistics** page:

1. Click on the + next to **Port**.
2. Click on **RMON Statistics**.

RMON Statistics gives a detailed listing of the types and quantity of packets that a particular port has seen since the last reboot of the switch (see [Figure 27](#)).

To view the RMON statistics for a particular port on the switch:

1. Click on the link to the port at the top of the RMON Statistics page.

To clear the RMON statistics for a particular port on the switch:

1. Click on the link to the port at the top of the RMON Statistics page.
2. Click on the **Clear** button at the bottom of the page.
3. The statistics for the port will update every ten seconds.



Pay particular attention to the values for CRC/Alignment errors and collisions. Nonzero values for these fields can indicate that a port speed or duplex mismatch exists on the port.

<a href="#">fe1</a>	<a href="#">fe2</a>	<a href="#">fe3</a>	<a href="#">fe4</a>	<a href="#">fe5</a>	<a href="#">fe6</a>
<a href="#">fe7</a>	<a href="#">fe8</a>	<a href="#">fe9</a>	<a href="#">fe10</a>	<a href="#">ge1</a>	<a href="#">ge2</a>
<b>Port 1/fe1 Statistics</b>					
Drop Events					0
Broadcast Packets Received					836467
Multicast Packets Received					1584880
Undersize Packets Received					0
Oversize Packets Received					0
Fragments Packets Received					0
64-byte Packets Received					606350
65 to 127-byte Packets Received					381794
128 to 255-byte Packets Received					321375
256 to 511-byte Packets Received					961517
512 to 1023-byte Packets Received					163465
1024 to 1518-byte Packets Received					4339
Jabber Packets					0
Bytes Received					574580429
Packets Received					2438841
Collisions					0
CRC/Alignment Errors Received					0
TX No Errors					312082
RX No Errors					2438841
<i>Status of statistics will be refresh per 30 seconds after click Clear.</i>					
<input type="button" value="Clear"/>					

**Figure 27: RMON Page**

## Per Port VLAN Activities

To navigate to the **Per Port VLAN Activities** page:

1. Click on the + next to **Port**.
2. Click on **Per Port VLAN Activities**.

This is a read-only page that will allow the user to see what devices are connected to a particular port and the vlan associated with that device and port.

To clear the MAC addresses for a particular port on the switch (see [Figure 28](#)):

1. Click on the link to the port at the top of the Per Port VLAN Activities page.
2. Click on the **Clear MAC** button at the bottom of the page.
3. The statistics for the port will update every ten seconds.

The screenshot shows a network management interface for a 'Management Switch'. The left sidebar has a tree view with 'Port' selected, which further expands to show 'Per Port VLAN Activities'. The main content area displays a table for 'Port 1/fe1 status'. The table has two rows of port links: fe1, fe2, fe3, fe4, fe5 in the first row, and fe6, fe7, fe8, ge1, ge2 in the second row. Below this is a section titled 'Port 1/fe1 status' containing a table with three rows: 'Total VLAN Count' (1), 'Total MAC Address Count' (2), and 'VLAN Membership'. The 'VLAN Membership' row contains a single entry for 'VLAN1' with MAC addresses '0090.4ce3.a801' and '3065.ec91.9820'. At the bottom right of the table is a 'Clear MAC' button.

<a href="#">fe1</a>	<a href="#">fe2</a>	<a href="#">fe3</a>	<a href="#">fe4</a>	<a href="#">fe5</a>
<a href="#">fe6</a>	<a href="#">fe7</a>	<a href="#">fe8</a>	<a href="#">ge1</a>	<a href="#">ge2</a>
Port 1/fe1 status				
Total VLAN Count		1		
Total MAC Address Count		2		
VLAN Membership		MAC Address		
VLAN1		0090.4ce3.a801 3065.ec91.9820		
<a href="#">Clear MAC</a>				

**Figure 28: Port VLAN Activities**

## Port Configuration Examples Using CLI Commands

### Setting the Port Description

To provide a description of a port use the CLI commands below:

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **description <description text>**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#int fe1
switch_a(config-if)#description A_Port_Description
```

```
switch_a(config-if)#q  
switch_a(config) #
```

## Enable or Disable a Port

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

```
shutdown  
no shutdown
```

Usage Example 1: Disabling a port:

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config)#int fe1  
switch_a(config-if)#shutdown  
switch_a(config-if)#q  
switch_a(config) #
```

Usage Example 2: Enabling a port:

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config)#int fe1  
switch_a(config-if)#no shutdown  
switch_a(config-if)#q  
switch_a(config) #
```

## Setting the Port Speed

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **bandwidth <1-10000000000 bits>** (usable units: k, m, g)

Usage Example:

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config)#int fe1  
switch_a(config-if)#bandwidth 100m  
switch_a(config-if)#q  
switch_a(config)#q  
switch_a#
```

## Setting Port Duplex

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **duplex <full / half / auto>**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#int fe1
switch_a(config-if)#duplex full
switch_a(config-if)#q
switch_a(config) #
```

## Enable or Disable Port Flow Control

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **flowcontrol on**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#int fe1
switch_a(config-if)#flowcontrol on
switch_a(config-if)#q
switch_a(config) #
```

## Display Port Status

CLI Command Mode: **Privileged Exec Mode**

CLI Command Syntax: **show interface <ifname>**

Usage Example:

```
switch_a>enable
switch_a#show interface fe1
```

## Setting a Port's Rate Control

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **rate-control <ingress / egress> value <value in kbps>**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#int f1
switch_a(config-if)#rate-control ingress value 100000
switch_a(config-if)#q
switch_a(config) #
```

## Display a Port's RMON Statistics

CLI Command Mode: **Privileged Exec Mode**

CLI Command Syntax: **show interface statistics <interface name>**

Usage Example:

```
switch_a>enable
switch_a#show interface statistics f1
```

## Display a Port's VLAN Activities

To display a port's VLAN activities use the CLI commands below:

CLI Command Mode: **Privileged Exec Mode**

CLI Command Syntax: **show bridge interface <interface name>**

Usage Example:

```
switch_a>enable
switch_a#show bridge interface f1
```

# SWITCHING

## Bridging

To learn MAC addresses, a switch reads all packets that it detects on the LAN or on the local VLAN, looking for MAC addresses of sending nodes. It places these addresses into its Ethernet Switching table, along with the interface on which the traffic was received and the time when the address was learned. When the switch receives traffic on an interface, it searches the Ethernet switching table for the MAC address of the destination. If the MAC address is not found, the traffic is flooded out all of the other interfaces associated with the

VLAN. If traffic is received on an interface that is associated with VLAN 1 and there is no entry in the Ethernet switching table for VLAN 1, then the traffic is flooded to all access and trunk interfaces that are members of VLAN 1.

Flooding allows the switch to learn about destinations that are not yet in its Ethernet switching table. If a certain destination MAC address is not in the Ethernet switching table, the switch floods the traffic to all interfaces except the interface on which it was received. When the destination node receives the flooded traffic, it sends an acknowledgment packet back to the switch, allowing the switch to learn the MAC address of the node and to add the address to its Ethernet switching table.

The switch uses a process called aging to keep the Ethernet switching table current. For each MAC address in the Ethernet switching table, the switch records a timestamp of when the information about the network node was learned. Each time the switch detects traffic from a MAC address that is in its Ethernet switching table, it updates the timestamp of that MAC address. A timer on the switch periodically checks the timestamp, and if it is older than the value set for **mac-table-aging-time**, the switch removes the node's MAC address from the Ethernet switching table. This aging process ensures that the switch tracks only active MAC addresses on the network and that it is able to flush out from the Ethernet switching table MAC addresses that are no longer available.

The user can configure:

- How long MAC addresses remain in the Ethernet switching table
- Add a MAC address permanently to the switching table
- Prevent a MAC address from ever being registered in the switching table.

To navigate to the **Bridging** page:

1. Click on the + next to **Switching**.
2. Click on **Bridging**.

## Aging Time

The Aging Time value is a global value and represents the time that a networked device's MAC address will live in the switch's memory before being removed. The default value is 300s (5 minutes) (see [Figure 29](#)).

To update the Aging Time value on the switch:

1. Click in the Error Disable Recovery text box at the top of the Port Security Dynamic-MAC page.
2. Type in the desired value. Values can be from **0 to 65535 seconds**. A value of **0** indicates that the port is not to return to normal operating condition until an administrator resets the port or the switch is restarted.

3. Click on the **Update Setting** button.

## Threshold Level

The **Threshold Level** setting is a **per port value**. A traffic *storm* occurs when packets flood the LAN, creating excessive traffic and degrading network performance. The traffic *storm control* feature prevents LAN ports from being disrupted by a broadcast or multicast traffic *storm* on physical interfaces. A Threshold is set to determine when the switch will react to Broadcasts and/or Multicasts.

To set the Threshold level per port:

1. Type in the desired value. Values can be from **0.1 to 100**. This value is a percentage of allowable broadcast traffic for this port. Once this percentage of traffic is exceeded, all broadcast traffic beyond this percentage is dropped.
2. Click on the **Update Setting** button.

## Storm Control Type

The **Storm Control Enabled Type** setting is a per port value. The Storm Control Enabled Type allows users to determine the type of storm control to be used by the switch.

To set the Storm Control Enabled Type:

1. Select the check box next to **Broadcast** and/or **DFL-Multicast** for the port that needs to be changed
2. Click on the **Update Setting** button.

Aging Time (seconds)		300
<b>Update Setting</b>		
Port	Threshold Level (0.1-100)	Storm Control Enabled Type
fe1	Level	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
fe2	Level	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
fe3	Level	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
fe4	Level	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
fe5	Level	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
fe6	Level	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
fe7	Level	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
fe8	Level	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
fe9	Level	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
fe10	Level	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
fe11	Level	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
fe12	Level	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
fe13	Level	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast

**Figure 29: Bridging**

## Loopback Detect

Loopback detection is quite simply the ability of the switch to detect when a port on the switch has been connected directly (or “looped back”) to another port on the switch. This configuration would likely lead to a broadcast storm on the switch which would cause network performance to suffer. Loopback detection offers the ability of the switch to detect this condition and shutdown the loop-backed port before any disruption of network traffic occurs.

To navigate to the **Loopback Detect** page:

1. Click on the + next to **Switching**.
2. Click on **Loopback Detect**.

### Loopback Detection (Global)

To globally enable the **Loopback Detect** feature of the switch (see [Figure 30](#)):

1. Click on the **Loopback Detect** drop-down box.
2. Select **Enable** from the drop down list.
3. Click on the **Update Setting** button.

## Loopback Detect Action

To change the action that the switch takes when a loopback condition is detected (see [Figure 30](#)):

1. Choose an action from the **Loopback Detect Action** dropdown list. The available options are **None** and **Error Disable**.
2. Click on the **Update Setting** button.

## Loopback Detect Recovery Time

To change the length of time that the **Loopback Detect Action** will stay in effect (see [Figure 30](#)):

1. Enter a value in the text box next to **Error Disable Recovery**. Valid values range from **0 to 65535 seconds**.
2. Click on the **Update Setting** button.

## Polling Interval

To change the polling interval of the Loopback Detect function (see [Figure 30](#)):

1. Enter a value in the text box next to **Interval**. Valid values range from **1 to 65535 seconds**.
2. Click on the **Update Setting** button.

General Setting	
LoopBack Detect	Disable (default) ▾
LoopBack Detect Action	None (default) ▾
Error Disable Recovery (0-65535 seconds, Default:0)	0
Interval (1-30 seconds, Default:1)	1
NOTE: Error Disable Recovery must over two times of Interval.	
<input type="button" value="Update Setting"/>	

**Figure 30: Loopback Detection**

### Loopback Detection (Per Port)

To enable **Loopback Detection** for a particular port or ports on the switch (see [Figure 31](#)):

1. Select the value **Enable** from the **Mode** drop down list for a port on the Loopback Detect page.
2. Click on the **Update Setting** button.

Port	Mode	State
fe1	Disable (default) ▾	--
fe2	Disable (default) ▾	--
fe3	Disable (default) ▾	--
fe4	Disable (default) ▾	--
fe5	Disable (default) ▾	--
fe6	Disable (default) ▾	--
fe7	Disable (default) ▾	--
fe8	Disable (default) ▾	--
fe9	Enable ▾	Normal
fe10	Enable ▾	Normal
ge1	Disable (default) ▾	--
ge2	Disable (default) ▾	--
		<input type="button" value="Update Setting"/>

**Figure 31: Loopback Detection (port)**

## Storm Detect

The **Storm Detect** feature allows the switch to be configured to disable a port that is receiving a large number of Broadcast and/or Multicast packets. The switch can monitor for packets and take action based on percentage of bandwidth utilization or number of packets per second.

To navigate to the **Storm Detect** page:

1. Click on the + next to **Switching**.
2. Click on **Storm Detect**.

### Enable/Disable Storm Detection

1. **Enable or Disable** Storm Detection by Clicking on the drop down box in the **Storm-Detect Configuration** box (see [Figure 32](#)).
2. Set the **Storm Detect interval** to a number between **2 and 65535** seconds. The Default value is 10 seconds.
3. Set the **Storm-Detect errdisable-recovery time** to value between **0 and 65535 seconds**. The Default is 0 (disabled). This value determines if the switch should re-enable the port after the specified value or leave the port disabled.

Bridge Storm-Detect Configuration	
Storm-Detect configuration	Enable <input type="button" value="▼"/>
Storm-Detect interval (2..65535 sec), Default: 10	10 <input type="text"/>
Storm-Detect errdisable-recovery time (0..65535 sec), 0:no recovery	10 <input type="text"/>
Storm-Detect state of action	Errdisable

**Figure 32: Storm Detect – Global**

4. Set the **By Utilization(%)** for each port in the **Storm-Detect Per Port Configuration** box (see [Figure 33](#)). The default is 0 (not limited). Setting this to a value between 1 and 100 will cause the port to be disabled when the defined percentage of bandwidth is reached.
5. Set the type of packet to be monitored in the Dropdown box under **By Broadcast / Multicast+Broadcast Packets Per Second**. Set the value to **BC** to monitor Broadcast packets and **BC-MC** to monitor both Broadcast and Multicast packets.
6. Set the number of **packets per second** to a value between 0 and 1000000 packets. The default is 0 (not limited).

Storm-Detect Per Port Configuration				
Port	State / Recovery time remains	By Utilization(%) (0-100) 0: not limited	By Broadcast / Multicast+Broadcast Packets Per Second (0-100000) 0: not limited	
fe1	Normal / NA	80	MC-BC ▾	3000
fe2	Normal / NA	80	MC-BC ▾	3000
fe3	No Detecting	0	BC ▾	0
fe4	No Detecting	0	BC ▾	0
fe5	No Detecting	0	BC ▾	0
fe6	No Detecting	0	BC ▾	0
fe7	No Detecting	0	BC ▾	0
fe8	No Detecting	0	BC ▾	0
fe9	No Detecting	0	BC ▾	0
fe10	No Detecting	0	BC ▾	0
ge1	No Detecting	0	BC ▾	0
ge2	No Detecting	0	BC ▾	0

**Figure 33: Storm Detect – Per Port**

## Static MAC Entry

Occasionally, it may be useful to specify a MAC address on a particular port and VLAN rather than adjusting the ageing time for the entire switch. Alternatively, it is also possible and even desirable to prevent a MAC address from ever being registered with a switch. These features are offered under the **Static MAC Entry** menu.

To navigate to the **Static MAC Entry** menu:

1. Click on the + next to **Switching**.
2. Click on **Static MAC Entry**.

## Adding a Static MAC Address to a Port

To add a static MAC entry for a particular port (see [Figure 34](#)):

1. Enter the MAC address for end the corresponding port's text box. The format of the MAC address should be in the form **aaaa:bbbb:cccc**.
2. Select the VLAN that this MAC address is associated with from the **VLAN ID** drop down list for the port.
3. Click on the **Submit** button.

Port	Add MAC Address (Ex: 0000.1111.2222)	VLAN ID	Delete MAC Address
fe1	e0b3.1234.abcf	1 ▾	▀
fe2		▀	▀
fe3		▀	▀
fe4		▀	▀
fe5		▀	▀

**Figure 34: MAC Static Entry**

## Removing a Static MAC Address from a Port

To remove a static MAC entry for a particular port (see [Figure 35](#)):

1. For a particular port, select the MAC address to be deleted from the **Delete MAC Address** drop down box.
2. Click on the **Submit** button.

Static-MAC-Entry Forward			
Port	Add MAC Address (Ex: 0000.1111.2222)	VLAN ID	Delete MAC Address
fe1		▀	▀
fe2		▀	e0b3.1234.abcf vlan 1
fe3		▀	▀
fe4		▀	▀
fe5		▀	▀
fe6		▀	▀

**Figure 35: Removing a Static MAC Address**

## Adding a MAC to the Static-MAC-Entry Discard Table

To add a MAC address to the **Static-MAC-Entry Discard** table (see [Figure 36](#)):

1. Enter a MAC address in the form “0000.1234.abdc” in the **Add MAC Address** text box of the **Static-MAC-Entry-Discard** section.
2. Select the VLAN associated with the MAC address.
3. It should be noted that while static MAC address for forwarding are associated with the switch on a per-port basis. Static MAC discards are associated with the switch for all ports.
4. Click on the **Submit** button.

Static-MAC-Entry Discard

Add MAC Address (Ex: 0000.1111.2222)	VLAN ID	Delete MAC Address
aabb.1289.cdf3	1	⋮
<input type="button" value="Submit"/>		

**Figure 36: Adding a MAC – Static-MAC-Entry Table**

## Removing a MAC address from the Static-MAC-Entry Discard Table

To remove a MAC address from the **Static-MAC-Entry Discard** table (see [Figure 37](#)):

1. From the drop down box underneath **Delete MAC Address**, select the MAC address to be deleted.
2. Click on the **Submit** button.

Static-MAC-Entry Discard

Add MAC Address (Ex: 0000.1111.2222)	VLAN ID	Delete MAC Address
	⋮	00eb.0321.45ad vlan 1 ⋮
<input type="button" value="Submit"/>		

**Figure 37: Deleting a MAC – Static-MAC-Entry Table**

## Port Mirroring

Port mirroring allows network traffic from one port to be copied or mirrored to another port. This is a very useful troubleshooting feature in that all data from one port is sent to another port which is attached to a computer or other network device that is configured to capture packets. This enables a network administrator or technician to see the traffic that is entering or leaving a particular port without disrupting normal network operations on the port that is being mirrored.

To navigate to the **Port Mirroring** menu:

1. Click on the **+** next to **Switching**.
2. Click on **Port Mirroring**.

To configure port mirroring for a port or ports on the switch (see [Figure 38](#)):

1. Select the port or ports that traffic is to be mirrored from under the **Mirror From** column.
2. Select the destination port under the **Mirror To** drop down box.
3. Select the type of traffic that should be mirrored from the **Mirror Mode** drop down box. The available options are:
  - a. TX – transmit only
  - b. RX – Receive Only
  - c. TX/RX – Transmit and Receive.
4. Click on the **Submit** button.

Port Mirror Setup

Mirror From	Mirror To	Mirror Mode
<input checked="" type="checkbox"/> fe1		
<input checked="" type="checkbox"/> fe2		
<input type="checkbox"/> fe3		
<input type="checkbox"/> fe4		
<input type="checkbox"/> fe5		
<input type="checkbox"/> fe6	fe10 ▾	
<input type="checkbox"/> fe7		
<input type="checkbox"/> fe8		
<input type="checkbox"/> fe9		
<input type="checkbox"/> fe10		
<input type="checkbox"/> ge1		
<input type="checkbox"/> ge2		
<input type="button" value="Submit"/>		

Figure 38: Port Mirroring

To disable port mirroring for a port or ports on the switch (see [Figure 39](#)):

1. Under the **Current Settings** section, the current port mirroring configuration should be displayed.
2. Click on the **Delete** button.

**Current Settings**

Mirror From	Mirror To	Mirror Mode
fe1		
fe2	fe10	both

**Delete**

Figure 39: Disabling Port Mirroring

## Link State Tracking

Link-state tracking binds the link state of multiple interfaces. Link-state tracking provides redundancy in the network when used with server network interface card (NIC) adapter teaming or bonding. When the server network adapters are configured in a primary or secondary relationship known as teaming and the link is lost on the primary interface, connectivity transparently changes to the secondary interface.

To navigate to the **Link State Tracking** menu:

1. Click on the + next to **Switching**.
2. Click on **Link State Tracking**.

### Enable/Disable Link State Tracking

To enable Link State Tracking for a particular group on the switch (see [Figure 40](#)):

1. Under **Group Setting**, click the check box of the Link State groups that are to be enabled (or disabled).
2. Click on **Update Setting**.

Group Setting										
	Group 1	Group 2	Group 3	Group 4	Group 5	Group 6	Group 7	Group 8	Group 9	Group 10
Enable	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>							

**Figure 40: Link State Tracking**

### Port Settings

To configure individual ports for a Link State group on the switch (see [Figure 41](#)):

1. Under **Port Setting**, select the Link State Group that the port will belong to from the Group drop down box
2. Select if the port is upstream or downstream from the Up/Down Stream)drop down box.
3. Click on **Update Setting**.

Port Setting				
Port	Group	(Up/Down)Stream	Status	
fe1	1 ▾	Up ▾		
fe2	1 ▾	Up ▾		
fe3	▀	Up ▾		
fe4	▀	Up ▾		
... e.e	—	Up ▾		

Figure 41: Link State Tracking – Port Settings

## PoE (Power over Ethernet) - System and Port Settings

This section only applies to Managed EtherWAN Switches with support for PoE.

To navigate to the **PoE page**:

1. Click on the + next to **Switching**.
2. Click on **PoE**.

### PoE System Setting

The PoE Page provides access to **PoE System Setting** information and configuration. The information provided is (See [Figure 42](#)):

1. **Main Supply Voltage**
2. **System Temperature**
3. **Power Allocation** – Actual wattage supplied to attached PoE device(s)
4. **System Power Budget** – Configurable. The default value depends on the model of switch.

PoE System Setting	
Main Supply Voltage	47.00 (V)
System Temperature	41.74 (C)
Power Allocation	7.81 (W)
System Power Budget	144.11 (W)
The value of 'System Power Budget' should greater than the sum of all port's 'Consumption'	
<input type="button" value="Submit"/>	

**Figure 42: PoE System Setting**

## PoE Port Setting

The PoE Port Setting section provides the following configurable settings and information:

1. **Enable Mode** – Set the PoE Enable Mode by selecting one of the following settings in the drop-down box under PoE Mode (see [Figure 43](#))
  - **Enable** – Enable PoE on a specific port
  - **Disable** – Disable PoE on a specific port
  - **Scheduling** – Schedule time of day that PoE will be enabled per port
2. **Extend Mode** (EX78900 only) – This allows the port to deliver PoE power up to 250 meters at a speed of 10Mbps.
3. **Power Delivery** (EX78900 only) – Select two or four wire pairs to be used for the delivery of PoE. For IEEE 802.3at PoE+ compliant devices that can draw more than 30W of power, use the 4 wire pair mode.
4. **Fixed Power Limit** – Provides a fixed maximum Wattage to the attached PoE (PD) device.
5. **Power Priority** – Use the Drop-Down box in the *Power Priority* column to set the priority to High, Medium or Low.

6. **Power Down Alarm** – This setting only applies to EtherWAN Switches that have a relay. If this box is checked, losing PoE power on a port triggers the relay on the switch.
7. **Status** – Informational only. Provides the status of the PoE port
8. **PD Class** - Informational only. Provides the PoE Classification of the PoE (PD) device attached to the PoE port
9. **Current (mA)** – Informational only. Shows the current draw from the attached PoE (PD) device.
- 10. Consumption (W)** - Informational only. Shows the power consumption of the attached PoE (PD) device.

PoE Port Setting										
Port	Enable Mode	Extend Mode	Power Delivery	Fixed Power Limit (W)	Power Priority	Power Down Alarm	Status	PD Class	Current (mA)	Consumption (W)
ge1	Enable <input type="button" value="▼"/>	<input type="checkbox"/>	2 Pairs (802.3af/at) <input type="button" value="▼"/>	30.00	High <input type="button" value="▼"/>	<input type="checkbox"/>	Searching	N/A	0.00	0.00
ge2	Enable <input type="button" value="▼"/>	<input checked="" type="checkbox"/>	2 Pairs (802.3af/at) <input type="button" value="▼"/>	30.00	High <input type="button" value="▼"/>	<input type="checkbox"/>	Searching	N/A	0.00	0.00
ge3	Enable <input type="button" value="▼"/>	<input type="checkbox"/>	2 Pairs (802.3af/at) <input type="button" value="▼"/>	30.00	High <input type="button" value="▼"/>	<input type="checkbox"/>	Searching	N/A	0.00	0.00
ge4	Enable <input type="button" value="▼"/>	<input type="checkbox"/>	2 Pairs (802.3af/at) <input type="button" value="▼"/>	30.00	High <input type="button" value="▼"/>	<input type="checkbox"/>	Searching	N/A	0.00	0.00
ge5	Enable <input type="button" value="▼"/>	<input type="checkbox"/>	2 Pairs (802.3af/at) <input type="button" value="▼"/>	30.00	High <input type="button" value="▼"/>	<input type="checkbox"/>	Searching	N/A	0.00	0.00
ge6	Enable <input type="button" value="▼"/>	<input type="checkbox"/>	2 Pairs (802.3af/at) <input type="button" value="▼"/>	30.00	High <input type="button" value="▼"/>	<input type="checkbox"/>	Searching	N/A	0.00	0.00
ge7	Enable <input type="button" value="▼"/>	<input type="checkbox"/>	2 Pairs (802.3af/at) <input type="button" value="▼"/>	30.00	High <input type="button" value="▼"/>	<input type="checkbox"/>	Searching	N/A	0.00	0.00
ge8	Enable <input type="button" value="▼"/>	<input type="checkbox"/>	2 Pairs (802.3af/at) <input type="button" value="▼"/>	30.00	High <input type="button" value="▼"/>	<input type="checkbox"/>	Searching	N/A	0.00	0.00

**Figure 43: PoE Port Setting**

## PoE Scheduling

PoE Scheduling allows PoE ports to have their power up time scheduled by hour of the day and day of the week. In order for a port to follow a schedule defined here, the port must be set to **Scheduling** on the **PoE settings** page (see [PoE Port Setting](#))

To navigate to the **PoE Scheduling** page:

1. Click on the **+** next to **Switching**.
2. Click on **PoE Scheduling**.

Each PoE port on the switch can be scheduled to power up and down automatically. To configure a port:

1. Select the port from the drop-down list (See [Figure 44](#))

PoE Per Port Scheduling		
Port:	fe1	Status: Not Scheduled
Time	fe1	Sun
00:00	fe2	
01:00	fe3	
02:00	fe4	
03:00	fe5	
04:00	fe6	
05:00	fe7	
	fe8	

**Figure 44: Selecting a Port**

2. Select the hour(s) of day for each day of the week (see [Figure 45](#)).
3. Click on the **Submit** button.

Port: fe1	Status: Not Scheduled						
Time	Sun	Mon	Tue	Wed	Thu	Fri	Sat
00:00							
01:00							
02:00							
03:00							
04:00							
05:00							
06:00							
07:00							
08:00							
09:00							
10:00							
11:00							
12:00							
13:00							
14:00							
15:00							
16:00							
17:00							
18:00							
19:00							
20:00							
21:00							
22:00							
23:00							
	<input type="button" value="Select All"/>	<input style="background-color: #00FFFF; color: black; border: 1px solid #0000FF; font-weight: bold; font-size: 10pt; width: 100%; height: 100%;" type="button" value="Select All"/>	<input type="button" value="Select All"/>				
	<input type="button" value="Delete All"/>	<input type="button" value="Delete All"/>	<input type="button" value="Delete All"/>	<input type="button" value="Delete All"/>	<input type="button" value="Delete All"/>	<input type="button" value="Delete All"/>	<input type="button" value="Delete All"/>
	<input type="button" value="Submit"/>						

Figure 45: PoE Power Scheduling

## PoE Watchdog

PoE Watchdog is a management feature to help system administrators monitor and manage critical PoE powered devices. PD Watchdog is only supported on PoE enabled ports. Once enabled, the system will continuously ping a user specified IP address across the port. If the system does not receive a reply within a specified interval, it can automatically power down or power cycle the powered device.

To navigate to the **PoE Watchdog** page:

1. Click on the + next to **Switching**.
2. Click on **PoE Watchdog**.

To enable PoE Watchdog on a port, select **enable** from the drop-down menu, and then enter the IP address to which the device is connected. Set the ping interval and failure count, and choose the response action (**No action**, **Power off PD**, or **Reboot PD**). The **StartUp Delay** is the initial time delay before the system sends out the first ICMP echo request on the port (Range: 30 - 600 sec). Click **Submit** when finished.

The screenshot shows the Management Switch interface with the following navigation path: System > Port > Switching > PoE > PoE Watchdog. The main window displays the 'PD Watchdog Config' table with 8 ports (ge1-ge8) listed. The table columns are: Port, Enable Watchdog, PoE Device Failed Check (IP), Ping Interval (Default 300s), Failure Count (Default 3), No Response Action, and StartUp Delay (Default 300s). The configuration for port ge3 is highlighted: Enable Watchdog is set to 'Enable', PoE Device Failed Check (IP) is '192.168.25.227', Ping Interval is '30', Failure Count is '1', No Response Action is 'Power Off PD', and StartUp Delay is '300'. Notes at the bottom of the table specify: Ping Interval range 30-600 (sec.), StartUp Delay range 30-600 (sec.), and Failure Count range 1-10. A 'Submit' button is located in the bottom right corner of the table area.

PD Watchdog Config						
Port	Enable Watchdog	PoE Device Failed Check (IP)	Ping Interval (Default 300s)	Failure Count (Default 3)	No Response Action	StartUp Delay (Default 300s)
ge1	Disable ▾		300	3	No Action ▾	300
ge2	Disable ▾		300	3	No Action ▾	300
ge3	Enable ▾	192.168.25.227	30	1	Power Off PD ▾	300
ge4	Disable ▾		300	3	No Action ▾	300
ge5	Disable ▾		300	3	No Action ▾	300
ge6	Disable ▾		300	3	No Action ▾	300
ge7	Enable ▾	192.168.25.226	30	1	Reboot PD ▾	300
ge8	Disable ▾		300	3	No Action ▾	300

Note: Ping Interval range 30-600 (sec.)  
Note: StartUp Delay range 30-600 (sec.)  
Note: Failure Count range 1-10

Submit

Figure 46: PoE Watchdog

# Switch Configuration Examples Using CLI Commands

## Setting the Aging Time Value

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **bridge 1 ageing-time (time in ms)**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#bridge 1 ageing time 300
switch_a(config)#q
switch_a#
```

## Enabling Port Isolation

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **port-isolation enable**

**port-isolation disable**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#interface f1
switch_a(config-if)#port-isolation enable
switch_a(config-if)#q
switch_a(config) #
```

## Setting Storm Control

To set the value for the **Broadcast and or DLF-Multicast Storm Control** value of a port on the switch, use the CLI commands below:

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **stormcontrol <broadcast / dlf-multicast> <level>**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a#configure interface f1
switch_a(config-if)#storm-control broadcast 20
switch_a(config-if)#q
switch_a(config) #
```

## Enabling Loopback Detect (Global)

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: bridge 1 loopback-detect <enable | disable>

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#bridge 1 loopback-detect enable
switch_a(config)#q
switch_a#
```

## Setting the Loopback Detect Action

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: bridge 1 loopback-detect action <err-disable | none>

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#bridge 1 loopback-detect action err-disable
switch_a(config)#q
switch_a#
```

## Setting the Loopback Detect Recovery Time

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **bridge 1 loopback-detect errdisable-recovery <0-65535>**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#bridge 1 loopback-detect errdisable-recovery 30
switch_a(config)#q
switch_a#
```

## Setting the Loopback Detect Polling Interval

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **bridge 1 loopback-detect interval <1-65535>**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#bridge 1 loopback-detect interval 5
switch_a(config)#q
switch_a#
```

## Enabling Loopback Detect (Port)

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **loopback-detect enable**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a#interface f1
switch_a(config) # loopback-detect enable
switch_a(config)#q
switch_a#
```

## Configuring Storm-Detect

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

**bridge 1 storm-detect errdisable**

**no bridge 1 storm-detect errdisable**

Default: **Disabled**

Usage Example – Enabling storm detect:

```
switch_a>enable
switch_a#configure terminal
```

```
switch_a(config)# bridge 1 storm-detect errdisable
switch_a(config)#q
switch_a#
```

Usage Example – Disabling storm detect:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# no bridge 1 storm-detect errdisable
switch_a(config)#q
switch_a#
```

To set the storm-detect interval use the following CLI commands:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **bridge 1 storm-detect interval <2-65535>**

Default: **10**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# bridge 1 storm-detect interval 10
switch_a(config)#q
switch_a#
```

To set the storm-detect recovery time use the following CLI commands:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **bridge 1 storm-detect errdisable-recovery <0-65535>**

Default: **0** No errdisable recovery.

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# bridge 1 storm-detect errdisable-recovery 60
switch_a(config)#q
switch_a#
```

## **Storm Detect Packet Type**

Enable this port's storm detect by detect number of broadcast or broadcast plus multicast packets per second. Unit is packets per second. Set to 0 to disable this feature.

To set the storm-detect packet type use the following CLI commands:

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **storm-detect (bc | mc-bc) pps <0-100000>**

**bc** = broadcast only

**mc-bc** = count broadcast & multicast packets together.

Default: **0** (Disabled)

Usage Example 1 – Enabling Multicast + Broadcast:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# interface f1
switch_a(config-if)#storm-detect mc-bc pps 50000
switch_a(config-if)#q
switch_a(config)#q
switch_a#
```

Usage Example 2 – Enabling Multicast + Broadcast:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# interface f1
switch_a(config-if)#storm-detect bc pps 50000
switch_a(config-if)#q
switch_a(config)#q
switch_a#
```

To set the storm-detect utilization use the following CLI commands:

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **storm-detect utilization <0-100>**

Default: **0** (Disabled)

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# interface f1
switch_a(config-if)#storm-detect utilization 80
switch_a(config-if)#q
switch_a(config)#q
switch_a#
```

To disable storm-detect on a port use the following CLI commands:

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **no storm-detect port enable**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# interface f1
switch_a(config-if)#no storm-detect port enable
switch_a(config-if)#q
switch_a(config)#q
switch_a#
```

To disable storm-detect on a port use the following CLI commands:

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **no storm-detect port enable**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# interface f1
switch_a(config-if)#no storm-detect port enable
switch_a(config-if)#q
switch_a(config)#q
switch_a#
```

## Adding a MAC Address for Static-MAC-Entry Forwarding

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

**bridge 1 address <mac address> forward <interface> vlan <vlan id>**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# bridge 1 address 00e0.abcd.1245 forward f1 vlan 1
switch_a(config)#q
switch_a#
```

## Discard a Static MAC Entry

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **bridge 1 address <mac address> discard vlan <vlan id>**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# bridge 1 address 00e0.abcd.1245 discard vlan 1
switch_a(config)#q
switch_a#
```

## Configuring Port Mirroring

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **mirror interface <interface> direction <both / tx / rx>**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a#interface g1
switch_a(config-if)# mirror interface f1 direction both
switch_a(config-if)#q
switch_a(config)#q
switch_a#
```

## Enabling a Link State Tracking Group

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **link state track <group #>**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# link state track 4
switch_a(config)#q
switch_a#
```

## Assigning a Port to a Link State Tracking Group

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **link state group <group #> <upstream / downstream>**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#interface f1
switch_a(config-if)# link state group 4 downstream
switch_a(config-if)#q
switch_a(config)#q
switch_a#
```

## Setting PoE Power Budget

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **poe system-power-budget <value>**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
```

```

switch_a(config) # poe system-power-budget 144.14
switch_a(config) #q
switch_a#

```

## PoE Port Settings

The following commands are used to set PoE functions related directly to individual PoE ports:

CLI Command (click link for syntax)	Function
<a href="#">Enable</a>	Enables PoE on a port
<a href="#">Fixed Power Limit</a>	Sets a fixed wattage for a PoE port
<a href="#">Power-classification</a>	Sets a port to negotiate power-classification
<a href="#">Power-down-alarm</a>	Turns on alarm by relay on PoE power down
<a href="#">Power-priority</a>	Sets priority of power distribution to ports
<a href="#">Scheduling</a>	Enable Scheduling
<a href="#">Schedule-time</a>	Sets schedule time to power PoE ports
<a href="#">Schedule-time-hour</a>	Schedule time (hour)

### Enable

To enable or disable PoE on a port use the following CLI commands

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

```

poe enable
no poe enable

```

Usage Example 1 – Enabling PoE on a port:

```

switch_a>enable
switch_a#configure terminal
switch_a(config) # interface fe1
switch_a(config-if) # poe enable
switch_a(config-if) #q
switch_a(config) #q

```

Usage Example 2 – Disabling PoE on a port:

```

switch_a>enable
switch_a#configure terminal
switch_a(config) # interface fe1
switch_a(config-if) # no poe enable

```

```
switch_a(config-if)#q  
switch_a(config)#q
```

## Fixed Power Limit

The fixed-power-limit CLI command sets the maximum wattage that a switch port will provide to the attached PoE device. To set a fixed power limit on a port **Power Limit by Classification** must be disabled on the port first (see [Power-classification](#)).

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **poe fixed-power-limit <level>**

Level = 0-15.4 (802.3af) / 30 (802.3at) / 60 (W)

Usage Example:

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config)# interface fe1  
switch_a(config-if)# poe fixed-power-limit 7.5  
switch_a(config-if)#q  
switch_a(config)#q
```

## Power-classification

This setting tells the switch to negotiate with the attached PoE device to determine the Watts that will be provided by the switch. To change this setting, check (enable) or uncheck (disable) the check box located in the *Power Limit by Classification* column. The default is checked (Enabled). This is a per port setting.

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

**poe power-classification enable**

**no poe power-classification enable**

Usage Example 1 – Enabling PoE Power Classification on a port:

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config)# interface fe1  
switch_a(config-if)# poe power-classification enable
```

```
switch_a(config-if)#q
switch_a(config)#q
switch_a#
```

Usage Example 2 – Disabling PoE Power Classification on a port:

```
switch_a>enable
switch_a#configure terminal
switch_a(config) # interface fe1
switch_a(config-if)# no poe power-classification enable
switch_a(config-if)#q
switch_a(config)#q
switch_a#
```

### **Power-down-alarm**

This setting only applies to EtherWAN Switches that have a relay. If this setting is enabled, losing PoE power on a port triggers the relay on the switch.

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

```
poe power-down-alarm enable
no poe power-down-alarm enable
```

Usage Example 1 – Enabling PoE power down alarm on a port:

```
switch_a>enable
switch_a#configure terminal
switch_a(config) # interface fe1
switch_a(config-if)# poe power-down-alarm enable
switch_a(config-if)#q
switch_a(config)#q
switch_a#
```

Usage Example 2 – Disabling PoE power down alarm on a port:

```
switch_a>enable
switch_a#configure terminal
switch_a(config) # interface fe1
switch_a(config-if)# no poe power-down-alarm enable
switch_a(config-if)#q
switch_a(config)#q
switch_a#
```

## Power-priority

Use this setting to set the priority to High, Medium or Low.  
To set the PoE power priority, use the following CLI command:

**CLI Command Mode: Interface Configuration Mode**

**CLI Command Syntax: `poe power-priority <high / medium / low>`**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# interface fe1
switch_a(config-if)# poe power-priority medium
switch_a(config-if)#q
switch_a(config)#q
switch_a#
```

## PoE Scheduling

PoE Scheduling allows PoE ports to have their power up time scheduled by hour of the day and day of the week.

### Scheduling

To enable PoE Power Scheduling on a port, use the following CLI command:

**CLI Command Mode: Interface Configuration Mode**

**CLI Command Syntax: `poe scheduling enable`**

To disable PoE scheduling on a port use the *no poe [Enable](#)* command

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# interface fe1
switch_a(config-if)# poe scheduling enable
switch_a(config-if)#q
```

```
switch_a (config) #q  
switch_a#
```

### Schedule-time

To enable PoE Power Scheduling on a port, use the following CLI command:

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **poe schedule-time <day> <hour(s)>**

Day = 0 (Sunday) to 6 (Saturday)

Hour = 1 to 23. Multiple hours can be defined using a dash (ex. 1-23)

To disable PoE scheduling on a port use the *no poe [Enable](#)* command

Usage Example 1:

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config) # interface fe1  
switch_a(config-if) # poe schedule-time 0 10  
switch_a(config-if) #q  
switch_a(config) #q  
switch_a#
```

Usage Example 2 – Multiple hours:

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config) # interface fe1  
switch_a(config-if) # poe schedule-time 0 10-14  
switch_a(config-if) #q  
switch_a(config) #q  
switch_a#
```

### Schedule-time-hour

To enable PoE Power Scheduling on a pse the following CLI command:

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **poe schedule-time <day> <hour>**

Day = 0 (Sunday) to 6 (Saturday)

Hour = 1 to 23

To disable PoE scheduling on a port use the *no poe Enable* command.

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# interface f1
switch_a(config-if)# poe schedule-time 0 10
switch_a(config-if)#q
switch_a(config)#q
switch_a#
```

## PoE Watchdog

PoE Watchdog is a management feature to help system administrators monitor and manage critical PoE powered devices. PD Watchdog is only supported on PoE enabled ports. Once enabled, the system will continuously ping a user specified IP address across the port. If the system does not receive a reply within a specified interval, it can automatically power down or power cycle the powered device. To configure PoE Watchdog use the following CLI commands

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **poe watchdog check-address AAA.BBB.CCC.DDD**  
**poe watchdog enable**  
**poe watchdog failure-action <noaction | powercycle | poweroff >**  
**poe watchdog failure-count <1-10>**  
**poe watchdog ping-interval <30-600>**  
**poe watchdog startup-delay <30-600>**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#interface f1
switch_a(config-if)# poe watchdog enable
switch_a(config-if)# poe watchdog check-address 10.10.10.120
switch_a(config-if)# poe watchdog startup-delay 45
switch_a(config-if)# poe watchdog ping interval 60
switch_a(config-if)# poe watchdog failure-action <powercycle>
switch_a(config-if)#q
switch_a(config)#
```

## PoE 4-Pair Delivery

This feature is not available on all models.

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **poe 4-pair-power enable**

Usage Example:

```
switch_a(config-if)#poe 4-pair-power enable
```

## PoE Extender

PoE can be extended to 250m with 10Mbps transfer speed. This feature is not available on all models. Note that if PoE extend mode is enabled, [EEE](#) and auto-negotiation will be disabled. Only 10Mbps speed is available if this feature is enabled.

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **poe extend-mode enable**

Usage Example:

```
switch_a(config-if)#poe extend-mode enable
```

**Note:** It is suggested to pre-test the function before deployment. The maximum available transmission distance of PoE depends on the negotiation result of PD and PSE. Some PDs using EtherWAN PoE/PSE switches may only support a standard distance of 100 meters. Contact EtherWAN if assistance is needed.

# TRUNKING

## Overview

Port Trunking refers to the use of multiple network connections in parallel to increase the link speed beyond the limits of any one single cable or port. This is commonly called link aggregation. These aggregated links may be used to interconnect switches or to connect high-capacity servers to a network.

The switch supports up to six trunks for 100Mbps ports and up to two gigabit trunks. Each 100Mbps trunk can be composed of up to eight 100Mbps ports while each gigabit trunk can support up to four gigabit ports.

There are two popular types of port trunking, static and link aggregation control protocol (LACP).

## Static Channel Trunking

Originally specified in the IEEE802.3AD specification and now in the IEEE 802.1AX2008 specification, this type of trunking is the most basic and easiest to understand. It simply is the aggregation of two or more Ethernet links to form a virtual link equivalent in bandwidth to the sum of its individual links. For example, if one had four 100Mbps Ethernet links composing a single static channel, the overall bandwidth of the static channel would be 400Mbps.

The aggregation feature allows up to eight ports to be grouped together as a single-link connection between two switch devices. This increases the effective bandwidth thought a link and provides redundancy. It allows up to 4 aggregation groups which depends on your available port counts. Ports within an aggregation group must be of the same linked speed. By performing a dynamic hashing algorithm on the MAC address, each packet destined for the aggregation is forwarded to one of the valid ports within the aggregation group. By dynamically performing this function, the traffic patterns can be more balanced across the ports within an aggregation. In addition, the MAC-based algorithm provides dynamic failover. If a port within an aggregation group fails, the other ports within the aggregation automatically assume all traffic designated for the aggregation.

## Link Aggregation Control Protocol

Within the IEEE specification, the Link Aggregation Control Protocol (LACP) provides a method to control the bundling of several physical ports together to form a single logical channel. LACP allows a network device to negotiate an automatic bundling of links by sending LACP packets to the peer (directly connected device that also implements LACP). This means that both sides of the LACP channel must be configured for LACP which implies both devices must support it.

LACP also has a couple of very important advantages over static channel:

- Failover when a link fails and there is (for example) a media converter between the devices which means that the peer will not see the link down. With static link aggregation the peer would continue sending traffic down the link causing it to be lost.
- The device can confirm that the configuration at the other end can handle link aggregation. With Static link aggregation a cabling or configuration mistake could go undetected and cause undesirable network behavior.



**NOTE:** Before configuring a port trunk, disable or disconnect all of the ports that you want to use with this trunk. When the trunk has been (re)configured, enable or reconnect the ports.

# Port Trunking

To navigate to the **Port Trunking** menu:

1. Click on the **+** next to **Trunking**.
2. Click on **Port Trunking**.

There are 2 interfaces for Port Trunking supported, depending on the model of EtherWAN Managed switch.

## Interface 1 (see [Figure 47](#))

To create a trunk consisting of 100Mbps ports:

1. Click on the checkbox for each desired port in the **Static Channel Group** or the **LACP Group**. A port cannot be in the Static Channel Group and the LACP Group at the same time
2. Click on the **Submit** button.

To create a static trunk consisting of 1000Mbps ports:

1. In the **GE Trunking** section, select **Static** or **LACP**.
2. Click on the **Submit** button.

Static Channel Group																
	fe1	fe2	fe3	fe4	fe5	fe6	fe7	fe8	fe9	fe10	fe11	fe12	fe13	fe14	fe15	fe16
Trunk 1	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>											
LACP Group																
	fe1	fe2	fe3	fe4	fe5	fe6	fe7	fe8	fe9	fe10	fe11	fe12	fe13	fe14	fe15	fe16
Trunk 1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
GE Trunking																
Trunk 3	<input checked="" type="radio"/> Static <input type="radio"/> LACP <input type="radio"/> Disable	<input type="button" value="Submit"/>														
Note: 4 ports maximum per trunk																

**Figure 47: Port Trunking – Interface 1**

## **Version 2 (see [Figure 48](#))**

To create a static trunk consisting of 100Mbps ports:

1. Click on the checkbox for each desired port in a particular trunk.
2. Click on the **Submit** button.

To create a static trunk consisting of 1000Mbps ports (see [Figure 48](#)):

1. In the **GE Trunking** section, click on the checkbox for each desired port in a particular trunk.
2. Click on the **Submit** button.

		Static Channel Group																								
		port 1	port 2	port 3	port 4	port 5	port 6	port 7	port 8	port 9	port 10	port 11	port 12	port 13	port 14	port 15	port 16	port 17	port 18	port 19	port 20	port 21	port 22	port 23	port 24	
Trunk 1		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Trunk 2		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Trunk 3		<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>						
Trunk 4		<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>									
Trunk 5		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>									
Trunk 6		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>								

Note: 8 ports maximum per trunk

GE Trunking				
	port 1	port 2	port 3	port 4
Trunk 7	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Trunk 8	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Note: 4 ports maximum per trunk

**Figure 48: Port Trunking – Interface 2**

## **LACP Trunking**

To navigate to the **LACP Trunking** menu:

1. Click on the **+** next to **Trunking**.

2. Click on **LACP Trunking**.

There are 2 interfaces for Port Trunking supported, depending on the model of EtherWAN Managed switch.

**Version 1** (see [Figure 49](#))

To create a LACP trunk:

1. In the **Trunk Configuration** section, select a port in the LACP trunk.
2. Select **LACP** from the Trunk Type dropdown box for this port.
3. Enter an admin key for this port in the **Admin Key** textbox. 100Mbps ports admin keys must be **1** and 1Gbps ports must be **3**.
4. Select the LACP Mode to either **Active** or **Passive**.
5. Enter a value in the **Port Priority** textbox.
6. Select a Timeout value of **Short** or **Long**.
7. Click on the **Submit** button.
8. Repeat steps 1-7 for each additional port that is to be used in the trunk.

To set the LACP System Priority

1. Enter a value between 1 and 65535. The default value is 32768.
2. Click on the **Submit** button.

Port Status :								
Port	Trunk Type	Admin Key	LACP Mode	LACP Port Priority	LACP Timeout	LACP Sync	LACP Sync Port	
fe1	None	None	None	None	None	None	None	
fe2	None	None	None	None	None	None	None	
fe3	None	None	None	None	None	None	None	
fe4	None	None	None	None	None	None	None	
fe5	None	None	None	None	None	None	None	
fe6	None	None	None	None	None	None	None	
fe7	None	None	None	None	None	None	None	
fe8	None	None	None	None	None	None	None	
fe9	LACP	1	Active	None	Long	Not sync	NA	
fe10	LACP	1	Active	None	Long	Not sync	NA	
ge1	None	None	None	None	None	None	None	
ge2	None	None	None	None	None	None	None	

Trunk Configuration :								
Port	Trunk Type	Admin Key (FE ports:1) (GE ports:3)	LACP Mode	LACP Port Priority (Set 0 for None)	LACP Timeout			
fe9 ▾	LACP ▾	1	Active ▾					Long ▾

Note: 4 ports maximum per trunk Update Setting

LACP System Priority (1-65535, default:32768)
32768
<input type="button" value="Submit"/>

**Figure 49: LACP Trunking Interface 1**

#### Version 2 (see [Figure 50](#))

To create a LACP trunk:

1. In the **Trunk Configuration** section, select a port in the LACP trunk.
2. Select **LACP** from the Trunk Type dropdown box for this port.
3. Enter an admin key for this port in the **Admin Key** textbox. 100Mbps ports admin keys must be between 1-6 and 1Gbps ports must be between 7-8.
4. Select the LACP Mode to either **Active** or **Passive**.
5. Enter a value in the **Port Priority** textbox.

6. Select a Timeout value of **Short** or **Long**.
7. Click on the **Submit** button.
8. Repeat steps 1-7 for each additional port that is to be used in the trunk.

Port Status :							
Port	Trunk Type	Admin Key	LACP Mode	LACP Port Priority	LACP Timeout	LACP Sync	LACP Sync Port
1	None	None	None	None	None	None	None
2	None	None	None	None	None	None	None
3	None	None	None	None	None	None	None
4	Static	2	None	None	None	None	None
5	Static	2	None	None	None	None	None
6	Static	2	None	None	None	None	None
7	Static	3	None	None	None	None	None
8	Static	3	None	None	None	None	None
9	Static	3	None	None	None	None	None
10	Static	4	None	None	None	None	None
11	Static	4	None	None	None	None	None
12	Static	4	None	None	None	None	None
13	Static	5	None	None	None	None	None
14	Static	5	None	None	None	None	None
15	Static	5	None	None	None	None	None
16	Static	5	None	None	None	None	None
17	Static	5	None	None	None	None	None
18	Static	5	None	None	None	None	None
19	Static	6	None	None	None	None	None
20	Static	6	None	None	None	None	None
21	Static	6	None	None	None	None	None
22	None	None	None	None	None	None	None
23	None	None	None	None	None	None	None
24	None	None	None	None	None	None	None
25	None	None	None	None	None	None	None
26	LACP	7	active	1	long	Not Sync	NA
27	None	None	None	None	None	None	None
28	LACP	7	active	1	long	Not Sync	NA

Trunk Configuration :						
Port	Trunk Type	Admin Key (FE ports:1-6) (GE ports:7-8)	LACP Mode	LACP Port Priority (Set 0 for None)	LACP Timeout	
28	LACP	7	Active	1	Long	

Note: 8 ports maximum per trunk

**Figure 50: LACP Trunking – Interface 2**

# Trunking Configuration Using CLI Commands

## Adding an Interface to a Static Trunk

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

**static-channel-group <static channel>** (1-6 for 100Mbps, 7-8 for 1Gbps ports)

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#interface fe1
switch_a(config-if)#static-channel-group 1
switch_a(config-if)#q
switch_a(config)#q
switch_a#
```

## Adding an Interface to a LACP Trunk

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

**channel-group <LACP Channel> mode <active / passive>**

(LACP Channel is 1-6 for 100Mbps, 7-8 for 1Gbps ports)

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#interface fe1
switch_a(config-if)# channel-group 2 mode passive
switch_a(config-if)#q
switch_a(config)#q
switch_a#
```

## Setting the LACP Port Priority

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **lacp port-priority <1 - 65535>**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#interface f1
switch_a(config)# lacp port-priority 1
switch_a(config)#q
switch_a(config)#q
switch_a#
```

## Setting the LACP Timeout

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **lacp timeout <long / short>**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#interface f1
switch_a(config-if)# lacp timeout long
switch_a(config-if)#q
switch_a(config)#q
switch_a#
```

# STP/RING PAGE – OVERVIEW

## Choosing the Spanning Tree Protocols

The Spanning Tree algorithm works by designating a single switch (The Root Bridge) in the network, as the root or the parent to all the switches. All the switches in the network will use the same algorithm to form unique paths all the way back to the Root Bridge. Some switches establish a blocking point (a port on a switch) somewhere along the path to prevent a loop. There are 3 versions of the Spanning Tree protocol, STP, RSTP, MSTP, and they are all backwards compatible with each other.

## Spanning Tree Protocol (STP)

This is the original Spanning Tree protocol, and it has been superseded by both the RSTP and MSTP protocol. It is based on a network with a maximum diameter of no more than 17 switches. It uses timers to synchronize any changes in the network topology, and this could take minutes. It is not recommended that you use this version of the Spanning Tree protocol.

## Rapid Spanning Tree protocol (RSTP)

The RSTP protocol is the new enhanced version of the original STP protocol. It uses an enhanced negotiation mechanism to directly synchronize any topology changes between switches; it no longer uses timers as in the original STP protocol, which results in a faster re-convergence time. The maximum allowed network diameter for the RSTP protocol is 40 switches.

## Multiple Spanning Tree Protocol (MSTP)

The MSTP protocol extends the RSTP protocol by simultaneously running multiple instances of the Spanning Tree Protocol and mapping different VLANs to each instance, thus providing load balance across multiple switches. The MSTP protocol accomplishes this by creating new extended sections within the RSTP protocol, called Regions. Each region runs its own instance of the Spanning Tree Protocol. Within each Region, the MSTP protocol can accommodate a network diameter of up to 40 switches. There can be a maximum of 40 Regions in a single MSTP network.



**Note:** If a faster recovery time is required, EtherWAN's proprietary Alpha-Ring provides a recovery time of <15MS with up to 250 switches. See [STP/Ring Page - Alpha Ring](#) on page [141](#) for more information.

# STP/RING PAGE - CONFIGURING RSTP

## Global Configuration Page

To navigate to the **STP/Ring Global Configuration** page:

1. Click on the + next to **STP/Ring**.
2. Click on **Global Configuration**.

## Enabling the RSTP Protocol

RSTP is enabled by Default. If RSTP has been disabled and you wish to enable it (see [Figure 51](#)):

1. Click the dropdown box next to **Spanning Tree** Protocol and choose **Enable**.
2. Click on the dropdown box next to **STP Version** and select **RSTP**.
3. Click on the **Update Setting** button.

## Additional Global Configuration page settings

- **Bridge Priority** – Bridge Priority is used to set the Root and backup Root Bridge. For more details see [The Root Bridge & Backup Root Bridge](#).
  - Default is 32768. Range is 0 to 61440.
- **Hello Time** – This tells how often a BPDU (Bridge Protocol Data Unit) is sent (see [Bridge Protocol Data Units](#)). Default is 2 seconds. Range is 1 to 10 seconds.
- **Max Age** – Default is 20. Hop count limit for BPDU packets (see [Setting the MAX Age, Forward Delay and Hello Timer](#)),
- **Forward Delay** - Default is 15 sec.



**Note:** Bridge Protocol Data Units (BPDUs) are frames that contain information about the Spanning tree protocol (STP). Switches send BPDUs using a unique MAC address from its origin port and a multicast address as destination MAC (01:80:C2:00:00:00). There are three kinds of BPDUs:

- Configuration BPDU, used by Spanning Tree Protocol to provide information to all switches.
- TCN (Topology change), tells about changes in the topology.
- TCA (Topology change Acknowledgment), confirm the reception of the TCN.

The screenshot shows the Management Switch configuration interface with the following navigation tree on the left:

- Management Switch
  - System
  - Diagnostics
  - Port
  - Switching
  - Trunking
  - STP/Ring**
    - Global Configuration
    - RSTP Port Setting
    - MSTP Properties
    - MSTP Instance Setting
    - MSTP Port Setting
    - a -Ring Setting
    - Advanced Setting
  - VLAN
  - QoS
  - ACL
  - SNMP
  - 8021X
  - LLDP
  - Others Protocols

The main panel displays two tables: "Status" and "Setting".

**Status Table:**

Status	
Bridge ID	800000e0b33307bc
Designated Root	800000e0b33307bc
Reg Root ID	
Root Port	0
Root Path Cost	0
Current Max Age (sec)	20
Current Hello Time (sec)	2
Current Forward Delay (sec)	15
Topology Change Count	382
Time Since Last Topology Change	Sun Jan 3 15:59:35 2010

**Setting Table:**

Setting	
Spanning Tree Protocol	<input type="button" value="Enable ▾"/>
Bridge Priority (0..61440)	<input type="text" value="32768"/>
Hello Time (1..10 sec)	<input type="text" value="2"/>
Max Age (6..40 sec)	<input type="text" value="20"/>
Forward Delay (4..30 sec)	<input type="text" value="15"/>
STP Version	<input type="button" value="RSTP ▾"/>


**Figure 51: STP/Ring Global Configuration**

## The Root Bridge & Backup Root Bridge

To configure the Spanning Tree protocol on your network, you will need to setup a Root Bridge and Backup Root Bridge. In order to configure a switch to be the Root Bridge of a Spanning Tree network, you have to make sure that the Bridge Priority (which is the most significant 4 bits of the Bridge ID) of the switch is the lowest among any of the switches on the network. Similarly for the Backup Root Bridge, it must have the next lowest Bridge Priority of all the switches.



**Note:** Since the **Bridge Priority** is the most significant 4 bit of the Bridge ID, the lowest **Bridge Priority** will always be the Root Bridge and the second lowest **Bridge Priority** will be the Backup Root Bridge. If all switches have the same **Bridge Priority**, then The 12 bit System ID or MAC Address (if the system ID's are the same) will be used to determine the Root and Backup Root Bridge (See [below](#)).

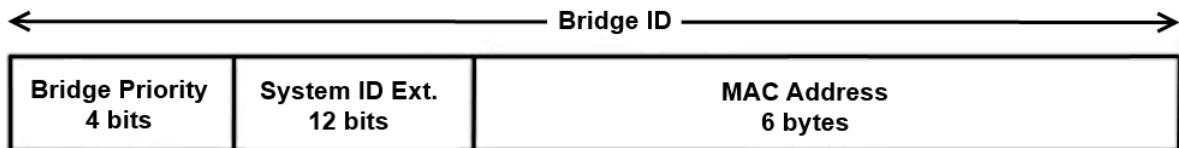

**Figure 52: Bridge ID**

Bridge ID is a concatenation of 3 values: a 4 bit Bridge Priority (most significant), a 12 bit System ID (less significant), and the 48 bit MAC address of the local switch (least significant).

## Setting the Root Bridge and Backup Root Bridge

To navigate to the **STP/Ring Global Configuration** page:

1. Click on the + next to **STP/Ring**.
2. Click on **Global Configuration**.

To set the Bridge Priority:

1. Enter the **Bridge Priority ID** in the text box to the right of **Bridge Priority (0..61440)**
2. Click on the **Update Setting** button.



**Note:** The valid values for this parameter are from 0 to 61440, in increments of 4096; you will see this value reflected in the first hexadecimal digit of the **Bridge ID** field after you click the **Update Setting** button (See [Figure 53](#)). Set this value to be less than any other switch on the network, in order to make this switch the Root Switch. To set a **Backup Root Bridge** set the **Bridge ID** to be between the **Root Bridge** and the rest of the network switches.

Status	
Bridge ID	800000e0b33307bc
Designated Root	800000e0b33307bc
Reg Root ID	
Root Port	0
Root Path Cost	0
Current Max Age (sec)	20
Current Hello Time (sec)	2
Current Forward Delay (sec)	15
Topology Change Count	382
Time Since Last Topology Change	Sun Jan 3 15:59:35 2010

**Figure 53: Bridge ID Display**

## Setting the MAX Age, Forward Delay and Hello Timer

To navigate to the **STP/Ring Global Configuration** page:

1. Click on the + next to **STP/Ring**.
2. Click on **Global Configuration**.

### The Network Diameter

The Diameter of a network depends on the type of topology your network uses. In a ring topology, the Network Diameter is the total number of switches in a network minus the Root Bridge. In a star topology, the Network Diameter is the maximum number of hops to get from Root Bridge to the switch that is the most hops away. In the RSTP protocol, the **Max Age** parameter is used as a hop count limit on how far the Spanning Tree protocol packet can propagate throughout the network topology, therefore, it must be configured with a value that is greater than the network diameter.

### Relationship between Max Age, Forward Delay and Hello Time

The following rules must be followed when setting the **Max Age**, **Forward Delay** and **Hello Timer**:

- $\text{Max Age} \geq 2 \times (\text{Hello Time} + 1.0 \text{ second})$
- $2 \times (\text{Forward Delay} - 1.0 \text{ second}) \geq \text{Max Age}$

To change the **Max Age**, **Forward Delay** and **Hello Timer** (see [Figure 54](#)):

1. Enter the **Max Age** in the text box to the right of Max Age (6..40 sec) label.

2. Enter the **Hello Time** in the text box to the right of the Hello Time (1..10 sec) label.
3. Enter the **Forward Delay** in the text box to the right of the Forward Delay (4..30 sec) label.
4. Click on the **Update Setting** button.
5. Save the configuration (see the [Save Configuration Page](#))

Setting	
Spanning Tree Protocol	<input type="button" value="Enable"/>
Bridge Priority (0..61440)	<input type="text" value="4096"/>
Hello Time (1..10 sec)	<input type="text" value="2"/>
Max Age (6..40 sec)	<input type="text" value="30"/>
Forward Delay (4..30 sec)	<input type="text" value="16"/>
STP Version	<input type="button" value="RSTP"/>
<input type="button" value="Update Setting"/>	

**Figure 54: Max Age, Hello Timer & Forward Delay**

## RSTP Port Setting Page

To navigate to the **STP/Ring RSTP Port Setting** page:

1. Click on the + next to **STP/Ring**.
2. Click on **RSTP Port Setting**.

### Spanning Tree Port Roles

In a stable RSTP topology, each port on a switch can function in any one of 4 different Spanning Tree port roles. These Spanning Tree port roles are (see [Figure 55](#)):

- Root Port
- Designated Port
- Alternate Port
- Backup Port

14	Disabled(Discarding)	128	200000	Shared	Conf. Auto / Curr. Edge off
15	Disabled(Discarding)	128	200000	Shared	Conf. Auto / Curr. Edge off
16	Disabled(Discarding)	128	200000	Shared	Conf. Auto / Curr. Edge off
17	Disabled(Discarding)	128	200000	Shared	Conf. Auto / Curr. Edge off
18	Disabled(Discarding)	128	200000	Shared	Conf. Auto / Curr. Edge off
19	Disabled(Discarding)	128	200000	Shared	Conf. Auto / Curr. Edge off
20	Disabled(Discarding)	128	200000	Shared	Conf. Auto / Curr. Edge off
21	Disabled(Discarding)	128	200000	Shared	Conf. Auto / Curr. Edge off
22	Disabled(Discarding)	128	200000	Shared	Conf. Auto / Curr. Edge off
23	Disabled(Discarding)	128	200000	Shared	Conf. Auto / Curr. Edge off
24	Disabled(Discarding)	128	200000	Shared	Conf. Auto / Curr. Edge off
25	Rootport(Forwarding)	128	200000	Point to Point	Conf. Auto / Curr. Edge off
26	Designated(Forwarding)	128	20000	Point to Point	Conf. Auto / Curr. Edge off
27	Backup(Discarding)	128	20000	Point to Point	Conf. Auto / Curr. Edge off
28	Alternate(Discarding)	128	200000	Point to Point	Conf. Auto / Curr. Edge off

Figure 55: Spanning Tree Port Roles

## Path Cost & Port Priority

By default, each port on a Spanning Tree switch will be assigned a **Path Cost** based on the port's transmission speed according to the IEEE standard below:

Link speed	Recommended value
Less than or equal 100Mb/s	200,000,000
1 Mb/s	20,000,000
10 Mb/s	2,000,000
100 Mb/s	200,000
1 Gb/s	20,000
10 Gb/s	2,000
100 Gb/s	200
1 Tb/s	20
10 Tb/s	2

By default each port on a Spanning Tree switch will be assigned a Port Priority of 128, according to the IEEE standard. This Port Priority is part of the Port ID, which is a concatenation of 2 values: Port Priority (4 bits) + Interface ID (12 bits) (see [below](#))

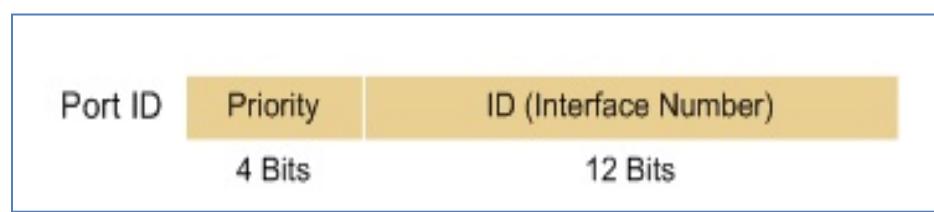


Figure 56: Port ID

Port Priority is part of the Port ID, which is a concatenation of 2 values: Port Priority (4 bits) + Interface ID (12 bits).

The default values will work fine in most scenarios; however, there are times when you may need to adjust these values manually in order to influence the location of the Alternate Port, the Root Port or the Backup Port.

To adjust the Port Priority value or the Path Cost value on a port:

1. Choose the correct port from the drop down list under **Port** (see [below](#))
2. Enter the proper value under the **Priority (Granularity 16)**
  - a. The Port Priority range is between 0 and 240 in multiples of 16.
3. Enter the proper value under the **Admin. Path Cost** entry field.
  - a. The Path Cost range is between 1 and 200,000,000.
4. Click on the **Update Setting** button
5. Save your configuration (see the [Save Configuration Page](#)).

Port	Port Status	Priority	Path Cost	Point to Point Link	Edge Port
fe1	Alternate(Discardng)	128	200000	Point to Point	Conf. Auto / Curr. Edge off
fe2	Disabled(Discardng)	128	200000	Shared	Conf. Auto / Curr. Edge off
fe3	Disabled(Discardng)	128	200000	Shared	Conf. Auto / Curr. Edge off
fe4	Disabled(Discardng)	128	200000	Shared	Conf. Auto / Curr. Edge off
fe5	Disabled(Discardng)	128	200000	Shared	Conf. Auto / Curr. Edge off
fe6	Disabled(Discardng)	128	200000	Shared	Conf. Auto / Curr. Edge off
fe7	Disabled(Discardng)	128	200000	Shared	Conf. Auto / Curr. Edge off
fe8	Disabled(Discardng)	128	200000	Shared	Conf. Auto / Curr. Edge off
fe9	Disabled(Discardng)	128	200000	Shared	Conf. Auto / Curr. Edge off
fe10	Rootport(Forwarding)	128	200000	Point to Point	Conf. Auto / Curr. Edge off
fe11	Disabled(Discardng)	128	200000	Shared	Conf. Auto / Curr. Edge off
fe12	Disabled(Discardng)	128	200000	Shared	Conf. Auto / Curr. Edge off
fe13	Disabled(Discardng)	128	200000	Shared	Conf. Auto / Curr. Edge off
fe14	Disabled(Discardng)	128	200000	Shared	Conf. Auto / Curr. Edge off
fe15	Disabled(Discardng)	128	200000	Shared	Conf. Auto / Curr. Edge off
fe16	Disabled(Discardng)	128	200000	Shared	Conf. Auto / Curr. Edge off
ge1	Disabled(Discardng)	128	20000	Shared	Conf. Auto / Curr. Edge off
ge2	Disabled(Discardng)	128	20000	Shared	Conf. Auto / Curr. Edge off

RSTP Port Configuration

Port	Priority(Granularity 16)	Admin. Path Cost	Point to Point Link	Edge Port
fe1	128	200000	Enable	Auto

Update Setting

**Figure 57: Port Priority and Path Cost**

## Point to Point Link

By default, RSTP will assume any full-duplex link as a **Point to Point Link**, but if the switch detects that the neighbor switch is not running the RSTP protocol, it will assume the port to be a **Shared Port**. You can force a port to be a **Shared Port**, if you know in advance that there will be more than one switch connecting to this link (through an unmanaged switch, for example), or if you know in advance that the other switch on this link will be running the older STP protocol.

To manually force a port to be a **Shared Port** or a **Point to Point Link**:

1. Choose the correct port from the drop down list under **Port**, and choose **Enable** or **Disable** under **Point to Point Link** (see [Figure 57](#)).
2. Click on the **Update Setting** button.
3. Save the configuration (see the [Save Configuration Page](#))

## Edge Port

By enabling the **Edge Port** feature on a port, the switch will stop reacting to any linkup event on this port, and will not send out any Topology Change notification to the neighbor bridges.

1. Choose the correct port from the drop down list under **Port**, and choose **Enable** or **Disable** under **Edge Port** (see Figure 57).
2. Click on the **Update Setting** button.
3. Save the configuration (see the [Save Configuration Page](#))

# RSTP Configuration Using CLI Commands

## Enabling the Spanning Tree Protocol

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
no bridge shutdown 1  
bridge 1 protocol rstp vlan-bridge
```

Usage Example:

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config)#no bridge shutdown 1  
switch_a(config)#bridge 1 protocol rstp vlan-bridge
```

```
switch_a (config) #q  
switch_a#
```

## Bridge Priority, Max Age, Forward Delay, and Hello Time

To configure the Bridge Priority, Max Age, Forward Delay, and Hello Time of a Spanning Tree Bridge, use the following CLI commands:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
bridge 1 priority <0-61440>  
bridge 1 max-age <6-40>  
bridge 1 forward-time <4-30>  
bridge 1 hello-time <1-10>
```

Usage Example:

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config) #bridge 1 priority 4096  
switch_a(config) #bridge 1 max-age 20  
switch_a(config) #bridge 1 forward-time 15  
switch_a(config) #bridge 1 hello-time 2  
switch_a(config) #q  
switch_a#
```

## Modifying the Port Priority and Path Cost

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

```
bridge-group 1 path-cost <1-200000000>  
bridge-group 1 priority <0-240>
```

Usage Example:

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config) #interface f1  
switch_a(config-if) #bridge-group 1 path-cost 200000  
switch_a(config-if) #bridge-group 1 priority 128  
switch_a(config-if) #q  
switch_a(config) #q  
switch_a#
```

## **Manually Setting a Port to be a Shared or Point to Point Link**

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

**spanning-tree link-type point-to-point**

**spanning-tree link-type shared**

Usage Example 1: Setting port 1 to be point-to-point:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#interface f1
switch_a(config-if)#spanning-tree link-type point-to-point
switch_a(config-if)#q
switch_a(config)#q
switch_a#
```

Usage Example 2: Setting port 1 to be shared:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#interface f1
switch_a(config-if)#spanning-tree link-type shared
switch_a(config-if)#q
switch_a(config)#q
switch_a#
```

## **Enabling/Disabling a port to be an Edge Port**

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

**spanning-tree edgeport**

**no spanning-tree edgeport**

Usage Example 1: Enabling edge port on port 1:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#interface f1
switch_a(config-if)#spanning-tree edgeport
switch_a(config-if)#q
switch_a(config)#q
switch_a#
```

Usage Example 2: Disabling edge port on port 1:

```
switch_a>enable
switch_a#configure terminal
```

```
switch_a(config) #interface fe1
switch_a(config-if) #no spanning-tree edgeport
switch_a(config-if) #q
switch_a(config) #q
switch_a#
```

## Enabling/Disabling automatic edge detection

CLI Command Mode: **Interface Configuration Mode**

Automatic edge detection is disabled by default.

CLI Command Syntax:  
**spanning-tree autoedge**  
**no spanning-tree autoedge**

# STP/RING PAGE - CONFIGURING MSTP


The MSTP protocol adds a new concept called a **Region** to the Spanning Tree algorithm. Unlike RSTP and STP, inside each MSTP Region, there can be more than one instance of Spanning Tree Protocol running simultaneously. The MSTP protocol can then map multiple VLANs to each instance of Spanning Tree protocol to provide load balancing among the switches. Between Regions, the MSTP runs a single instance of Spanning Tree similar to, and is backward compatible with, the RSTP protocol.

## Global Configuration Page

### Enabling the MSTP Protocol

Navigate to the **STP/Ring Global Configuration** page:


1. Click on the **+** next to **STP/Ring**.
2. Click on **Global Configuration**.
3. Verify that the Spanning Tree Protocol is enabled (see [Figure 58](#)), if not, choose **Enabled** from the **Spanning Tree Protocol** drop down list.
4. Choose **MSTP** in the **STP Version** drop down list.
5. Click on the **Update Setting** button.
6. Save the configuration (see the [Save Configuration Page](#)).

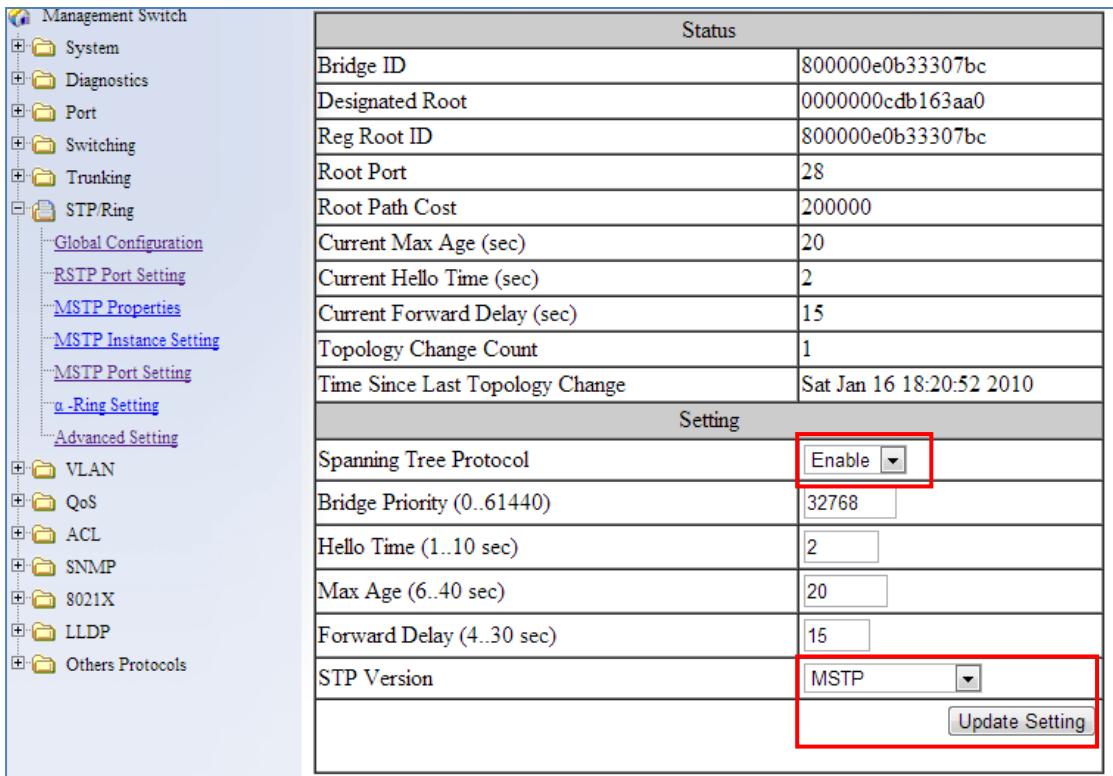

**Figure 58: Enabling MSTP**

### The CIST Root Bridge & Backup CIST Root Bridge

In order to configure a switch to be the CIST Root Bridge of a Spanning Tree network, you just have to make sure that the Bridge Priority (which is the most significant 4 bits of the Bridge ID) of the switch is the lowest among any of the switches on the network. Similarly for the Backup CIST Root Bridge, it must have the next lowest Bridge Priority of all the switches. This Bridge ID is a concatenation of 3 values: a 4 bit Bridge Priority (most significant), a 12 bit System ID (less significant), and the 48 bit MAC address of the local switch (least significant) (see [below](#)).

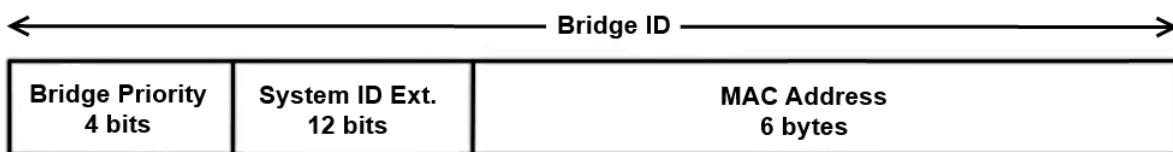

**Figure 59: Bridge ID**

## Setting Bridge Priority

To set the Bridge Priority:

1. Enter the **Bridge Priority ID** in the text box to the right of **Bridge Priority (0..61440)**
2. Click on the **Update Setting** button.



**Note:** The valid values for this parameter are from 0 to 61440, in increments of 4096; you will see this value reflected in the first hexadecimal digit of the **Bridge ID** field after you click the **Update Setting** button (See [Figure 60](#)). Set this value to be less than any other switch on the network, in order to make this switch the Root Switch. To set a **Backup Root Bridge** set the **Bridge ID** to be between the **Root Bridge** and the rest of the network switches.

Management Switch	
+ System	
+ Diagnostics	
+ Port	
+ Switching	
+ Trunking	
+ STP/Ring	
<a href="#">Global Configuration</a>	
<a href="#">RSTP Port Setting</a>	
<a href="#">MSTP Properties</a>	
<a href="#">MSTP Instance Setting</a>	
<a href="#">MSTP Port Setting</a>	
<a href="#">G-Ring Setting</a>	
<a href="#">Advanced Setting</a>	
+ VLAN	
+ QoS	
+ ACL	
+ SNMP	
+ 8021X	
+ LLDP	
+ Others Protocols	
Status	
Bridge ID	800000e0b33307bc
Designated Root	0000000cdb163aa0
Reg Root ID	800000e0b33307bc
Root Port	28
Root Path Cost	200000
Current Max Age (sec)	20
Current Hello Time (sec)	2
Current Forward Delay (sec)	15
Topology Change Count	19
Time Since Last Topology Change	Thu Jan 7 21:52:45 2010
Setting	
Spanning Tree Protocol	Enable <input checked="" type="checkbox"/>
Bridge Priority (0..61440)	32768
Hello Time (1..10 sec)	2
Max Age (6..40 sec)	20
Forward Delay (4..30 sec)	15
STP Version	MSTP <input type="button" value="▼"/>

**Figure 60: Bridge ID Display**

## Configuring the CST Network Diameter

When using MSTP, the **Max Age** parameter is used for the CST (Common Spanning Tree) topology simply as a hop count limit on how far the Spanning Tree protocol packet can propagate throughout the CST topology, therefore, the Max Age must be configured with a value that is greater than the network diameter of the CST topology. The Max Age parameter will need to be configured correctly on both the CIST Root Bridge as well as on the Backup CIST Root Bridge (in the event when the CIST Root Bridge fails).

### Setting the MAX Age, Forward Delay and Hello Timer

Navigate to the **STP/Ring Global Configuration** page:

1. Click on the + next to **STP/Ring**.
2. Click on **Global Configuration**.

### Relationship between Max Age, Forward Delay and Hello Time

The following rules must be followed when setting the **Max Age**, **Forward Delay** and **Hello Timer**:

- $\text{Max Age} \geq 2 \times (\text{Hello Time} + 1.0 \text{ second})$
- $2 \times (\text{Forward Delay} - 1.0 \text{ second}) \geq \text{Max Age}$

To change the **Max Age**, **Forward Delay** and **Hello Timer** (see [Figure 61](#)):

1. Enter the **Max Age** in the text box to the right of Max Age (6..40 sec) label.
2. Enter the **Hello Time** in the text box to the right of the Hello Time (1..10 sec) label.
3. Enter the **Forward Delay** in the text box to the right of the Forward Delay (4..30 sec) label.
4. Click on the **Update Setting** button.
5. Save the configuration (see the [Save Configuration Page](#))

Status	
Bridge ID	100000e0b32103de
Designated Root	100000e0b32103de
Reg Root ID	100000e0b32103de
Root Port	0
Root Path Cost	0
Current Max Age (sec)	30
Current Hello Time (sec)	2
Current Forward Delay (sec)	16
Topology Change Count	1
Time Since Last Topology Change	Fri Jan 1 20:01:56 2010

Setting	
Spanning Tree Protocol	Enable ▾
Bridge Priority (0..61440)	4096
Hello Time (1..10 sec)	2
Max Age (6..40 sec)	30
Forward Delay (4..30 sec)	16
STP Version	MSTP ▾

Figure 61: Max Age, Hello Timer & Forward Delay

## MSTP Properties Page

### Configuring an MSTP Region

In order to form a MSTP Region, the switches that will be connected together to form the MSTP Region must have the same values for the configuration parameters listed below. Two of the parameters can be configured directly, the third parameter (Configuration Digest) will be automatically calculated by the switch based on the **VLAN to MSTI (Multiple Spanning Tree Instance)** mapping. The **VLAN to MSTI** instance mapping must be the same for all the switches within the same **MSTP Region** (see [MSTP Instance Setting Page](#)).

- Region name
- Revision level
- Configuration Digest

To navigate to the **STP/Ring MSTP Properties** page:

1. Click on the + next to **STP/Ring**.
2. Click on **MSTP Properties**.

To configure both the MSTP Regional Configuration Name and the Revision Level for each of the switches located in the same MSTP Region (see [below](#)):

1. Enter the **Region Name** of the Region that the switch will belong to in the **Region Name** entry field,
2. Enter the **Revision Level** value for the corresponding Region in the **Revision Level** entry field,
3. Click on the **Update Setting** button.
4. Save the configuration (see the [Save Configuration Page](#))

MSTP Properties	
Region Name	Region_1
Revision Level	0
Max Hops	20
Digest	0x0A93D2F3DF9DA7495DB99A256750491A
CIST Root ID	100000e0b32103de
CIST Reg Root ID	100000e0b32103de
CIST Bridge ID	100000e0b32103de

**Update Setting**

**Figure 62: MSTP Region and Revision Level**

## Configuring the IST Network Diameter

To navigate to the **STP/Ring MSTP Properties** page:

1. Click on the + next to **STP/Ring**.
2. Click on **MSTP Properties**.

In the MSTP protocol, the **Max Hops** parameter is used for the **IST** (Internal Spanning Tree) and the **MSTI** (Multiple Spanning Tree Instance) topology as a hop count limit on how far the Spanning Tree protocol packet can propagate inside of a MSTP Region, therefore, it must be configured with a value that is greater than the network diameter of the **IST/MSTI** topology. The **Max Hops** parameters should be configured correctly on the CIST Root and the Backup CIST Root switch and on all of the Boundary switches of a MSTP Region (if there are multiple Regions within your MSTP network).

Follow the steps below to configure the **Max Hops** parameter:

1. Enter the desired hop count in the entry field next to **Max Hops**
2. Click on the **Update Setting** button (see [below](#)).
3. Save the configuration (see the [Save Configuration Page](#))

MSTP Properties	
Region Name	Region_1
Revision Level	0
Max Hops	30
Digest	0xA93D2F3DF9DA7495DB99A256750491A
CIST Root ID	100000e0b32103de
CIST Reg Root ID	100000e0b32103de
CIST Bridge ID	100000e0b32103de
<input type="button" value="Update Setting"/>	

**Figure 63: MSTP Properties – Max Hops**

## MSTP Instance Setting Page

### Setting an MSTP Instance

Navigate to the **STP/Ring MSTP Instance Setting** page:


1. Click on the **+** next to **STP/Ring**.
2. Click on **MSTP Instance Setting**.

To create the Spanning Tree instances to be run inside a MSTP Region and its VLAN mappings, follow the below steps.

1. Click on the **VLAN Instance Configuration** button (see [Figure 64](#)),
2. Choose the **VLAN** that you want to map to a MSTI instance from the **VLAN ID** drop down box (see [Figure 65](#)).
3. Enter the **Instance ID** that you want the VLAN to map to In the entry field next to **Instance ID (1..15)**.

4. Click on the **Update Settings** button.
5. Save the configuration (see the [Save Configuration Page](#))

**Note:** You can enter a new instance number here, which is how a new MSTI instance is created. You can use an existing MSTI instance if it has already been created on another switch.

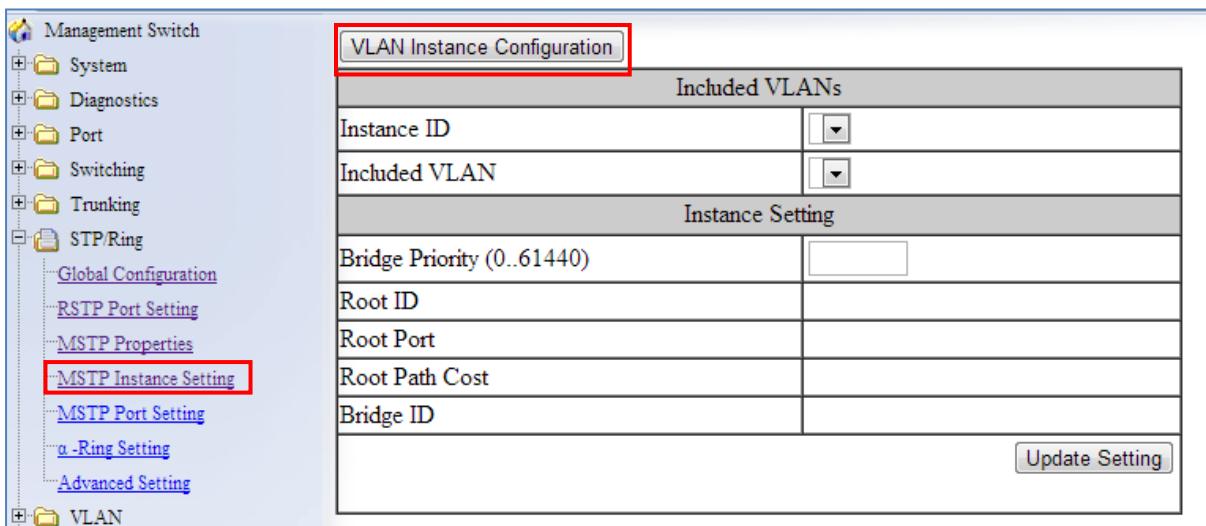

**Figure 64: VLAN Instance Configuration**

VLAN Instance Configuration	
VLAN ID	101
Instance ID (1..15)	1
<b>Update Setting</b>	

**Figure 65: VLAN Instance ID**

## Modifying MSTP parameters for load balancing

To navigate to the **STP/Ring MSTP Instance Setting** page:

1. Click on the + next to **STP/Ring**.
2. Click on **MSTP Instance Setting**.

To load balance switches within a MSTP Region, set different switches within the MSTP Region to be the Root Bridge for different MSTI instances. A Root Bridge in a particular MSTI instance is called a MSTI Regional Root Bridge.

To designate a specific switch in a MSTP Region to be the Root Bridge in a specific MSTI instance, the bridge priority must be set to be the lowest number of all the switches in a particular MSTI instance.

To set the bridge priority on the switch for a specific MSTI Instance (see [Figure 66](#)):

1. Choose the particular instance in the **Instance ID** drop down list for which the switch will be a MSTI Regional Root Bridge;
2. Enter the desired value in the **Bridge Priority** text box
3. Click on the **Update Setting** button. The valid values for this parameter are from 0 to 61440, in increments of 4096.
4. Save the configuration (see the [Save Configuration Page](#))

The screenshot shows the 'VLAN Instance Configuration' page. At the top, there's a header 'Included VLANs'. Below it, there are two dropdown menus: 'Instance ID' (set to 1) and 'Included VLAN'. A red box highlights these two fields. Underneath is a section titled 'Instance Setting' with a table:

Bridge Priority (0..61440)	4096
Root ID	100100e0b32103e4
Root Port	0
Root Path Cost	0
Bridge ID	100100e0b32103e4

At the bottom right of the table is a blue 'Update Setting' button.

**Figure 66: Setting the MSTI Regional Root Bridge**

## MSTP Port Setting page

### Adjusting the blocking port in a MSTP network

To navigate to the **STP/Ring MSTP Port Setting** page:

1. Click on the + next to **STP/Ring**.
2. Click on **MSTP Port Setting**.

You can adjust the location of the blocking port in a MSTP network by modifying the **Port Priority** and the **Path Cost** of the ports on the switch. Modifying the **Port Priority** adjusts the blocking port between two switches. Modify the **Port Cost** adjusts the location of the blocking port in a MSTP loop.

To modify the Port Priority and the Path Cost of the ports on a MSTP switch for the MSTI instance only, follow these steps:

1. Choose the correct MSTI Spanning Tree instance from the drop down list under **Instance ID** (see [Figure 67](#)).
2. Choose the correct port number from the drop down list under **Port**, and enter the proper value under the **Priority** and the **Admin. Path Cost** text box,
3. Click on the **Update Setting** button (see [Figure 67](#)).
4. Save the configuration (see the [Save Configuration Page](#))

Port Instance Configuration								
Instance ID <input type="button" value="1"/>								
Port	Port State	Role	Priority	Path Cost	Designated Bridge ID	Designated Port ID	Designated Root ID	Designated Path Cost
1	Forwarding	Designated	128	200000	100100e0b32143b4	8001	100100e0b32143b4	0
2	Discarding	Disabled	112	100000	00000000000000000000	0	00000000000000000000	0
3	Discarding	Disabled	128	200000	00000000000000000000	0	00000000000000000000	0
4	Discarding	Disabled	128	200000	00000000000000000000	0	00000000000000000000	0
5	Discarding	Disabled	128	200000	00000000000000000000	0	00000000000000000000	0
6	Discarding	Disabled	128	200000	00000000000000000000	0	00000000000000000000	0
7	Discarding	Disabled	128	200000	00000000000000000000	0	00000000000000000000	0
8	Discarding	Disabled	128	200000	00000000000000000000	0	00000000000000000000	0

MSTP Port Configuration								
Port	Priority(Granularity 16)			Admin. Path Cost				
<input type="button" value="2"/>	112				100000			<input type="button" value="Update Setting"/>

**Figure 67: Port Cost & Priority**

## MSTI Instance Port Membership

To navigate to the **STP/Ring MSTP Port Settings** page:

1. Click on the + next to **STP/Ring**.
2. Click on **MSTP Port Setting**.

If changes have been made to the port membership of a VLAN, you must also reconfigure the MSTI port membership for the MSTI instance that the VLAN maps to.

To reconfigure the MSTI instance port membership:

1. Click on the **Port Instance Configuration** button (see [Figure 68](#))
2. Choose the correct MSTI instance from the drop down list next to **Instance ID** (see [Figure 69](#)).
3. Check the box next to all the ports that should be part of this instance
4. Click on the **Update Setting** button.
5. Save the configuration (see the [Save Configuration Page](#))

Port	Port State	Role	Priority	Path Cost	Designate Bridge ID
1					
2					
3					
4					
5					
6					
7					
8					

Figure 68: Port Instance Configuration

Port
Port 1
Port 2
Port 3
Port 4
Port 5
Port 6
Port 7
Port 8

Instance ID

Update Setting

Figure 69: Port Instance - Adding Ports

## MSTP Configuration Using CLI Commands

### Enabling Spanning Tree for MSTP

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
no bridge shutdown 1
bridge 1 protocol mstp
```

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#no bridge shutdown 1
switch_a(config)#bridge 1 protocol mstp
switch_a(config)#q
switch_a#
```

## Bridge Priority, Max Age, Forward Delay, and Hello Time

To configure the CIST Bridge Priority, Max Age, Forward Delay, and Hello Time of a Spanning Tree Bridge, use the following CLI commands:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
bridge 1 priority <0-61440>
bridge 1 max-age <6-40>
bridge 1 forward-time <4-30>
bridge 1 hello-time <1-10>
```

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#bridge 1 priority 4096
switch_a(config)#bridge 1 max-age 20
switch_a(config)#bridge 1 forward-time 15
switch_a(config)#bridge 1 hello-time 2
switch_a(config)#q
switch_a#
```

## Configure IST MAX Hops

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **bridge 1 max-hops <1-40>**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#bridge 1 max-hops 20
```

```
switch_a(config)#q  
switch_a#
```

## MSTP Regional Configuration Name and the Revision Level

CLI Command Mode: **MSTP Configuration Mode**

CLI Command Syntax:

```
bridge 1 region <region_name>  
bridge 1 revision <revision_number>
```

Usage Example:

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config)#spanning-tree mst configuration  
switch_a(config-mst)#bridge 1 region R1  
switch_a(config-mst)#bridge 1 revision 0  
switch_a(config-mst)#q  
switch_a(config)#q  
switch_a#
```

## Creating an MSTI Instance

To create a MSTI instance and map it to a VLAN, use the following CLI commands:

CLI Command Mode: **MSTP Configuration Mode**

CLI Command Syntax: **bridge 1 instance <1-15> vlan <vlan\_ID>**

Usage Example:

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config)#spanning-tree mst configuration  
switch_a(config-mst)#bridge 1 instance 1 vlan 10  
switch_a(config-mst)#q  
switch_a(config)#q  
switch_a#
```

## Setting MSTI Priority

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **bridge 1 instance <1-15> priority <0-61440>**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#bridge 1 instance 1 priority 0
switch_a(config)#q
switch_a#
```

## Modifying CIST Port Priority and Port Path Cost

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

```
bridge-group 1 path-cost <1-200000000>;
bridge-group 1 priority <0-240>
```

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#interface f1
switch_a(config-if)#bridge-group 1 path-cost 200000
switch_a(config-if)#bridge-group 1 priority 128
switch_a(config-if)#q
switch_a(config)#q
switch_a#
```

To modify the MSTI Port Priority and MSTI Port Path Cost for an Instance on a switch, use the below CLI commands:

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

```
bridge-group 1 instance <1-15> path-cost <1-200000000>
bridge-group 1 instance <1-15> priority <0-240>
```

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#interface f1
switch_a(config-if)# bridge-group 1 instance 1 path-cost 20000
switch_a(config-if)# bridge-group 1 instance 1 priority 128
switch_a(config-if)#q
```

```
switch_a (config) #q  
switch_a#
```

## Adding a Port to an MSTI Instance

To add a port to a MSTI instance (this port must be a member port of the VLAN that is mapped to the MSTI instance), use these CLI commands:

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **bridge-group 1 instance <1-15>**

Usage Example:

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config) #interface f1  
switch_a(config-if) #bridge-group 1 instance 1  
switch_a(config-if) #q  
switch_a(config) #q  
switch_a#
```

# STP/RING PAGE - ALPHA RING

## Alpha Ring Setting Page

To navigate to the **STP/Ring Alpha-Ring Settings** page:

1. Click on the + next to **STP/Ring**.
2. Click on **Alpha-Ring Setting**.

### EtherWAN Alpha-Ring Technology

The Alpha-Ring protocol was designed and developed by EtherWAN to overcome traditional STP and RSTP's inability to provide fast network recovery and minimize packet loss caused by link failure. Among the advantages of Alpha-Ring are:

- **High-speed Recovery** – Less than 15 milliseconds
- **Flexibility for Network Deployment** – Coexistence with STP, RSTP and MSTP

- **Ring Coupling** – Smaller rings coupled together through a single switch to increase network efficiency

## Implementing a Simple Alpha-Ring

1. Change the **Ring State** to **Enabled**
2. Click on the **Update Setting** button.

Next, the ports that will be used to connect this switch to the Alpha-Ring need to be assigned to provide the connection redundancy (see [Figure 70](#)).

1. Change **Ring Port 1** to the port you will be using for the first ring connection
2. Change **Ring Port 2** to the port you will be using for the second ring connection.
3. Click on the **Update Setting** button.
4. Save the configuration (see the [Save Configuration Page](#))

Ring State	<input type="button" value="Enable"/>	<input type="button" value="Update Setting"/>
Ring V2 State	<input type="button" value="Disable"/>	
Defined Block State	<input type="button" value="Disable"/>	
Restore-Block (4..300 sec)	4	
<input type="button" value="Update Setting"/>		
Set Ring Port	<input type="button" value="Ring Port 1"/> <input type="button" value="fe1"/>	<input type="button" value="Ring Port 2"/> <input type="button" value="fe2"/>
Ring Port State	FORWARD	DOWN
Block Port	Port1	Port2
<input type="button" value="Update Setting"/>		

**Figure 70: Alpha-Ring Settings**

## Alpha-Ring V2

The Alpha-ring protocol will automatically set the last connected link to BLOCK status. However, sometimes you may need to keep a specific link in a FORWARD state. An example would be where a port was connected to a high capacity fiber link – overall network performance would benefit by keeping that link running. Alpha-ring V2 allows you to manually define the port in the ring topology that will be set to BLOCK state. If a link in the ring fails, the pre-defined blocked port will be set to a forward state in less than 15

milliseconds. When the failed link is restored, the pre-defined block port will return to a BLOCK state in the time defined by the **Restore-Block** variable.

To pre-define the block port (See Figure 69):

1. Set the Ring V2 State to **Enable**.
2. Set the **Defined Block State** to **Enable**.
3. Enter **Restore-Block** time in seconds.
4. Click **Update Setting**
5. Select the Ring port that you want to block by clicking the radio button underneath that port. Then click the corresponding **Update Setting** button.

The Alpha-Ring V2 protocol must be enabled on all switches in ring. However, the **Defined Block State** should only be enabled on the switch that has the port you want to set as blocked.

Ring V2 State	<input style="width: 100%; height: 30px; border: 1px solid #ccc; border-radius: 5px; font-size: 10px; font-weight: bold; background-color: #f0f0f0;" type="button" value="Enable"/>	
Defined Block State	<input style="width: 100%; height: 30px; border: 1px solid #ccc; border-radius: 5px; font-size: 10px; font-weight: bold; background-color: #f0f0f0;" type="button" value="Enable"/>	
Restore-Block (4..300 sec)	4	
<input style="width: 100%; height: 30px; border: 2px solid red; border-radius: 5px; font-size: 10px; font-weight: bold; background-color: #e0e0e0;" type="button" value="Update Setting"/>		
Set Ring Port	Ring Port 1 <input style="width: 100%; height: 30px; border: 1px solid #ccc; border-radius: 5px; font-size: 10px; font-weight: bold; background-color: #f0f0f0;" type="button" value="fe1"/>	Ring Port 2 <input style="width: 100%; height: 30px; border: 1px solid #ccc; border-radius: 5px; font-size: 10px; font-weight: bold; background-color: #f0f0f0;" type="button" value="fe10"/>
Ring Port State	FORWARD	FORWARD
Block Port	<input checked="" type="radio"/> Port1	<input type="radio"/> Port2
		<input style="width: 100%; height: 30px; border: 2px solid red; border-radius: 5px; font-size: 10px; font-weight: bold; background-color: #e0e0e0;" type="button" value="Update Setting"/>

**Figure 71: Pre-defining a Block Port with Alpha-Ring V2 Settings**


### Connecting two Alpha-Ring Networks together (Ring Coupling)

To navigate to the **STP/Ring Alpha-Ring Settings** page:

1. Click on the + next to **STP/Ring**.
2. Click on **Alpha-Ring Setting**.

As additional switches are added to a network, it may become necessary to connect multiple Alpha-Ring networks together. This is called **Ring-coupling** and uses two additional Ethernet ports on the switch. To setup Ring-coupling (see [Figure 73](#)):

1. Change the **Ring-coupling state** to **Enable**.
2. Click on the **Update Setting** button next to the Ring-coupling state.
3. Choose the desired port from the dropdown list under **Ring Coupling Port 1**
4. Choose the desired port from the dropdown list under **Ring Coupling Port 2**
5. Click on the **Update Setting** button.
6. Save the configuration (see the [Save Configuration Page](#))

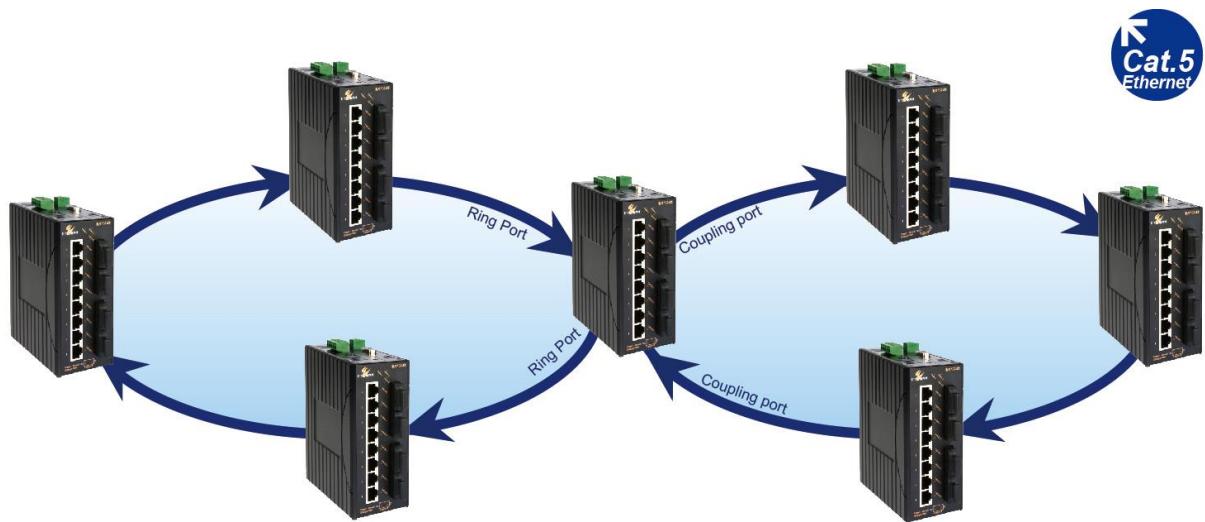

**Figure 72: Ring Coupling Example**

Ring Coupling State	Disable <b>Enable</b>	Update Setting
Set Coupling Port	Coupling Port 1 fe2 ▾	Coupling Port 2 fe3 ▾
Port State	DOWN	DOWN
Update Setting		

**Figure 73: Ring Coupling**

# Configuring Alpha Ring using CLI commands

## Enable Alpha Ring and Alpha Ring V2 Protocols

To enable the Alpha Ring and Alpha Ring V2 protocols, use the following CLI commands:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **bridge 1 ring enable/disable**

**(no) ring v2 enable**

Usage Example 1: Enabling alpha ring

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# bridge 1 ring enable
switch_a(config)#q
switch_a#
```

Usage Example 2: Enabling alpha V2 ring

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# ring v2 enable
switch_a(config)#q
switch_a#
```

## Set the Ring Ports

To configure the ports used in the ring, use the following CLI commands:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **ring set-port <interface1> <interface2>**

**(interface1 and interface2 will be set as ring-port 1 and ring-port 2)**

Usage Example 1:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# ring set-port fe2 fe3
switch_a(config)#q
switch_a#
```

## Show Ring, Port and All States

There are three CLI commands for viewing Alpha Ring statuses:

### CLI Command Mode: **Privileged Exec Mode**

CLI Commands: **show ring state** -- Shows ring service state as enable or disabled.

**show ring port-state** -- Shows whether ring ports are in BLOCK or FORWARD mode.

**show ring all** -- Shows all Alpha and Alpha Ring V2 information.

Usage Example 1:

```
switch_a>enable
switch_a#show ring state
switch_a(config)#
ring enable
switch_a(config)#show ring port-state
ring-port 1 fe2 BLOCK
ring-port 2 fe3 FORWARD
switch_a#show ring all
Ring protocol: Enable
Ring frame type V2: Enable
Ring Defined-Block state: Enable
Ring Restore-Block seconds: 4
Ring coupling protocol: Disable
Port           Interface      Role          State
-----
Ring port 1     fe2           defined-block   Block
Ring port 2     fe3           Forward        Forward
Coupling port 1 fe3           Forward        Down
Coupling port 2 fe4           
```

### Define a Ring's Blocked Port

To define a specific port to be set to BLOCK state, use the following CLI commands:

#### CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **ring set-defined-block <1-2>**

Usage Example 1:

```
switch_a>enable
switch_a#configure terminal
switch_a(config) # ring set-defined-block 1
switch_a(config) #q
switch_a#
```

### Set Delay Time for Restoration of a Failed Port

To set the delay in seconds for the restoration of a failed port, use the following CLI commands:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **ring restore-block <4-300>**

## Enable Ring Coupling

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **(no) ring-coupling enable**

Usage Example 1:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# ring-coupling enable
switch_a(config)#q
switch_a#
```

## Set Ring Coupling Ports

To define the ports that will be used for ring coupling, use the following CLI commands:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **ring set-coupling-port <interface1> <interface2>**

Usage Example 1: Set ports fe7 and fe8 as coupling ports for connection to another ring

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# ring set-coupling-port fe7 fe8
switch_a(config)#q
switch_a#
```

## Show Ring Coupling and Port Coupling States

To view the statuses of ring couplings, use the following CLI commands:

CLI Command Mode: **Privileged Exec Mode**

CLI Command Syntax: **show ring-coupling state**

CLI Command Syntax: **show ring-coupling port-state**

Usage Example 1:

```

switch_a>enable
switch_a# show ring-coupling state
ring-coupling enable
switch_a(config)# show ring-coupling port-state
ring-coupling-port 1 fe7 DOWN
ring-coupling-port 2 fe8 DOWN
switch_a(config)#q
switch_a#

```

## STP/RING PAGE – ALPHA CHAIN

### The Alpha Chain Protocol

Although the Spanning Tree Protocols are very versatile in forming all possible redundant topologies, its re-convergence time is too slow for most mission critical applications. The EtherWAN Alpha Ring protocols can be used in mission critical applications to recover from a link failure in 15 milliseconds or less. However, with the Alpha Ring protocols (Alpha Ring, Alpha Ring-Coupling), the redundant topologies that these protocols can be applied to will be limited to at the most two Rings per switch. Alpha Chain protocol can be used independently, or in conjunction with the Alpha Ring protocols, to form almost limitless redundant topologies, all with the recovering time from a link failure in less than a second. With the Alpha Chain protocol, a redundant network segment can be created anywhere that a single path of daisy-chained switches exists.

### General Overview

To insure that the Alpha Chain protocol will function properly on your network, please follow the minimum configuration guidelines listed below for the two types of Alpha Chain switches (Chain Port switch, Chain-pass-through switch).

There are two types of port configurations used in the Alpha Chain setup. The flexibility of Alpha Chain allows for many different types of topologies to be created.

- **Alpha Chain Port** – Alpha Chain Ports make up the Beginning and End of an Alpha Chain. Each Alpha Chain segment contains a Master and a Slave port. The Master and Slave ports can be on one switch or they can be on two different switches.
- **Chain Pass-Through Port** – Every port that is part of the chain that **is not** a Master or Slave **Alpha Chain** port must be configured as a Chain Pass-Through port.

# Alpha Chain Settings

To navigate to the **STP/Ring Alpha-Chain Settings** page:

1. Click on the + next to **STP/Ring**.
2. Click on **Alpha-Chain Setting**.

## Global Settings

To configure Alpha Chain use the instructions below:

1. **VLAN (91-4096, default: 1)** - In the text entry, enter the VLAN number of a VLAN that is supported on all the switches in the Alpha Chain segment (see Figure 74: Alpha Chain Setting [Figure 74](#)).
2. **Priority (0-255, default:128)** - The Chain Port switch(es) at the ends of an Alpha Chain segment will automatically determine which Chain Port switch should be forwarding and which should be blocking. However, if you should have a preference as to which Chain Port switch should be forwarding on the Alpha Chain segment, then you can enter a priority number in the range of **0-255**, in the entry field, to control if the local switch will be forwarding or blocking.
  - a. Enter a number that is lower than the partner Chain Port switch's Priority setting, if you want the local switch to be the forwarding Chain Port switch.
  - b. Enter a number that is higher than the partner Chain Port switch's Priority setting, if you want the partner Chain Port switch to be the forwarding switch.
3. **Timeout Count (3-255, default:5)** - Enter the number PDUs (protocol data units) that a Chain Port is allowed to miss into the entry field.
  - a. The Alpha Chain protocol works by sending PDUs between two Chain Ports to determine the forwarding and blocking status of each the two Chain Ports at the end points of an Alpha Chain Segment. One PDU is sent every 200 milliseconds. You can configure the number PDUs that a Chain Port is allowed to miss, before the port determines a link failure has occurred.
4. **Storm Control (broadcast and multicast)** - Choose **Disable** or **Enable** from the dropdown list.
  - a. **Warning!** When this option is enabled, all the ports on the switch will have the Storm Control feature automatically enabled.
5. Click on the **Submit** button to load the changes into the running configuration.

Global Setting	
VLAN (1-4094, default:1)	1
Priority (0-255, default:128)	128
Timeout Count (3-255, default:5)	5
Storm Control (broadcast and multicast)	Enable ▾
<input type="button" value="Submit"/>	

**Figure 74: Alpha Chain Setting**

### Configuring the Alpha Chain Ports

1. Check the check box next to the port number of the ports that you want to be configured as a Chain Port (see [Figure 75](#)).
2. Click on the **Submit** button to load the changes into the running configuration.

Chain Protocol			
Port	Enable	Role	State
fe1	<input checked="" type="checkbox"/>	MASTER	FORWARD
fe2	<input checked="" type="checkbox"/>	SLAVE	BLOCK
fe3	<input type="checkbox"/>	None	None
fe4	<input type="checkbox"/>	None	None
fe5	<input type="checkbox"/>	None	None
fe6	<input type="checkbox"/>	None	None
fe7	<input type="checkbox"/>	None	None
fe8	<input type="checkbox"/>	None	None
fe9	<input type="checkbox"/>	None	None
fe10	<input type="checkbox"/>	None	None
ge1	<input type="checkbox"/>	None	None
ge2	<input type="checkbox"/>	None	None
<input type="button" value="Submit"/>			

**Figure 75: Chain Ports – Master and Slave on One Switch**

Chain Protocol			
Port	Enable	Role	State
1	<input type="checkbox"/>	None	None
2	<input type="checkbox"/>	None	None
3	<input type="checkbox"/>	None	None
4	<input checked="" type="checkbox"/>	MASTER	FORWARD
5	<input type="checkbox"/>	None	None
6	<input type="checkbox"/>	None	None
7	<input type="checkbox"/>	None	None
8	<input type="checkbox"/>	None	None

**Figure 76: Chain Ports – Master Chain Port**

## Alpha Chain Pass-Through Ports

To navigate to the **Chain Pass-Through Setting** page:

1. Click on the + next to **STP/Ring**.
2. Click on **Chain Pass-Through Setting**.

To configure the Alpha Chain Pass-Through ports:

1. From the drop-down list below the **Chain Pass-Through Port 1** heading, choose one of the daisy chained ports on the switch to be the Chain Pass-Through Port #1 for the switch.
2. Next, from the drop-down list below the **Chain Pass-Through Port 2** heading choose the remaining daisy chained port on the switch to be the Chain Pass-Through Port #2 for the switch.
3. To change the port number for either of the Chain pass-through ports on the switch, you must first click on the **Disable** button to clear the settings for both Chain Pass-Through ports. Repeat the previous steps to set the new port numbers to be Chain Pass-Through.
4. Click on the **Submit** button to load the changes into the running configuration.

Set Chain Pass-Through Port	Chain Pass-Through Port 1 ---- <input type="button" value="▼"/>	Chain Pass-Through Port 2 ---- <input type="button" value="▼"/>
Chain Pass-Through Port State		
<input type="button" value="Disable"/> <input type="button" value="Update Setting"/>		

## Configuring Alpha Chain using CLI commands

### Storm Control

To disable the automatic enabling of Storm Control feature on all the ports, use the following CLI commands:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **no bridge 1 chain-storm**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# no bridge 1 chain-storm
switch_a(config)#q
switch_a#
```

### Configuring Chain Ports

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

**chain port enable**  
**no chain port**

Usage Example 1: Enabling a chain port

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#in fe6
switch_a(config-if)#chain port enable
```

```
switch_a(config-if)#q  
switch_a(config)#q
```

Usage Example 2: Disabling a chain port

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config)#in fe6  
switch_a(config-if)#no chain port  
switch_a(config-if)#q  
switch_a(config)#q
```

## Configuring Chain Pass-Through Ports

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
chain pass-through <port #1 port #2>  
no chain pass-through
```

Usage Example 1: Enabling chain pass-through

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config)# chain pass-through fe3 fe4  
switch_a(config)#q  
switch_a#
```

Usage Example 2: Disabling chain port pass-through

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config)# no chain pass-through  
switch_a(config)#q  
switch_a#
```

## STP/RING PAGE - ADVANCED SETTING

To navigate to the **STP/Ring Advanced Setting** page:

1. Click on the + next to **STP/Ring**.

- Click on **Advanced Setting**.

## Advanced Bridge Configuration

The Advanced Setting Page contain several settings to determine how the switch will handle BPDU packets.

- Bridge bpdu-guard configuration** - When the BPDU Guard feature is set for a bridge, all portfast-enabled ports of the bridge that have **bpdu-guard** set to default shut down the port on receiving a BPDU. In this case, the BPDU is not processed.
- Error disable timeout configuration** – Enabling this allows a Disabled port to re-enable itself automatically after the specified Interval.
- Interval** – Default is 300 seconds. This is the length of time a port will remain disabled after shutting down due to the **bpdu-guard**.

Advanced Bridge Configuration		
Bridge BPDU-guard configuration	Disable ▾	
Error disable timeout configuration	Disable ▾	
Interval (10..1000000 sec), Default: 300	300	
Advanced Per Port Configuration		
Port	Portfast configuration / status	BPDU-guard configuration
fe1	<input checked="" type="radio"/> Disable <input type="radio"/> Enable / Curr. OFF	Default ▾
fe2	<input checked="" type="radio"/> Disable <input type="radio"/> Enable / Curr. OFF	Default ▾
fe3	<input checked="" type="radio"/> Disable <input type="radio"/> Enable / Curr. OFF	Default ▾
fe4	<input checked="" type="radio"/> Disable <input type="radio"/> Enable / Curr. OFF	Default ▾

Figure 77: Advanced Bridge Configuration

## Advanced Per Port Configuration

- Portfast Configuration / status** – Enabling this for Edge ports (ports connecting to an end device as opposed to another switch) protect the

- **BPDU-Guard Configuration** – When set to **Default** the port will default to the Advanced Bridge Configuration settings. **Enable** or **Disable** to override the Bridge BPDU-Guard

Advanced Bridge Configuration		
Bridge BPDU-guard configuration	Disable <input type="button" value="▼"/>	
Error disable timeout configuration	Disable <input type="button" value="▼"/>	
Interval (10..1000000 sec), Default: 300	300	
Advanced Per Port Configuration		
Port	Portfast configuration / status	BPDUGuard configuration
fe1	<input checked="" type="radio"/> Disable <input type="radio"/> Enable / Curr. OFF	<input type="button" value="Default"/> <input type="button" value="▼"/>
fe2	<input checked="" type="radio"/> Disable <input type="radio"/> Enable / Curr. OFF	<input type="button" value="Default"/> <input type="button" value="▼"/>
fe3	<input checked="" type="radio"/> Disable <input type="radio"/> Enable / Curr. OFF	<input type="button" value="Default"/> <input type="button" value="▼"/>
fe4	<input checked="" type="radio"/> Disable <input type="radio"/> Enable / Curr. OFF	<input type="button" value="Default"/> <input type="button" value="▼"/>
fe5	<input checked="" type="radio"/> Disable <input type="radio"/> Enable / Curr. OFF	<input type="button" value="Default"/> <input type="button" value="▼"/>
fe6	<input checked="" type="radio"/> Disable <input type="radio"/> Enable / Curr. OFF	<input type="button" value="Default"/> <input type="button" value="▼"/>
fe7	<input checked="" type="radio"/> Disable <input type="radio"/> Enable / Curr. OFF	<input type="button" value="Default"/> <input type="button" value="▼"/>
fe8	<input checked="" type="radio"/> Disable <input type="radio"/> Enable / Curr. OFF	<input type="button" value="Default"/> <input type="button" value="▼"/>
ge1	<input checked="" type="radio"/> Disable <input type="radio"/> Enable / Curr. OFF	<input type="button" value="Default"/> <input type="button" value="▼"/>
ge2	<input checked="" type="radio"/> Disable <input type="radio"/> Enable / Curr. OFF	<input type="button" value="Default"/> <input type="button" value="▼"/>
Note: Per port BPDU-guard configuration takes precedence over bridge configuration.		
		<input type="button" value="Submit"/>

Figure 78: Advanced Per Port Configuration

# Configuring Spanning Tree Advanced Settings using CLI commands

## Enabling BPDU Guard Globally

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **bridge 1 spanning-tree portfast bpdu-guard**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config) # bridge 1 spanning-tree portfast bpdu-guard
switch_a(config) #q
switch_a#
```

## Enabling BPDU Guard on a Port

To enable the BPDU Guard feature on an **individual** switch port, use the CLI commands below:

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

**spanning-tree portfast;**  
**spanning-tree portfast bpdu-guard enable**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config) #interface fe1
switch_a(config-if) #spanning-tree portfast
switch_a(config-if) #spanning-tree portfast bpdu-guard enable
switch_a(config-if) #q
switch_a(config) #q
switch_a#
```

## Enabling BPDU Guard Error Disable-timeout

To enable the BPDU Guard Error Disable-timeout feature on a switch port, and set the timeout interval, use the CLI commands below:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
bridge 1 spanning-tree errdisable-timeout enable  
bridge 1 spanning-tree errdisable-timeout interval 300
```

Usage Example:

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config)#bridge 1 spanning-tree errdisable-timeout enable  
switch_a(config)#bridge 1 spanning-tree errdisable-timeout interval  
300  
switch_a(config)#q  
switch_a#
```

## Enabling the Loop Guard Feature

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **spanning-tree guard root**

Usage Example:

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config)#interface f1  
switch_a(config-if)# spanning-tree guard root  
switch_a(config-if)#q  
switch_a(config)#q  
switch_a#
```

# VLAN

## Configuring VLANs

### Add and delete VLANs

To navigate to the **VLAN Setting** page:

1. Click on the **+** next to **VLAN**.
2. Click on **VLAN Setting**.

Add and delete VLANs from this screen.

VLAN Setting		Add VLAN	Delete VLAN
VLAN ID	VLAN NAME		
VLAN1	Default		

Figure 79: VLAN Setting

Clicking the Add VLAN button takes you to the screen shown below. Assign a VLAN number and name, and select **Attach** or **Detach** to the CPU port. Select which ports are to be members of the VLAN, and choose **tagged** or **untagged** for each port. Then click **Submit**.

VLAN ID(2--4093)		VLAN Name	
CPU Port	Attach ▾		
<b>VLAN Setting</b>			
PORT	VLAN Member	Tagged or Untagged	
ge1	<input type="checkbox"/>	Untagged ▾	
ge2	<input type="checkbox"/>	Untagged ▾	
ge3	<input type="checkbox"/>	Untagged ▾	
ge4	<input type="checkbox"/>	Untagged ▾	
ge5	<input type="checkbox"/>	Untagged ▾	
ge6	<input type="checkbox"/>	Untagged ▾	
ge7	<input type="checkbox"/>	Untagged ▾	
ge8	<input type="checkbox"/>	Untagged ▾	
ge9	<input type="checkbox"/>	Untagged ▾	
ge10	<input type="checkbox"/>	Untagged ▾	
ge11	<input type="checkbox"/>	Untagged ▾	
ge12	<input type="checkbox"/>	Untagged ▾	
<input type="button" value="Submit"/>			

**Figure 80: Add VLAN**

## Port Setting

All ports on the switch can be configured with different Port Types that have different tagging restrictions as defined below.

- **Access Port** - If a port is configured to be an Access Port, then this port can only be a member of a single VLAN based on the Access Port's **PVID VLAN** setting, and this port's outgoing packets cannot be modified to contain a VLAN Tag.
- **Trunk Port** - If a port is configured to be a Trunk Port, then this port can be a member of multiple VLANs. This port's outgoing packets will be automatically modified to contain a VLAN tag of the VLAN that the packet belongs to, with the exception of the PVID VLAN on that port. The PVID VLAN on a Trunk Port will not be automatically modified to contain a VLAN tag of the PVID VLAN.
- **Hybrid Port** - A Hybrid Port has no restriction on it. If a port is configured to be a Hybrid Port, then this port can be a member of multiple VLANs, and this port's outgoing packets can be configured to be either with or without a VLAN tag of the VLAN that the packet belongs to, including the PVID VLAN of the Hybrid Port.

For all three types of ports above, if an incoming packet contains a VLAN tag, then the packet's VLAN association rule will be based on the VLAN Tag.

To configure the proper port type and the PVID setting for each switch port:

1. Choose the port type for each port in the drop-down list.
2. Enter the **PVID VLAN** for each port (see below).

3. Enter the **Priority Level** (optional).
4. Click on the **Update Setting** button.
5. Save the configuration (see the [Save Configuration Page](#))

 **Warning:** Modifying the Port Type using the Web GUI will cause that switch port to lose all its current VLAN membership and become a member port for the PVID VLAN only. You will lose your current connection to the switch, should you choose to modify the PVID of the port that connects your Computer to the switch.

VLAN Port Setting				
Port	Mode	PVID	Priority Level	
ge1	Hybrid ▾	1	0	
ge2	Hybrid ▾	1	0	
ge3	Hybrid ▾	1	0	
ge4	Hybrid ▾	1	0	
ge5	Hybrid ▾	1	0	
ge6	Hybrid ▾	1	0	
ge7	Hybrid ▾	1	0	
ge8	Hybrid ▾	1	0	
ge9	Hybrid ▾	1	0	
ge10	Hybrid ▾	1	0	
ge11	Hybrid ▾	1	0	

**Figure 81: Port Setting**

## Tag Based VLAN Configuration Using CLI Commands

### Configuring a 802.1Q VLAN

To configure a 802.1Q VLAN on a switch use the following CLI commands:

CLI Command Mode: **VLAN Database Configuration Mode**

CLI Command Syntax: **vlan NUMBER bridge 1 name NAME state enable**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#vlan database
switch_a(config-vlan)#vlan 100 bridge 1 name Management state enable
switch_a(config-vlan)#vlan 200 bridge 1 name Accounting state enable
switch_a(config-vlan)#vlan 300 bridge 1 name Sales state enable
switch_a(config-vlan)#q
switch_a(config)#q
switch_a#
```

## Configuring an IP Address for a Management VLAN

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **ip address IP\_ADDRESS/PREFIX [e.g. 10.0.0.1/24]**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#interface vlan1.100
switch_a(config-if)#ip address 192.168.100.10/24
switch_a(config-if)#q
switch_a(config)#q
switch_a#
```

## Removing an IP Address from a Management VLAN

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **no ip address**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#interface vlan1.100
switch_a(config-if)#no ip address
switch_a(config-if)#q
switch_a(config)#q
switch_a#
```

## Configuring an Access Port

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **switchport mode access**

CLI Command Syntax: **switchport access vlan <1 – 4094>**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#interface fe1
switch_a(config-if)#switchport mode access
switch_a(config-if)#switchport access vlan 100
switch_a(config-if)#q
switch_a(config)#q
switch_a#
```

## Configuring a Trunk Port

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **switchport mode trunk**

CLI Command Syntax: **switchport trunk allowed vlan [add | all | except | none | remove] VLAN\_ID**

CLI Command Syntax: **switchport trunk native vlan <1-4093>**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#interface fe7
switch_a(config-if)#switchport mode trunk
switch_a(config-if)#switchport trunk allowed vlan add 100,200,300
switch_a(config-if)#switchport trunk native vlan 1
switch_a(config-if)#q
switch_a(config)#q
switch_a#
```

## Add an IP to the Management VLAN

To navigate to the **System/IP Address** page:

1. Click on the **+** next to **System**.
2. Click on **IP Address**.

To add an IP for a Management VLAN:

1. Enter the **IP address** and **subnet mask** for the management VLAN
2. Click on the **Submit** button (see [below](#)).
3. Save the configuration (see the [Save Configuration Page](#))

VLAN ID	IP Address	IP Subnet Mask
1	10.58.7.78	255.255.255.0
100	192.168.100.12	255.255.255.0
Default Gateway	<input type="button" value="Disable ▾"/> <input type="text" value=" "/>	
		<input type="button" value="Apply &amp; Save"/>

**Figure 82: Management VLAN IP Address**

To delete an IP from a VLAN (the default VLAN, for an example):

1. Delete the IP and the subnet mask of the default VLAN and leave it as blank
2. Click on the **Submit** button.



**Warning:** Before completing the steps above, make sure that you have already set up another management IP on another VLAN, and have set up a port properly for accessing that VLAN.

## QoS

QoS (Quality of Service) refers to several related aspects of computer networks that allow the transport of traffic with special requirements. In particular, technology has been

developed to allow computer networks to become as useful as telephone networks for audio conversations, as well as supporting new applications with even stricter service demands. Beyond the audio applications that QoS was originally intended, data traffic such as video or real-time information can benefit from QoS.

QoS as it pertains to the switch can be broken down into two types, CoS and DCSP. CoS or **Class of Service** operates at Layer 2 and was developed by an IEEE working group in the 1990s. CoS uses a 3-bit field called the **Priority Code Point** (PCP) within an Ethernet frame header when using VLAN tagged frames as defined by IEEE 802.1Q. It specifies a priority value between 0 and 7, inclusive that can be used by QoS disciplines to differentiate traffic. Although this technique is commonly referred to as IEEE 802.1p, there is no standard or amendment by that name published by the IEEE. Rather the technique is incorporated into the IEEE 802.1Q standard which specifies the tag inserted into an Ethernet frame.

Eight different classes of service are available as expressed through the 3-bit PCP field in an IEEE 802.1Q header added to the frame. The way traffic is treated when assigned to any particular class is undefined and left to the implementation. The IEEE however has made some broad recommendations:

PCP	Priority	Acronym	Traffic Types
1	0 (lowest)	BK	Background
1	1	BE	Best Effort
2	2	EE	Excellent Effort
3	3	CA	Critical Applications
4	4	VI	Video, < 100 ms latency and jitter
5	5	VO	Voice, < 10 ms latency and jitter
6	6	IC	Internetwork Control
7	7 (highest)	NC	Network Control

The above recommendations are implemented in the **802.1p Priority** submenu.

**DSPC or Diffserv Code Point** uses the first 6 bits in the ToS field of the IP(v4) packet header. This type of QoS is primarily useful if the QoS needs to pass through a router or routers. We will touch on DSPC briefly later in this section.

## Global Configuration Page

### Web GUI Interface

To navigate to the **QoS Global Configuration** page (see [below](#)):

1. Click on the + next to **QoS**.
2. Click on **Global Configuration**.

Mode	
QoS	<input type="button" value="Disable"/>
Trust	<input type="checkbox"/> CoS <input type="checkbox"/> DSCP
Policy	<input type="radio"/> Strict Priority(Queue0-3) <input checked="" type="radio"/> Strict Priority(Queue3) +WRR(Queue0-2) <input type="radio"/> WRR(Queue0-3)

Weighted Round Robin	
Queue	Weight(1~20)
0	1
1	2
2	4
3	8

**Figure 83: Global Configuration**

To Enable the QoS settings:

1. Enable QoS, by selecting the drop-down box to the right of the QoS option.
2. Choose CoS and/or DSCP next to the Trust option.
3. Select the desired option next to Policy:
  - a. **Strict Priority (Queue0-3) – Note:** Not all switches support this mode. Packets must be emptied from the queues in order. Starting with queue 3 and ending with queue 0, the packets in each queue must be completely emptied before the next queue's packets are considered for transmission.
  - b. **Strict Priority(Queue3) +WRR(Queue0-2)** – Packets must be emptied from queue 3 first and the three remaining queues are emptied according the WRR weights in the Weighted Round Robin section (see below).
  - c. **WRR (Queue 0 – 3)** – each queue is allowed to discharge a certain number of packets (according to the WRR weights in the Weighted Round Robin section) before moving to the next queue.
4. Enter the **Weight** for each queue in the Weight Round Robin section
5. Click on the **Submit** button.
6. Save the configuration (see the [Save Configuration Page](#))

**i** **Note: Weighted Round Robin** – There are four text fields, one for each queue (0 – 3). A number from 1 to 20 can be assigned for each queue. This number is used with **WRR** policy and is the value of the number of packets that must be emptied from the queue before the next queue is considered. By default, these values are:

Queue	Weight
0	1
1	2
2	4
3	8

# QoS Global Configuration using the CLI Interface

This section gives information on Command line commands related to QoS and assumes the user has a working knowledge of connecting to the switch using Telnet, SSH or the Serial port. Telnet is enabled by default. To enable or disable Telnet or SSH see the [Management Interface](#) section.

## Enabling/Disabling QoS

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

```
mls qos enable  
no mls qos
```

Usage Example – Enabling QoS:

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config)#int f1  
switch_a(config-if)# mls qos enable  
switch_a(config-if)#q  
switch_a(config)#q  
switch_a#
```

Usage Example – Disabling QoS:

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config)#int f1  
switch_a(config-if)# no mls qos  
switch_a(config-if)#q  
switch_a(config)#q  
switch_a#
```

## Enable/Disable QoS Trust

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
mls qos trust <cos/dscp>  
no qos trust
```

Usage Example – Enable QoS Trust:

```
switch_a>enable  
switch_a#configure terminal
```

```
switch_a(config) # mls qos trust cos
switch_a(config) #q
switch_a#
```

Usage Example – Disable QoS Trust:

```
switch_a>enable
switch_a#configure terminal
switch_a(config) # no mls qos trust
switch_a(config) #q
switch_a#
```

## Configuring the Egress Expedite Queue

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
priority-queue strict
priority-queue out
no priority-queue out
mls qos <WRR_WTS> (4 values separated by spaces. Range is 1-20 (See the
Usage Example).
```

Usage Example – Enable QoS Strict Priority (Queue 0-3):

```
switch_a>enable
switch_a#configure terminal
switch_a(config) # priority-queue strict
switch_a(config) #q
switch_a#
```

Usage Example – Enable QoS Strict Priority (Queue 3) + WWR (Queue 0-2):

```
switch_a>enable
switch_a#configure terminal
switch_a(config) # priority-queue out
switch_a(config) #q
switch_a#
```

Usage Example – Disable QoS Strict Priority:

```
switch_a>enable
switch_a#configure terminal
switch_a(config) # no priority-queue out
switch_a(config) #q
switch_a#
```

Usage Example – The following example specifies the bandwidth ratios of the four transmit queues, starting with queue 0, on the switch. WRR\_WTS Weighted Round Robin (WRR) weights for the 4 queues (4 values separated by spaces). Range is 1-20.

```
switch_a>enable
switch_a#configure terminal
switch_a(config) #mls qos 1 2 4 8
switch_a(config) #q
switch_a#
```

## 802.1p Priority Page

### Web GUI Interface

To navigate to the **QoS 802.1p Priority** page (see [Figure 84](#)):

1. Click on the + next to **QoS**.
2. Click on **802.1p Priority**.

The 802.1p Priority page allows a user to assign the queues to VLAN priorities (see [Global Configuration Page](#) for more information on queues).

Each VLAN priority is expressed as the three-bit PCP field in the 802.1Q header discussed previously. The values shown above are the default values with the higher VLAN priorities corresponding to the higher priority queues.

The screenshot shows a tree-based navigation menu on the left with the following structure:

- Management Switch
- System
- Diagnostics
- Port
- Switching
- Trunking
- STP/Ring
- VLAN
- QoS** (selected)
- Global Configuration
- 802.1p Priority
- DSCP
- ACL

To the right of the menu is a table titled "VLAN Priority" with columns "VLAN Priority" and "Priority". The table contains 8 rows, each with a dropdown menu for selecting a priority value (0, 1, 2, 3, 4, 5, 6, or 7). A "Submit" button is located at the bottom right of the table.

VLAN Priority	Priority
0	0 ▾
1	0 ▾
2	1 ▾
3	1 ▾
4	2 ▾
5	2 ▾
6	3 ▾
7	3 ▾

**Figure 84: 802.1p Priority**

By default, the higher priority queue 3 are assigned to VLAN priorities 6 and 7, queue 2 assigned to VLAN priorities 4 and 5; queue 1 assigned to VLAN priorities 2 and 3; and finally, queue 0 assigned to VLAN priorities 0 and 1.

After making any changes on the page, click on the **Submit** button to ensure that the changes are stored.

## 802.1p Priority Submenu – CLI Interface

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

**wrr-queue cos-map <QUEUE\_ID> <COS\_VALUE>**

Queue ID. Range is 0-3.

COS\_VALUE CoS values. Up to 8 values (separated by spaces).

**Usage Example** The following example shows mapping CoS values 0 and 1 to queue 1 on the switch:

```
switch_a>enable
switch_a#configure terminal
switch_a(config) #wrr-queue cos-map 1 0 1
switch_a(config) #q
switch_a#
```

## DSCP Page – HTTP Interface

The DSCP submenu is much like the 802.1p submenu except there are many more DSCP priorities to choose from and they are all assigned to the lowest-priority queue, 0. For each DSCP priority, the user can change the value of the queue to between 0 and 3. See Figure 3 for more information:

DSCP Priority	Priority						
0	0	1	0	2	0	3	0
4	0	5	0	6	0	7	0
8	0	9	0	10	0	11	0
12	0	13	0	14	0	15	0
16	0	17	0	18	0	19	0
20	0	21	0	22	0	23	0
24	0	25	0	26	0	27	0
28	0	29	0	30	0	31	0
32	0	33	0	34	0	35	0
36	0	37	0	38	0	39	0
40	0	41	0	42	0	43	0
44	0	45	0	46	0	47	0
48	0	49	0	50	0	51	0
52	0	53	0	54	0	55	0
56	0	57	0	58	0	59	0
60	0	61	0	62	0	63	0

**Figure 85: DSCP**

After changing any values on this page, click on the **Submit** button to allow them to take effect.

## DSCP Submenu – CLI Interface

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

**mls qos map dscp-queue <dscp\_value> to <queue\_ID>**

dscp\_value: Up to 8 values (separated by spaces). Range is 0-63.

queue\_ID: Range is 0-3.

Usage Example The following example shows mapping DSCP values 0 to 3 to queue 1 on the switch:

```
switch_a>enable
switch_a#configure terminal
switch_a(config) # mls qos map dscp-queue 0 1 2 3 to 1
switch_a(config)#q
switch_a#
```

## QoS Interface Commands – CLI Interface

To assign a VLAN Priority to an Interface:

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **user-priority <0-7>**

Usage Example The following example shows mapping DSCP values 0 to 3 to queue 1 on the switch:

```
switch_a>enable
switch_a#configure terminal
switch_a(config) #interface f1
switch_a(config-if) user-priority 4
switch_a(config-if)#q
switch_a(config) #
```

# IP ACL (ACCESS CONTROL LIST)

The settings in the ACL feature of the EtherWAN switch can be used to control which packets are allowed to enter the switch (Packet Filtering), as well as to control the amount of bandwidth that can be allocated for those packets (Bandwidth Policing).

## Configuring IP ACL

To navigate to the **ACL/ACL Configuration** page:

1. Click on the **+** next to **ACL**.
2. Click on **IP ACL**

In order to enable the ACL feature on the EtherWAN switch, the [QoS feature](#) must be enabled on the switch as well.

To configure an IP Access List (See below figure):

1. Enter a number for the ACL, and then select **deny** or **permit**.
2. Select the type **standard** or **exended**.
3. Enter the **source address** and the **source wildcard mask**.
4. Enter source port (or select **any**), and (**eq**, **gt**, **lt**, **neq**). (eq = equal to, gt = greater than, lt= less than, neq = not equal)
5. For the destination, select **Address**, **Any** or **Host**.
6. If Address was selected, **Destination Address**, and the **Destination Wildcard Mask**.
7. Enter the **Destination Port** and the **Destination Port (Maximum)**.
8. Select the IP Protocol and then click **Add**.

Add IP Access List			
Number	<input type="text"/>		
Action	Permit ▾		
Type			
<input checked="" type="radio"/> Standard <input type="radio"/> Extended			
Source			
<input checked="" type="radio"/> Address <input type="radio"/> Any <input type="radio"/> Host			
Source Address	<input type="text"/>		
Source Wildcard Mask	<input type="text"/>		
Source Port <input checked="" type="radio"/> any	<input type="text"/> (0-65535) <input type="radio"/> eq <input type="radio"/> gt <input type="radio"/> lt <input type="radio"/> neq		
Source Port (Max)	<input type="text"/> <input type="radio"/> range		
Destination			
<input checked="" type="radio"/> Address <input type="radio"/> Any <input type="radio"/> Host			
Destination Address	<input type="text"/>		
Destination Wildcard Mask	<input type="text"/>		
Destination Port <input checked="" type="radio"/> any	<input type="text"/> (0-65535) <input type="radio"/> eq <input type="radio"/> gt <input type="radio"/> lt <input type="radio"/> neq		
Destination Port (Max)	<input type="text"/> <input type="radio"/> range		
IP Protocol			
<input checked="" type="radio"/> TCP(6) <input type="radio"/> UDP(17) <input type="radio"/> Other <input type="text"/> (0-255) <input type="radio"/> Any			
<input type="button" value="Add"/>			
eq - Equal,gt - Greater Than,lt - Less Than,neq - Not Equal			
IP Access List			
Select	Number	Action	Rules
			<input type="button" value="Delete"/>

**Figure 86: IP ACL Configuration**

## Port ACL Settings

To navigate to the **Port ACL Settings** page:

1. Click on the + next to **ACL**.
2. Click on **Port ACL Settings**

To configure a port with an ACL, simply select the existing ACL, and the port number with which you want to associate it. Then click **Update Setting**.

Attach ACL to a Port			
Interface	--	Direction	
Access List		Inbound	
			<input type="button" value="Update Setting"/>

Per-Port ACL Setting

Select	Interface	Access List	Direction
			<input type="button" value="Delete"/>

**Figure 87: Port ACL Settings**

## ACL Configuration Using CLI Commands

### Enabling QoS

To enable the ACL feature on the EtherWAN switch by enabling the QoS feature on the switch, just follow the steps below:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **mls qos enable**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# mls qos enable
switch_a(config)#q
switch_a#
```

### Creating a Standard IP Access List

To create a new Standard IP Access List to allow or deny an IP address/range access to the switch, use the following CLI commands with the Access list ID in the range from 1 – 99, or from 1300 – 1999:

### CLI Command Mode: Global Configuration Mode

CLI Command Syntax:

```
ip-access-list <1-99, 1300-1999> permit <source IP> <source bit mask>
ip-access-list <1-99, 1300-1999> deny <source IP> <source bit mask>
ip-access-list <1-99, 1300-1999> deny any
```

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# ip-access-list 1 permit 192.168.1.224 0.0.0.31
switch_a(config)# ip-access-list 1 deny 192.168.1.224 0.0.0.31
switch_a(config)# ip-access-list 1 deny any
switch_a(config)#q
switch_a#
```

### Creating an Extended IP Access List

To create a new Extended IP Access List to allow or deny an source IP address/range and destination IP address/range pair access to the switch, use the following CLI commands with the Access list ID in the range from 100 – 199, or from 2000 – 2699:

### CLI Command Mode: Global Configuration Mode

CLI Command Syntax:

```
ip-access-list <100-199, 2000-2699> permit ip <source IP> <source bit mask>
<destination IP> <destination bit mask>
ip-access-list <100-199, 2000-2699> deny ip <source IP> <source bit mask>
<destination IP> <destination bit mask>
ip-access-list <100-199, 2000-2699> deny ip any any
```

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#ip-access-list 100 permit ip 192.168.1.224 0.0.0.31
192.168.1.224 0.0.0.31
switch_a(config)#ip-access-list 100 deny ip 192.168.1.224 0.0.0.31
192.168.1.224 0.0.0.31
switch_a(config)#ip-access-list 100 deny ip any any
switch_a(config)#q
switch_a#
```

## Creating a MAC Access List

To create a new MAC Access List to allow or deny a source and destination Ethernet address pair access to the switch, use the CLI commands below with the Access list ID in the range from 100 – 199, or from 2000 – 2699.:

### CLI Command Mode: Global Configuration Mode

CLI Command Syntax:

```
mac-access-list <2000-2699> permit <source MAC address> <source bit mask>
<destination MAC address> <destination bit mask> <encapsulation format:
1=Ethernet II, 2=SNAP, 4=802.3, 8=LLC> ether-type <EtherType> <EtherType
bit mask>
mac-access-list <2000-2699> deny <source MAC address> <source bit mask>
<destination MAC address> <destination bit mask> <encapsulation format:
1=Ethernet II, 2=SNAP, 4=802.3, 8=LLC> ether-type <EtherType> <EtherType
bit mask>
mac-access-list <2000-2699> deny any any <encapsulation format: 1=Ethernet
II, 2=SNAP, 4=802.3, 8=LLC> ether-type <EtherType> <EtherType bit mask>
```

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#mac-access-list 2000 permit 00e0.b321.03de
0000.0000.0000 00e0.b321.03df 0000.0000.0000 1 ether-type 800 0000
switch_a(config)#mac-access-list 2000 deny 00e0.b321.03de
0000.0000.0000 00e0.b321.03df 0000.0000.0000 1 ether-type 800 0000
switch_a(config)#mac-access-list 2000 deny any any 1 ether-type 800
0000
switch_a(config)#q
switch_a#
```

## Creating an ACL Class Map with Layer 4 Access List

In order to create a Layer 4 Access List you must create it within an ACL Class Map. Use the CLI commands below to create an ACL Class Map together with the Layer 4 Access List. The Layer 4 Access List only classifies the ingress packets for the ACL Policy Map that it is associated with; therefore, all packets will be allowed entry to the switch with the Layer 4 Access List. You will have to use this Access List in conjunction with another type of Access List, if you wish to filter any packet that did not match the classification rules from this Access List.



**Note:** The bandwidth policing capabilities of the ACL Class cannot be configured here; it can only be configured during the ACL Policy Map creation or modification:

CLI Command Mode:

**Global Configuration Mode**

**Class Map Configuration Mode**

CLI Command Syntax:

**class-map <Class Map Name>**

**match layer4 source-port <TCP/UDP Port number>**

**match layer4 destination-port <TCP/UDP Port number>**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#class-map FTP
switch_a(config-cmap)#match layer4 destination-port 21
switch_a(config-cmap)#q
switch_a(config)#
switch_a(config)#class-map FTP_Download
switch_a(config-cmap)#match layer4 source-port 20
switch_a(config-cmap)#q
switch_a(config)#q
switch_a#
```

## Creating a ACL Class Map with an IP or MAC Access List

To create a new ACL Class Map with a Standard/Extended IP Access List or a MAC Access List, you must have first created a Standard/Extended IP Access List or MAC Access List already. You can then use the CLI commands below to create a new ACL Class Map and assign one (you can only assign one Access List per Class Map) existing Standard/Extended IP Access List, or MAC Access List, to the ACL Class Map by referencing its Access list ID.



**Note:** The bandwidth policing capabilities of the ACL Class cannot be configured here; it can only be configured during the ACL Policy Map creation or modification:

CLI Command Mode:

**Global Configuration Mode**

**Class Map Configuration Mode**

CLI Command Syntax:

**class-map <ACL Class Name>**

**match access-group <Access List ID>**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#class-map Layer_2-3_Class
switch_a(config-cmap)#match access-group 1
switch_a(config-cmap)#q
switch_a(config)#q
switch_a#
```

## Creating an ACL Policy Map

To create a new ACL Policy Map you must have first created the ACL Class Maps that you want to assign to the ACL Policy Map. You can then use the CLI commands below to create the new ACL Policy Map and assign one or multiple existing ACL Class Maps to the ACL Policy Map by referencing its ACL Class Map name. You can also complete or modify the bandwidth policing capabilities of the ACL Class Maps used during the ACL Policy Map creation process

CLI Command Mode:

**Global Configuration Mode**

**Policy Map Configuration Mode**

**Policy Map Class Configuration Mode**

CLI Command Syntax:

```
policy-map <ACL Policy Name>
class <ACL Class Name>
police <1-1000000> <1-20000> exceed-action drop
```

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#policy-map IP_Policy_1
switch_a(config-pmap)#class IP_Class_1
switch_a(config-pmap-c)#police 50000 5000 exceed-action drop
switch_a(config-pmap-c)#q
switch_a(config-pmap)#class IP_Class_2
switch_a(config-pmap-c)#police 50000 5000 exceed-action drop
switch_a(config-pmap-c)#q
switch_a(config-pmap)#class IP_Class_3
switch_a(config-pmap-c)#police 50000 5000 exceed-action drop
switch_a(config-pmap-c)#q
switch_a(config-pmap)#q
```

```
switch_a (config) #q  
switch_a#
```

## Appling an Existing ACL Policy to a Port

To apply the ACL packet filtering features on a port, you must have first created an ACL Policy already. You can then use the CLI commands below to apply the existing ACL Policy to a port.

CLI Command Mode:

**Global Configuration Mode**

**Interface Configuration Mode**

CLI Command Syntax:

**interface <Interface Name>**  
**service-policy input <ACL Policy Name>**

Usage Example:

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config) #interface f1  
switch_a(config-if) #service-policy input IP_Policy_1  
switch_a(config-if) #q  
switch_a(config) #q  
switch_a#
```

## Deleting an ACL Class

You can use the CLI commands below to delete an existing ACL Class.

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **no class-map <ACL Class Name>**

Usage Example:

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config) #no class-map IP_Class_1  
switch_a(config) #q  
switch_a#
```

## Deleting an ACL Policy

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **no policy-map <ACL Policy Name>**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#no policy-map IP_Policy_1
switch_a(config)#q
switch_a#
```

# SNMP

SNMP is a TCP/IP application layer network management protocol that allows any TCP/IP device to be managed across a TCP/IP network. It is based on the client-server paradigm. The server (called a SNMP Agent) runs a process on the managed device that listens for a client's (a network management software running on a computer, usually called a NMS, short for Network Management Station) polling requests to fetch or to set a data item on the managed device. The SNMP Agent can also send alert messages (called Traps) to a NMS automatically, based on the occurrence of certain events on the device that the Agent resides. Note that SNMP is enabled by default.

## SNMP General Settings

To navigate to the **SNMP General Settings** page:

1. Click on the **+** next to **SNMP**.
2. Click on **SNMP General Settings**.

To configure the general settings for the SNMP feature (see [Figure 88](#)):

1. The SNMP server on the switch can be enabled or disabled by selecting the appropriate choice from the dropdown list next to **SNMP Status**.
2. The description field displays the switch model and port configuration by default. If needed, enter a short description (up to 256 characters) into this field.
3. Enter a name into the entry field next to **Location**, for the purpose of identifying the location of the switch.
4. Enter a name (up to 256 characters) into the entry field next to **Contact**, to identify the entity that is responsible for this switch.
5. Enter a trap community name (up to 256 characters) into the entry field next to any one of the 5 Trap community name entry boxes from **Trap Community Name 1** to **Trap Community Name 5**.
  - a. Community names identify the SNMP Trap community group that the traps on this switch should be sending to. The identical Trap community names should also be set on the NMS hosts that will be receiving the traps. Each name defined corresponds with the **Trap host IP address** entry box with the same number. For example, **Trap Community Name 1** corresponds with **Trap Host 1 IP Address**.
6. Enter an IP address, for the NMS host(s) that should be receiving traps from this switch, into the entry field next to any one of the 5 Trap host IP address entry boxes from **Trap Host 1 IP Address to Trap Host 5 IP Address**
7. Enable or disable the link down trap by selecting the appropriate choice from the drop-down list next to **Link Down Trap**. This will allow or stop the switch from sending a trap to the identified trap community groups when any port on the switch moves from the link up state to the link down state.
8. Enable or disable the link up trap by selecting the appropriate choice from the drop-down list next **Link Up Trap**. This will allow or stop the switch from sending a trap to the identified trap community groups when any port on the switch moves from the link down state to the link up state.
9. Enable or disable the power down trap by selecting the appropriate choice from the drop-down list next **Power Down Trap**. This will allow or stop the switch from sending a trap to the identified trap community groups when one of the redundant power sources goes down (This feature is not on EX75000 and EX74000, and models with a single power input).
10. Enable or disable the power up trap by selecting the appropriate choice from the drop-down list next **Power Up Trap**. This will allow or stop the switch from sending a trap to the identified trap community groups when one of the redundant power sources powers up (This feature is not on EX75000 and EX74000, and models with a single power input).

11. Enable or disable the MAC notification trap by selecting the appropriate choice from the drop-down list next to **MAC Notification Trap**. This will allow or stop the switch from sending a trap to the identified trap community groups anytime there is a change in the MAC table on certain selected ports of the switch.
12. Set the interval between the MAC notification traps that you want the switch to send by entering the interval (in number of seconds from 1 to 65535) into the entry field next to **MAC Notification Interval (1 to 65535 seconds)**.
13. Set the size of the MAC notification history table by entering the total number of records (from 1 to 500) that the switch will keep for user to review at any one time into the entry field next to **MAC Notification History Size (1 to 500)**.
14. Select which ports on the switch for which traps should be sent when there is a new MAC address added to the MAC table for the port, by checking the appropriate check boxes for these ports in the **MAC Notification Added** section.
15. Select which ports on the switch for which traps should be sent when there is a MAC address being removed from the MAC table for the port, by checking the appropriate check boxes for these ports in the **MAC Notification Removed** section.
16. Click on the **Update** button after you have finished the configuration of the SNMP Server (Agent) General Settings.
17. Save the configuration (see the [Save Configuration Page](#))

SNMP Status	<b>1</b> Enable ▼																																																																
SNMP General Setting																																																																	
Description	<b>2</b> Etherwan 24TX+2GT Managed Switch																																																																
Location	<b>3</b> First_Floor_Closet																																																																
Contact	<b>4</b> Administrator																																																																
Trap Community Name 1	<b>5</b> Trap_Group_1																																																																
Trap Community Name 2	Trap_Group_2																																																																
Trap Community Name 3	<b>5</b> Trap_Group_3																																																																
Trap Community Name 4	Trap_Group_4																																																																
Trap Community Name 5	<b>5</b> Trap_Group_5																																																																
Trap Host 1 IP Address	<b>6</b> 192.168.1.100																																																																
Trap Host 2 IP Address	192.168.1.100																																																																
Trap Host 3 IP Address	<b>6</b> 192.168.1.100																																																																
Trap Host 4 IP Address	192.168.1.100																																																																
Trap Host 5 IP Address	<b>6</b> 192.168.1.100																																																																
Link Down Trap	<b>7</b> Enable ▼																																																																
Link Up Trap	<b>8</b> Enable ▼																																																																
Power Down Trap	<b>9</b> Enable ▼																																																																
Power Up Trap	<b>10</b> Enable ▼																																																																
MAC Notification Trap	<b>11</b> Enable ▼																																																																
MAC Notification Interval (1 to 65535 seconds)	<b>12</b> 60																																																																
MAC Notification History Size (1 to 500)	<b>13</b> 100																																																																
MAC Notification Added	<b>14</b> <table border="1"> <tr><td>fc1</td><td>fc2</td><td>fc3</td><td>fc4</td><td>fc5</td><td>fc6</td><td>fc7</td><td>fc8</td></tr> <tr><td><input checked="" type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td></tr> <tr><td>fe9</td><td>fe10</td><td>fe11</td><td>fe12</td><td>fe13</td><td>fe14</td><td>fe15</td><td>fe16</td></tr> <tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td></tr> <tr><td>fe17</td><td>fe18</td><td>fe19</td><td>fe20</td><td>fe21</td><td>fe22</td><td>fe23</td><td>fe24</td></tr> <tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td></tr> <tr><td>ge1</td><td>ge2</td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td><input checked="" type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> </table>	fc1	fc2	fc3	fc4	fc5	fc6	fc7	fc8	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	fe9	fe10	fe11	fe12	fe13	fe14	fe15	fe16	<input type="checkbox"/>	fe17	fe18	fe19	fe20	fe21	fe22	fe23	fe24	<input type="checkbox"/>	ge1	ge2							<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																				
fc1	fc2	fc3	fc4	fc5	fc6	fc7	fc8																																																										
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>																																																										
fe9	fe10	fe11	fe12	fe13	fe14	fe15	fe16																																																										
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>																																																										
fe17	fe18	fe19	fe20	fe21	fe22	fe23	fe24																																																										
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>																																																										
ge1	ge2																																																																
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																																																																
MAC Notification Removed	<b>15</b> <table border="1"> <tr><td>fe1</td><td>fe2</td><td>fe3</td><td>fe4</td><td>fe5</td><td>fe6</td><td>fe7</td><td>fe8</td></tr> <tr><td><input checked="" type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td></tr> <tr><td>fe9</td><td>fe10</td><td>fe11</td><td>fe12</td><td>fe13</td><td>fe14</td><td>fe15</td><td>fe16</td></tr> <tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td></tr> <tr><td>fe17</td><td>fe18</td><td>fe19</td><td>fe20</td><td>fe21</td><td>fe22</td><td>fe23</td><td>fe24</td></tr> <tr><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td><td><input type="checkbox"/></td></tr> <tr><td>ge1</td><td>ge2</td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td><input checked="" type="checkbox"/></td><td><input checked="" type="checkbox"/></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> </table>	fe1	fe2	fe3	fe4	fe5	fe6	fe7	fe8	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	fe9	fe10	fe11	fe12	fe13	fe14	fe15	fe16	<input type="checkbox"/>	fe17	fe18	fe19	fe20	fe21	fe22	fe23	fe24	<input type="checkbox"/>	ge1	ge2							<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																				
fe1	fe2	fe3	fe4	fe5	fe6	fe7	fe8																																																										
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>																																																										
fe9	fe10	fe11	fe12	fe13	fe14	fe15	fe16																																																										
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>																																																										
fe17	fe18	fe19	fe20	fe21	fe22	fe23	fe24																																																										
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>																																																										
ge1	ge2																																																																
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>																																																																
<b>16</b> <input type="button" value="Update Setting"/>																																																																	

Figure 88: SNMP General Settings

# Configuring SNMP v1 & v2 Community Groups

To navigate to the **SNMP v1/v2** page:

1. Click on the + next to **SNMP**.
2. Click on **SNMP v1/v2**.

To configure the SNMP v1 & v2 community groups (see [Figure 89](#)):

1. Enter the SNMP community name into the entry field next to **Get Community Name** (the default value is “Public”). This will allow the NMS to poll status information from the switch (read only).
2. Enter the SNMP community name, into the entry field next to **Set Community Name**. This will allow a NMS to change the status of a data item in the switch.
3. Click on the **Update Setting** button after you have finished the configuration.
4. Save the configuration (see the [Save Configuration Page](#))

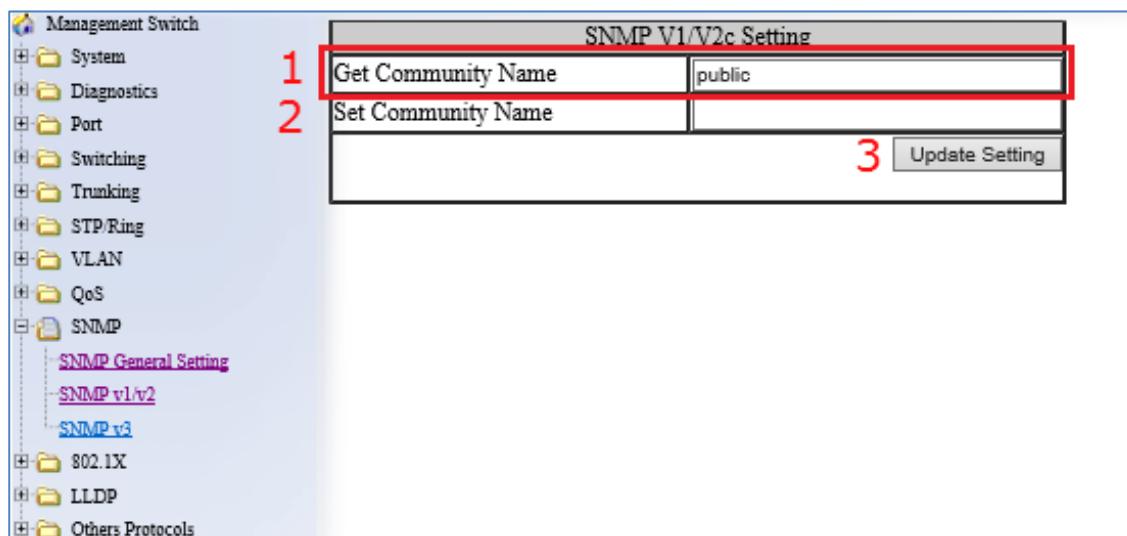


Figure 89: Community Name V1/V2c


# Configuring SNMP v3 Users

To navigate to the **SNMP v3** page:

1. Click on the + next to **SNMP**.
2. Click on **SNMP v3**.

## Adding SNMP v3 Users to the switch

1. Click on the **Add User** button. See [below](#).

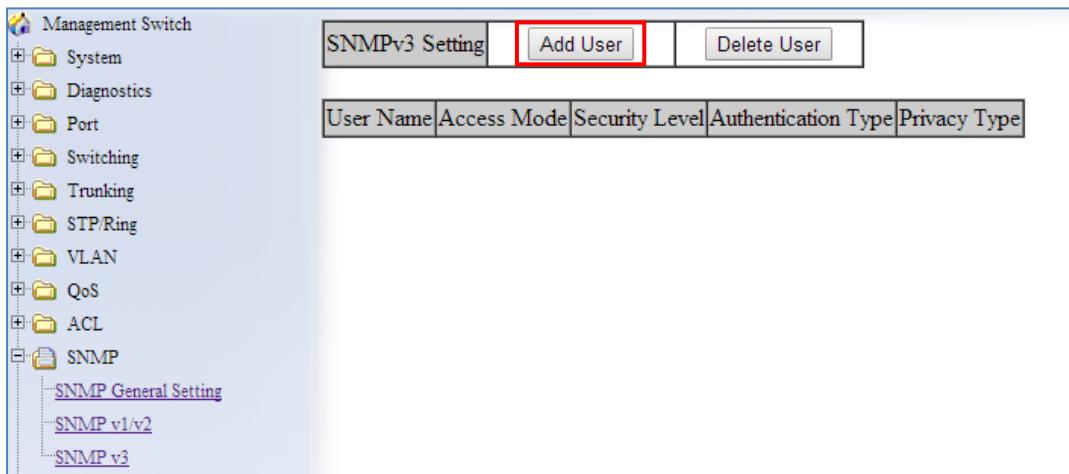

**Figure 90: Add User**

2. Next, select the desired authentication/privacy protocols from the drop-down list next to "NMP Version, according to the chart below (also see [Figure 91](#)):
  - a. **SNMPv3 No-Auth** = Only user name match is required for SNMP access to the switch. No user authentication or data encryption will be used.
  - b. **SNMPv3 Auth-MD5** = User authentication will be required using the MD5 hashing algorithm, but no data encryption will be used.
  - c. **SNMPv3 Auth-SHA** = User authentication will be required using the SHA-1 hashing algorithm, but no data encryption will be used.
  - d. **SNMPv3 Priv Auth-MD5** = User authentication will be required using the MD5 hashing algorithm, and in addition, all data in protocol message will be encrypted using 56-bit DES encryption algorithm.
  - e. **SNMPv3 Priv Auth-SHA** = User authentication will be required using the SHA-1 hashing Algorithm, and in addition, all data in protocol message will be encrypted using 56-bit DES encryption algorithm.

- f. **SNMPv3 AES** = Net-SNMP must be upgraded to v5.8 or higher to support AES encryption.

SNMP V3 Setting	
SNMP Version	SNMPv3 No-Auth
User Name	
Access Mode	
Group Name	
Auth. Password	
Privacy PassPhrase	
Submit	

**Figure 91: SNMP v3 Settings**

3. Next, enter the desired username in the entry field next to **User Name**.
4. Next, select the desired access authorization for the user from the drop-down list next to **Access Mode**. See [Figure 92](#).

SNMP V3 Setting	
SNMP Version	SNMPv3 No-Auth
User Name	SNMP_User_1
Access Mode	Read Only
Auth. Password	
Privacy PassPhrase	
Submit	

**Figure 92: User name & Access Mode**

5. Next, if authentication is required for this user, and you have chosen an authentication protocol, then the entry field next to **Auth. Password** will have been enabled. Enter a password for this user inside this entry field. See [Figure 93](#).  
**Previous firmware versions prohibited three special characters “!”, “#” and “?”. With the latest firmware release “!” and “#” restrictions are excluded, and only the character “?” is restricted.**

SNMP V3 Setting	
SNMP Version	SNMPv3 Auth-MD5
User Name	SNMP_User_2
Access Mode	Read Only
Auth. Password	User2
Privacy PassPhrase	
Submit	

**Figure 93: Auth Password**

6. Next, if both authentication and privacy are required for this user, and you have chosen both an authentication and privacy protocol, then the entry field next to **Privacy PassPhrase** will have been enabled. Enter a pass phrase inside this entry field, as part of the key used to encrypt the protocol message for this user. See [Figure 94](#).

The screenshot shows the 'Management Switch' interface with a sidebar containing navigation links like System, Diagnostics, Port, Switching, Trunking, STP/Ring, VLAN, QoS, ACL, and SNMP. Under SNMP, there are links for 'SNMP General Setting', 'SNMP v1/v2', and 'SNMP v3'. The main panel is titled 'SNMP V3 Setting' and contains the following fields:

SNMP V3 Setting	
SNMP Version	SNMPv3 Priv Auth-MD5
User Name	SNMP_User_3
Access Mode	Read/Write
Auth. Password	User3
Privacy PassPhrase	Private_User

A 'Submit' button is located at the bottom right of the form.

**Figure 94: Privacy PassPhrase**

### Deleting SNMP v3 Users from the switch


1. Go to SNMP → SNMP v3, you should see a list of previously configured users. Next, click on the **Delete User** button. See [below](#).

The screenshot shows the 'Management Switch' interface with a sidebar containing navigation links like System, Diagnostics, Port, Switching, Trunking, STP/Ring, VLAN, QoS, ACL, and SNMP. Under SNMP, there are links for 'SNMP General Setting', 'SNMP v1/v2', and 'SNMP v3'. The main panel has a 'SNMPv3 Setting' tab selected, showing two buttons: 'Add User' and 'Delete User'. Below is a table listing the configured users:

User Name	Access Mode	Security Level	Authentication Type	Privacy Type
SNMP_User_3	rw	priv	md5	des
SNMP_User_2	ro	auth	md5	
SNMP_User_1	ro	noauth		

**Figure 95: Delete User**


2. Next, select the user that you wish to delete from the drop-down list next to **Select User Name**.
3. Click on the **Submit** button. See [below](#).

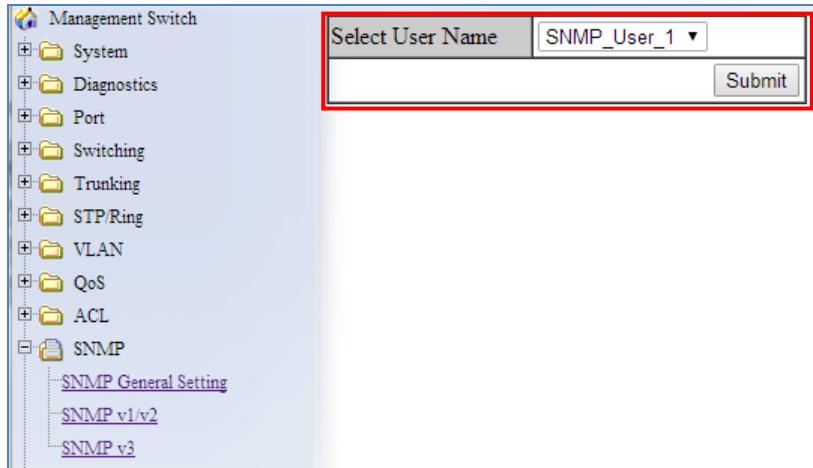

**Figure 96: Select User**

## Create SNMPv3 Group and View

To create SNMPv3 Group and View, first, click on SNMP v3 from the left panel of Web GUI.

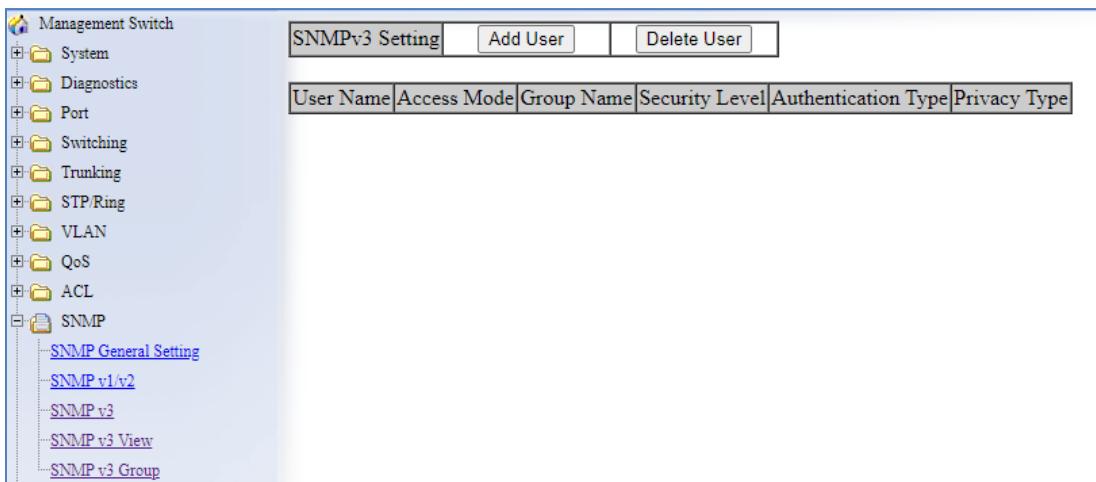

Click “Add User” and follow the steps described under [Adding SNMP v3 Users](#).

To provide SNMPv3 View & Group, first finish the SNMPv3 View setup, and input View Name and OID. For OID, select Included or Excluded.

Management Switch

- + System
- + Diagnostics
- + Port
- + Switching
- + Trunking
- + STP/Ring
- + VLAN
- + QoS
- + ACL
- SNMP
  - [SNMP General Setting](#)
  - [SNMP v1/v2](#)
  - [SNMP v3](#)
  - [SNMP v3 View](#)
  - [SNMP v3 Group](#)

Add View Entry			
View Name	<input type="text"/>		
OID	<input type="text"/>		
<input checked="" type="radio"/> Included <input type="radio"/> Excluded			
<input type="button" value="Add"/>			
View Entries			
Select	View Name	OID	Included/Excluded
<input type="button" value="Delete"/>			

After View is created, set up Group Name Entry

Add Group Entry			
Group Name	<input type="text"/>		
Read View	<input type="button" value="▼"/>		
Write View	<input type="button" value="▼"/>		
<input type="button" value="Add"/>			
View Entries			
Select	Group Name	Read View	Write View
<input type="button" value="Delete"/>			

Create Group Name according to its Read or Write View attributes.

Add Group Entry			
Group Name	<input type="text"/>		
Read View	<input type="button" value="▼"/>		
Write View	<input type="button" value="▼"/>		
<input type="button" value="Add"/>			
View Entries			
Select	Group Name	Read View	Write View
<input type="radio"/>	Group1	test1	test2
<input type="button" value="Delete"/>			

# SNMP Configuration Using CLI Commands

## Enabling SNMP and configuring general settings

To enable the SNMP feature of the switch, and configure its general settings (Description, Location, and Contact information), use these CLI commands.:.

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
snmp-server enable
snmp-server description <1 -256 characters>
snmp-server location <1 -256 characters>
snmp-server contact <1 -256 characters>
```

Usage Example:

```
switch_a> enable
switch_a#configure terminal
switch_a(config)# snmp-server enable
switch_a(config)# snmp-server description Hub_Switch_1
switch_a(config)# snmp-server location First_Floor_Closet
switch_a(config)# snmp-server contact Administrator
switch_a(config)#q
switch_a#
```

## Configuring SNMP Traps

To configure the Trap features of the SNMP protocol on the switch, you use the following CLI commands:

CLI Command Mode:

**Global Configuration Mode**

**Interface Configuration Mode**

CLI Command Syntax:

```
snmp-server trap-community 1 <1 -256 characters >
snmp-server trap-community 2 <1 -256 characters >
snmp-server trap-community 3 <1 -256 characters >
```

```
snmp-server trap-community 4 <1 -256 characters>
snmp-server trap-community 5 <1 -256 characters>
snmp-server trap-ipaddress 1 <IP Address>
snmp-server trap-ipaddress 2 <IP Address>
snmp-server trap-ipaddress 3 <IP Address>
snmp-server trap-ipaddress 4 <IP Address>
snmp-server trap-ipaddress 5 <IP Address>
snmp-server trap-type enable linkDown
snmp-server trap-type enable linkup
snmp-server trap-type enable mac-notification
snmp-server mac-notification interval <1 to 65535 seconds>
snmp-server mac-notification history-size <1 to 500 entries>
snmp-server trap mac-notification added
snmp-server trap mac-notification removed
```

Usage Example:

```
switch_a> enable
switch_a#configure terminal
switch_a(config)# snmp-server trap-community 1 Trap_Group_1
switch_a(config)# snmp-server trap-community 2 Trap_Group_2
switch_a(config)# snmp-server trap-community 3 Trap_Group_3
switch_a(config)# snmp-server trap-community 4 Trap_Group_4
switch_a(config)# snmp-server trap-community 5 Trap_Group_5
switch_a(config)# snmp-server trap-ipaddress 1 192.168.1.100
switch_a(config)# snmp-server trap-ipaddress 2 192.168.2.100
switch_a(config)# snmp-server trap-ipaddress 3 192.168.3.100
switch_a(config)# snmp-server trap-ipaddress 4 192.168.4.100
switch_a(config)# snmp-server trap-ipaddress 5 192.168.5.100
switch_a(config)# snmp-server trap-type enable linkDown
switch_a(config)# snmp-server trap-type enable linkup
switch_a(config)# snmp-server trap-type enable mac-notification
switch_a(config)# snmp-server mac-notification interval 60
switch_a(config)# snmp-server mac-notification history-size 100
switch_a(config)#interface fe1
switch_a(config-if)#snmp-server trap mac-notification added
switch_a(config-if)#snmp-server trap mac-notification removed
switch_a(config-if)#q
switch_a(config)#q
switch_a#
```

## Configuring SNMP v1 & v2 Community Groups

To configure the SNMP v1 & v2 community groups to make the SNMP feature more secure, use the following CLI commands:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
snmp-server enable  
snmp-server community get <1 -256 characters>  
snmp-server community set <1 -256 characters>
```

Usage Example:

```
switch_a> enable  
switch_a#configure terminal  
switch_a(config)# snmp-server community get public  
switch_a(config)# snmp-server community set private  
switch_a(config)#q  
switch_a#
```

## Adding SNMP v3 Users

To add SNMP v3 Users to the switch and maximize the security for the SNMP feature, you must use the following CLI commands:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
snmp-server v3-user <username> <group groupname | ro | rw> noauth  
snmp-server v3-user <username> <group groupname | ro | rw> auth <md5 |  
sha> <password>  
snmp-server v3-user <username> <group groupname | ro | rw> priv <md5 |  
sha> <password> des <pass_phrase>  
no snmp-server v3-user <username>
```

Usage Example:

```
switch_a> enable  
switch_a#configure terminal  
switch_a(config)# snmp-server v3-user SNMP_User_1 ro noauth  
switch_a(config)# snmp-server v3-user SNMP_User_2 ro auth md5 User2  
switch_a(config)# snmp-server v3-user SNMP_User_3 rw priv md5 User3  
des Private_User
```

```
switch_a (config) #q  
switch_a#
```

## Configuring a New SNMP Group

The SNMP Group feature is only for SNMPv3. As long as any SNMP command is executed, the SNMP service will be restarted. Up to five SNMP groups can be set. When creating a Group, the user must select **Read View**, **Write View**, or **both**. When a Group is created with a write view, users in this Group will be able to read and write the SNMP OIDs defined in the write view.

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
snmp-server group <group-name> [read read-view] [write write-view]  
no snmp-server group <group-name>
```

Syntax Description:

<b>group-name</b>	Name of the group. String of a maximum of 32 characters.
<b>read</b>	(Optional) Specifies a read view for the SNMP group. This view enables you to view only the contents of the agent.
<b>read-view</b>	(Optional) String of a maximum of 32 characters that is the name of the view. The default is that the read-view is assumed to be every object belonging to the Internet object identifier (OID) space (1.3.6.1), unless the read option is used to override this state.
<b>write</b>	(Optional) Specifies a write view for the SNMP group. This view enables you to enter data and configure the contents of the agent.
<b>write-view</b>	(Optional) String of a maximum of 32 characters that is the name of the view.

## Create or Update a View Entry

To create or update a view entry, use the **snmp-server view** command in global configuration mode. To remove the specified Simple Network Management Protocol (SNMP) server view entry, use the **no** form of this command.

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
snmp-server view view-name oid-tree {included | excluded}  
no snmp-server view view-name
```

Syntax Description:

<b>group-name</b>	Name of the group. String of a maximum of 32 characters.
<b>Oid-tree</b>	Object identifier of the ASN.1 subtree to be included or excluded from the view. To identify the subtree, specify a text string consisting of numbers, such as 1.3.6.2.4. Replace a single sub-identifier with the asterisk (*) wildcard to specify a subtree family; for example 1.3.*.4.

<b>Included</b>	Configures the OID (and subtree OIDs) specified in oid-tree argument to be included in the SNMP view.
<b>excluded</b>	Configures the OID (and subtree OIDs) specified in oid-tree argument to be explicitly excluded from the SNMP view.

# 802.1X

EtherWAN switches support the IEEE 802.1X protocol to provide port based security on a switch port against unauthorized access. RADIUS and TACACS+ protocols are supported.

An EAP (Extensible Authentication Protocol) compatible RADIUS or TACACS+ server is required, as well as 802.1X client software (known as the “Supplicant” software) on the end device to communicate with the server for the purposes of authenticating the end device that is trying to gain access to the network through the switch port.

When an end device is initially connected to a port on the EtherWAN switch where the 802.1X protocol is enabled on the port, the switch will only pass 802.1X authentication traffic (known as EAPOL traffic) on that port between the Supplicant on the end device and the server, and will not allow any other traffic to pass. After the initial connection, the switch will request authentication credentials from the Supplicant in the end device that has just connected to the port. After the switch receives the proper authentication credentials from the Supplicant in the end device, the switch will send the credentials to the EAP compatible. If the end device is successfully authenticated by the server, the server will send a message to the switch.

## Configuring Radius from the GUI

To navigate to the **Radius Configuration** page:

1. Click on the + next to **802.1X**
2. Click on **Radius Configuration**

### Enabling Radius

By default, the 802.1X function is globally disabled on the EtherWAN switch. If you want to use the 802.1X port based security on a port, you must enable it globally on the switch first, and then enable it on a per port basis.

To enable the 802.1X function globally on the switch:

1. Choose **enable** from the drop down list next to **Radius Status**
2. Click on the **Update Setting** button. (See [Figure 97](#))

Radius Server Global Setting					
Radius Status	<input type="button" value="Enable"/> <input checked="" type="checkbox"/>				
<input type="button" value="Update Setting"/>					
Radius Configuration					
<input type="button" value="Add Radius"/>	<input type="button" value="Delete Radius"/>				
Order	Radius Server IP	Port	Timeout	Retransmit	Key

**Figure 97: Enable Radius**

## Adding a Radius Server

Next, you will need to configure the settings that the switch will need in order to connect to a RADIUS server.

1. Click on the **Add Radius** button (see [above](#)).
2. Next, enter the IP address of the RADIUS server that the switch will use in order to authenticate in the entry field next to **Radius Server IP** (see [Figure 98](#)).
3. Enter the password for RADIUS server in the entry field next to **Secret Key**.
4. Optionally, the UDP port number for the RADIUS server (if it is different from the standard default 1812) can be changed. To do this, enter the port number in the entry field next to **Radius Server Port**.
5. Next, you can choose to configure the minimum time that the switch must wait, before it is allowed to retransmit a message to the RADIUS server due to no response. To do this, enter the number of seconds that the switch must wait (between 1 and 1000 seconds) into the entry field next to **Timeout <1-1000>** .
6. Next, you can choose to configure the maximum number of times that the switch can attempt to retransmit a message to the RADIUS server. To do this, enter a number (from 1 to 100) into the entry field next to **Retransmit**.
7. Click on the **Submit** button.

Radius Server Setting	
Radius Server IP	<b>2</b> 192.168.1.102
Radius Server Port	<b>4</b> 1812
Secret Key	<b>3</b> 5678
Timeout <1-1000>	<b>5</b> 5
Retransmit <1-100>	<b>6</b> 3
<b>7</b> <input type="button" value="Submit"/>	

Figure 98: Radius Setup

Radius Server Global Setting	
Radius Status	<input type="button" value="Disable ▾"/>
<input type="button" value="Update Setting"/>	

Radius Configuration	
<input type="button" value="Add Radius"/>	<input type="button" value="Delete Radius"/>

Order	Radius Server IP	Port	Timeout	Retransmit	Key
1	192.168.1.102	1812	5	3	5678

Figure 99: Resulting Radius Server Setup

## Port Authentication

After the 802.1X port based security is enabled globally, you must enable it locally on the port.

To navigate to the **802.1X / Port Authentication** page:

1. Click on the + next to **802.1X**
2. Click on **Port Authentication**

To enable 802.1X on a port (see [Figure 100](#)):

1. Choose the desired port from the drop-down list next to **Interface**, to have the 802.1X feature applied to that port.
2. Next, make sure **Enabled** is selected from the drop-down list next to **Authentication State**, this will enable the 802.1X function on the previously selected port.

3. Next, make sure that the choice **Auto** is selected in the drop-down list next to **Port Control**; this will allow the port to use 802.1X to authenticate the end station.
  - a. If you choose to have the port to be always unauthorized or to be always authorized, you can choose the appropriate choice in the drop-down list.
4. Next, you can choose to have the end station to be re-authenticated periodically. To do this, choose **Enabled** in the drop-down list next to **Periodic Re-authentication**.
5. After you have enabled periodic re-authentication, you must also configure the time period interval for the re-authentication of the end station. To do this, enter the number of seconds (1-4294967295), in to the entry field next to **Re-authentication Period**.
6. Next, **Update Setting** button in order to activate all the configured settings (see the below screenshot)

802.1x Port Setting					
Interface	<b>1</b>	fe1			
Authentication State	<b>2</b>	Enabled			
Port Control	<b>3</b>	Auto			
Periodic Reauthentication	<b>4</b>	Enable			
Reauthentication Period <1-4294967295>	<b>5</b>	3600	(sec.)		
<b>6</b> <input type="button" value="Update Setting"/>					

Port	Port Enabled	Port Control	Port Status	Periodic Reauthentication	Reauthentication Period
1					
2	false	Auto	Unauthorized	enabled	3600
3					
4					

Figure 100: Enabling 802.1X on a Port

## 802.1x Configuration Using the CLI

### View RADIUS Status

Use the CLI commands below to view RADIUS statuses:

CLI Command Mode: **User Exec Mode**

CLI Command Syntax:

```
show dot1x
show dot1x all
show dot1x diagnostics interface <ifname>
show dot1x interface <ifname>
show dot1x sessionstatistics interface <ifname>
show dot1x statistics interface <ifname>
```

## Enable RADIUS Globally

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
dot1x system-auth-ctrl
dot1x system-auth-ctrl disable
```

## Configure RADIUS on Ports

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

```
dot1x keytxenabled <enable | disable>
dot1x max-req <1-10>
dot1x port-control <force-unauthorized | force-authorized | auto>
dot1x port-control dir <in | both>
dot1x protocol-version <1-2>
dot1x quiet-period <1-65535>
dot1x reauthMax <1-10>
dot1x reauthentication
dot1x timeout re-authperiod <1-4294967295>
dot1x timeout server-timeout <1-65535>
dot1x timeout supp-timeout <1-65535>
dot1x timeout tx-period <1-65535>
```

Usage Example – Enabling and configuring RADIUS with host 10.1.1.100 and key “textkey.”

Authentication is automatic:

```
switch_a>enable
switch_a#configure terminal
switch_a(config) #dot1x system-auth-ctrl
switch_a(config) #radius-server host 10.1.1.100 key textkey
switch_a(config) #interface fe1
switch_a(config-if)#dot1x port-control auto
switch_a(config-if)#q
switch_(config)
```

## Configure MAC-Based Authentication

MAC authentication uses the MAC address of the host for authentication. The RADIUS server has a dedicated host database that contains only allowed MAC addresses.

Use the CLI commands below to set up a mac-based authentication:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

**auth-mac <system-auth-control, username-format uppercase>**

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

**auth-mac <enable, disable>**

## LLDP

LLDP is a network discovery protocol that defines a method for network access devices using Ethernet connectivity to advertise information about devices to peer devices on the same physical LAN and store information about the network. It allows a device to learn higher layer management reachability and connection endpoint information from adjacent devices.

Using LLDP, a device is able to advertise its own identification information, its capabilities and media-specific configuration information, as well as learn the same information from the devices connected to it. LLDP advertises this information over Logical Link-Layer Control frames and the information received from other agents in IEEE-defined Management Information Bases (MIB) modules.

LLDP significantly aids in the deployment of any network device that supports the protocol. As a media independent protocol intended to be run on all IEEE 802 devices, LLDP may be used to discover routers, bridges, repeaters, WLAN APs, IP telephones, network camera or any LLDP-enabled device, regardless of manufacturer. Since LLDP runs over the data-link layer only, a switch running one network layer protocol can discover and learn about an access device running a different network layer protocol.

## LLDP General Settings

To navigate to the **LLDP General Settings** page:

1. Click on the **+** next to **LLDP**.
2. Click on **General Settings**.

## Enable/Disable LLDP

To enable LLDP on the switch:

1. Select Enable or Disable from the Drop Down box in the **LLDP** field of the LLDP Transmit Settings box (see [Figure 101](#))
2. Click on the **Update Settings** button.
3. Save the configuration (see the [Save Configuration Page](#))

LLDP is enabled by default.

## Holdtime Multiplier

The Holdtime multiplier for transmit TTL is used to compute the actual time-to-live (TTL) value used in an LLDP frame. The TTL value is the length of time the receiving device should maintain the information in its MIB. To compute the TTL value, the system multiplies the LLDP transmit (TX) interval by the holdtime multiplier. For example, if the LLDP transmit (TX) interval is 30 and the holdtime multiplier for TTL is 4, then the value 120 is encoded in the TTL field in the LLDP header.

To adjust the Holdtime multiplier:

1. Enter a numeric value between 2 and 10 (default is 4) in the Holdtime Multiplier text box.
2. Click on the **Update Settings** button.

The TX Interval setting adjusts the time that LLDP information is transmitted by the switch. Values can range from 5 to 32768 seconds (default is 30 seconds).

To adjust the TX Interval setting (see [Figure 101](#)):

1. Enter a numeric value between 5 and 32768 (default is 30) in the TX Interval text box.
2. Click on the **Update Settings** button.
3. Save the configuration (see the [Save Configuration Page](#))


## Global TLV Setting

The global TLV (Time – Length – Value) settings are advertised by the switch to other LLDP devices. The TLVs supported by the switch are (see [Figure 101](#)):

- Port Description
- System Name
- System Description
- System Capabilities
- Management Address
- Port VLAN ID
- MAC/PHY Configuration/Status
- Port And Protocol VLAN ID
- VLAN Name
- Protocol Identity
- Power Via MDI
- Link Aggregation
- Maximum Frame Size

To enable specific TLVs for the switch:

1. Select the check box for each TLV that is to be enabled or select the checkbox for the **All** option which will enable all TLVs for the switch.
2. Click on the **Update Settings** button.
3. Save the configuration (see the [Save Configuration Page](#))

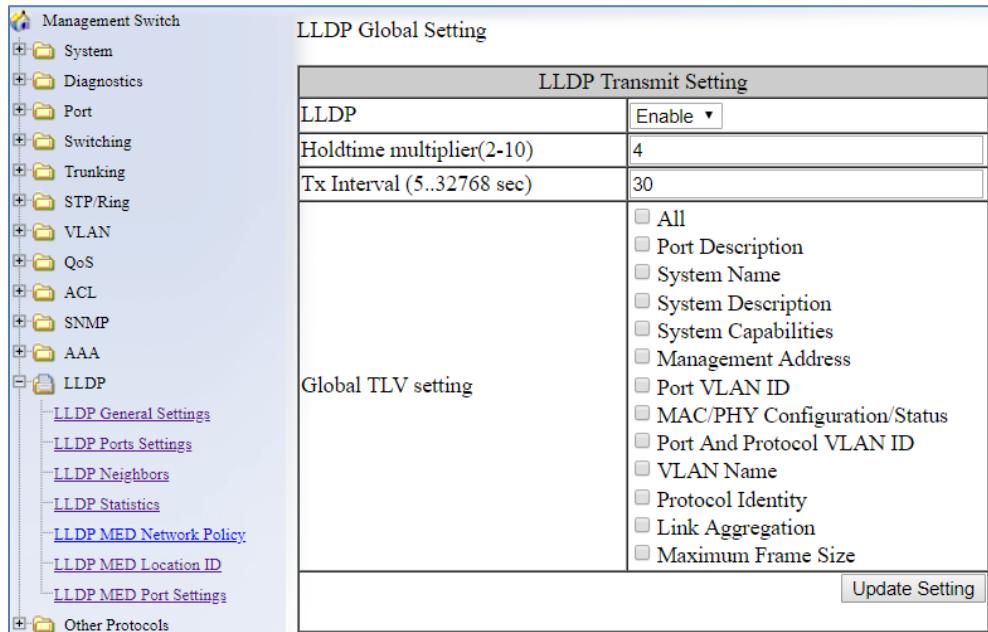

**Figure 101: LLDP Global Settings**

## LLDP Ports Settings

LLDP Ports Settings allows the individual ports on the switch to be configured for LLDP independently of one another. Each port can be configured to transmit LLDP information, receive LLDP information, and notify (via SNMP or Syslog) if there are changes in the LLDP information received from neighboring devices.

To navigate to the **LLDP Port Settings** page:

1. Click on the **+** next to **LLDP**.
4. Click on **LLDP Ports Settings** (see [Figure 102](#))

### Enabling LLDP transmission for a specific Port

To enable the transmission of LLDP information for a specific port:

1. Select Enable from the Drop Down box under the Transmit field for each port for which the transmission of LLDP information should be enabled.
2. Click on the **Submit** button.

### Enabling LLDP Reception for a specific Port

To enable the reception of LLDP information for a specific port:

1. Select Enable from the Drop Down box under the Receive field for each port for which the reception of LLDP information should be enabled.
2. Click on the **Submit** button.

### Enabling Notifications

To enable notification whenever a port receives changed LLDP information:

1. Select Enable from the Drop Down box under the Notify field for each port that should send a notification whenever received LLDP information changes.
2. Click on the **Submit** button
3. Save the configuration (see the [Save Configuration Page](#)) after making changes shown on this page.

Port	Link Status	Transmit	Receive	Notify
1	Down	Disabled	Disabled	Disabled
2	Down	Disabled	Disabled	Disabled
3	Down	Disabled	Disabled	Disabled
4	Down	Disabled	Disabled	Disabled
5	Down	Disabled	Disabled	Disabled
6	Down	Disabled	Disabled	Disabled
7	Down	Disabled	Disabled	Disabled
8	Down	Disabled	Disabled	Disabled
9	Down	Disabled	Disabled	Disabled
10	Down	Disabled	Disabled	Disabled
11	Down	Disabled	Disabled	Disabled
12	Down	Disabled	Disabled	Disabled
13	Down	Disabled	Disabled	Disabled
14	Down	Disabled	Disabled	Disabled
15	Down	Disabled	Disabled	Disabled
16	Down	Disabled	Disabled	Disabled
17	Down	Disabled	Disabled	Disabled
18	Down	Disabled	Disabled	Disabled
19	Down	Disabled	Disabled	Disabled
20	Down	Disabled	Disabled	Disabled
21	Down	Disabled	Disabled	Disabled
22	Down	Disabled	Disabled	Disabled
23	Down	Disabled	Disabled	Disabled
24	Down	Disabled	Disabled	Disabled
25	Running	Disabled	Disabled	Disabled
26	Down	Disabled	Disabled	Disabled
27	Running	Disabled	Disabled	Disabled
28	Down	Disabled	Disabled	Disabled
Submit				

Figure 102: LLDP Ports Settings

## LLDP Neighbors

LLDP Neighbors is a read-only page (see [Figure 103](#)) that will display all the LLDP capable devices detected by the switch. The following information about connected LLDP-enabled devices is displayed in a tabular format. The columns displayed are:

- **Port** – The local switch port to which the remote device is connected.
- **Chassis ID** – The MAC address of the remote device.
- **Port ID** – The port number of the remote device.
- **IP Address** – The management IP address of the remote device.
- **TTL** – Time to Live, the amount time remaining before the remote device's LLDP is aged-out from the switch.
- **MED type** – Media endpoint discovery information

LLDP Neighbor Table						
Port	System Name	Chassis ID	Port ID	IP Address	TTL	MED type
fe1		3065.ec91.9820	3065.ec91.9820	0.0.0.0	2971	<a href="#">Endpoint Class I</a>

**Figure 103: LLDP Neighbors**

## LLDP Statistics

This is a read-only page (see [Figure 104](#)) that displays LLDP device statistics and LLDP statistics on a per-port basis. The information collected on this page includes:

- Port – switch port number.
- TX Total – Total LLDP packets sent.
- RX Total – Total LLDP packets received.
- Discards – Number of LLDP packets discarded.
- Errors – LLDP errors.
- Ageout – LLDP information that has been aged out by the switch.
- TLV Discards – TLV information discarded
- TLV Unknown – TLV information that is unknown

LLDP Device Statistics	
Last Update	130585126
Total Inserts	3
Total Deletes	0
Total Drops	0
Total Ageouts	0

Port	Tx Total	Rx Total	Discards	Errors	Ageout	TLV Discards	TLV Unknowns
1	4	4	0	0	0	0	0
2	0	0	0	0	0	0	0
3	0	0	0	0	0	0	0
4	0	0	0	0	0	0	0
5	4	4	0	0	0	0	0
6	0	0	0	0	0	0	0

**Figure 104: LLDP Statistics**

## LLDP MED Network Policy

Link Layer Discovery Protocol-Media Endpoint Discovery (LLDP-MED), improves information sharing between endpoints and network infrastructure devices. LLDP-MED network policies let end-points and devices on the network to advertise the VLAN, priority

levels, and DSCP values used by a voice or video application. Ports are assigned a network policy on the **LLDP MED Port Settings** page.

To create an LLDP Network Policy, enter the policy number (1 – 64), and select the application type:

**guest-voice:** Used when there is a separate voice network for visitors (guest users).

**guest-voice-signaling:** For when the network requires a separate policies for guest voice signaling and guest voice media.

**softphone-voice:** For softphone voice applications

**streaming-video:** For multicast video or other streaming video services that require a specific network policy

**video-conferencing:** For video conferencing applications.

**video-signaling:** Used to separate video signaling than for the video media. Do not use this application type if both the same network policies apply to both video and video signaling traffic.

**voice:** if the services, IP telephones, and other appliances support interactive voice services. This is the default application type.

**voice-signaling:** When there is a different policy for voice signaling than for voice media. Do not use this application type if both the same network policies apply to both voice and voice signaling traffic.

Enter the **VLAN Type**, the **VLAN ID**, **L2 Priority**, and **DSCP** value. Then click **Update Setting**.

The screenshot shows the Management Switch configuration interface. On the left is a tree view of settings: System, Diagnostics, Port, Switching, Trunking, STP/Ring, VLAN, QoS, ACL, SNMP, AAA, and LLDP. Under LLDP, the 'LLDP MED Network Policy' option is selected. The main panel is titled 'Network Policy Configuration'. It contains fields for 'Network Policy Number(1~64)' (with a 'Delete' button), 'Application' (set to 'guest-voice'), 'VLAN Type' (set to 'Tag'), 'VLAN ID' (set to '1'), 'L2 Priority' (set to '0'), and 'DSCP' (set to '0'). A 'Update Setting' button is at the bottom right. Below this is a table with columns: Network Policy Number, Application, VLAN Type, VLAN ID, L2 Priority, and DSCP Value. The first row of the table is highlighted in grey.

Network Policy Number	Application	VLAN Type	VLAN ID	L2 Priority	DSCP Value

Figure 105: LLDP MED Network Policy

## LLDP MED Location ID

A wide array of location information can be configured for each port, and advertised to remote devices. This includes geographical coordinates, ELIN (emergency location identifier number) location, and physical address parameters. This information can be transmitted in calls, a feature especially important for calls to emergency services. All ports may be configured with the location of the switch, or each port may set up to read the location of the remote voice device connected to it.

Location Identification List		
Select	Type	Value
		<input type="button" value="Delete"/>

Coordinate Location		
Latitude	<input type="text"/>	
Latitude Resolution	Default ▾	
Longitude	<input type="text"/>	
Longitude Resolution	Default ▾	
Altitude	<input type="text"/>	Floors ▾
Altitude Resolution	Default ▾	
Datum	WGS84 ▾	
		<input type="button" value="Submit"/>

ELIN Location		
ECS ELIN	<input type="text"/>	<input type="button" value="Submit"/>

Figure 106: LLDP MED Location ID

Civic Address Location	
Language	<input type="text"/>
Script	<input type="text"/>
Country	<input type="text"/>
State/Province	Carrollwood
County	Hillsborough
City	Tampa
City Division	
Block/Neighborhood	
Street Group	North Boulevard
Leading Street Direction	
Trailing Street Suffix	
Street Suffix	
House Number	14906
House Number Suffix	
Landmark	
Additional Information	
Name	
Postal Code	33612
Building	
Unit	
Floor	
Room	
Place Type	
Postal Community Name	
Postal Office Box	
Additional Code	
Seat	
Primary Road Name	
Road Section	
Branch Road Name	
Sub Branch Road Name	
Street Name Pre Modifier	
Street Name Post Modifier	
<input type="button" value="Submit"/>	

**Figure 107: LLDP MED Location ID**

## LLDP MED Port Settings

On this page you can assign which LLDP TLVs a specific port will use, and assing an optional policy.

LLDP MED Port Status			
Interface	User Defined Network Policy		TLVs
	NO.	Application	
fe1	--	--	inventory
fe2	--	--	--
fe3	--	--	--
fe4	--	--	--
fe5	--	--	--
fe6	--	--	--
fe7	--	--	--
fe8	--	--	--
fe9	--	--	--
fe10	--	--	--
fe11	--	--	--
fe12	--	--	--
fe13	--	--	--
fe14	--	--	--
fe15	--	--	--
fe16	--	--	--
ge1	--	--	--
ge2	--	--	--

LLDP MED Port Setting Table	
Interface:	fe1 ▼
Optional TLVs	<input type="checkbox"/> Inventory <input type="checkbox"/> Location <input type="checkbox"/> Network Policy
Optional Policy	Guest Voice: -- ▼ Guest Voice Signaling: -- ▼ Softphone Voice: -- ▼ Streaming Video: -- ▼ Video Conferencing: -- ▼ Video Signaling: -- ▼ Voice: -- ▼ Voice Signaling: -- ▼
<input type="button" value="submit"/>	

# LLDP Configuration Using CLI Commands

## Enable/Disable LLDP

To enable or disable LLDP on the switch use the CLI commands below:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

**lldp enable**  
**no lldp enable**

Usage Example – Enabling LLDP:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#lldp enable
switch_a(config)#q
switch_a#
```

Usage Example – Disabling LLDP:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#no lldp enable
switch_a(config)#q
switch_a#
```

## LLDP Holdtime Multiplier

To modify LLDP holdtime multiplier use the CLI commands below:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **lldp holdtime multiplier <1-10>**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#lldp holdtime multiplier 4
```

```
switch_a (config) #q  
switch_a#
```

## LLDP Transmit Interval

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **lldp txinterval <5-32768>**

Usage Example:

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config) # lldp txinterval 30  
switch_a(config) #q  
switch_a#
```

## Enable/Disable Global LLDP TLVs

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **lldp tlv-global <TLV>**

**TLV Parameters**

TLV Parameters	Description
<b>port-descr</b>	Port Description
<b>sys-name</b>	System Name TLV
<b>sys-descr</b>	System Description TLV
<b>sys-cap</b>	System Capabilities
<b>mgmt-addrs</b>	Management Address
<b>port-vlan-id</b>	Port VLAN ID
<b>mac-phy</b>	MAC/PHY Configuration/Status
<b>port-and-protocol</b>	Port And Protocol VLAN ID
<b>vlan-name</b>	VLAN Name

<b>protocol-identity</b>	Protocol Identity
<b>link-aggregation</b>	(Link Aggregation)
<b>max-frame</b>	Maximum Frame Size

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config) # lldp tlv-global mgmt-addrs
switch_a(config) #q
switch_a#
```

## Enabling LLDP Transmit on a Port

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **lldp tx-pkt**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a#interface f1
switch_a(config) # lldp tx-pkt
switch_a(config) #q
switch_a#
```

## Enabling LLDP Receive on a Port

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **lldp rcv-pkt**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a#interface f1
switch_a(config) # lldp rcv-pkt
```

```
switch_a (config) #q  
switch_a#
```

## Enabling LLDP Notify

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **lldp notification**

Usage Example:

```
switch_a>enable  
switch_a#configure terminal  
switch_a#interface f1  
switch_a(config) # lldp notification  
switch_a(config) #q  
switch_a#
```

## Enabling Transmission of the Management IP

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **lldp mgmt-ip vlan <vlan id>**

Usage Example:

```
switch_a>enable  
switch_a#configure terminal  
switch_a#interface f1  
switch_a(config) # lldp mgmt-ip vlan 1  
switch_a(config) #q  
switch_a(config) #q  
switch_a#
```

## Enabling Specific TLV's on a Port

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **lldp tlv-select <TLV ID>** (see [TLV Parameters](#))

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a#interface f1
switch_a(config)# lldp tlv-select mgmt-addrs
switch_a(config)#q
switch_a#
```

## Enabling LLDP MED TLV's on a Port

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: [no] lldp med-tlv-select <extended-power-via-mdi, inventory, location, network-policy>

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a#interface f1
switch_a(config)# lldp med-tlv-select location
switch_a(config)#q
switch_a#
```

## Set LLDP-MED location information

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: [no] location civic-address [country-subdivision, county, city, city-division, country, block, street, leading-street-direction, trailing-street-suffix, street-suffix, number, number-suffix, landmark, location-information, name, zip, building, unit, floor, room, place-type, postal-community-name, post-box, additional-code, seat]

[no] location coordinate [latitude, longitude, altitude, alters, datum]

[no] location ecs-elin

Usage Example:

```
switch_a>enable
switch_a#configure terminal
```

```

switch_a(config) # location civic address Fryeburg
switch_a(config) #q
switch_a#

```

## ROUTING

### Static Route Configuration

A static route is a predefined path for the flow of network information. In networks with multiple layer three switches and VLANs, or switches with routers, you will need to enable static or dynamic routing.

To navigate to the **Static Route** page:

1. Click on the **+** next to **Routing**.
2. Click on **Static Route**.

Add Static Route	
Destination Prefix	<input type="text"/>
Prefix <input checked="" type="radio"/> Length <input type="radio"/> Mask	
Prefix Length	<input type="text"/>
Prefix Mask	<input type="text"/>
<input checked="" type="radio"/> Interface <input type="radio"/> Next Hop	
Interface	vlan1.1 <input type="button" value="▼"/>
Next Hop	<input type="text"/>
Administrative Distance	1 <small>(1-255)</small>
<input type="button" value="Add"/>	

Static Route Entries			
Select	Destination Prefix	Interface/Next Hop	Administrative Distance
<input type="button" value="Delete"/>			

**Figure 108: Add Static Route**

### Creating a Static Route

1. In the Destination field, enter the IP address of the final destination.
2. Choose either **Prefix Length** or **Mask**, and enter the corresponding number in the field below.

3. Select **Interface** or **Next Hop**. For interface, choose the switch VLAN port to be used for the static route. For Next Hop, enter the IP address of the closest router or switch to be used.
4. Enter the Administrative Distance.
5. Click Add to create the static route.

You can delete existing static routes by selecting an entry and clicking the Delete button.

## Routing Table

The routing table is a read-only page that shows existing routes. The Routing Table shows:

- **Route Code** – (R)ip, (K)ernel, (C)onnected, (S)tatic, \* Default
- **Destination** – Destination IP address
- **Distance/Metric** – Administrative distance/metric.
- **Next Hop** – Next closest router or Layer 3 switch on the route
- **Interface** – Interface used by defined route
- **Up Time** – Length of time the route is active

Routing Table					
Code	Destination	Distance/Metric	Next Hop	Interface	Up Time
S	1.111.111.0/24	1/0	172.16.0.200	ge1	
S	2.111.111.0/24	1/0	172.16.0.200	ge1	
C	127.0.0.0/8		directly-connected	lo	
C	172.16.0.0/24		directly-connected	ge1	
C	192.168.2.0/24		directly-connected	ge8	
R	192.168.3.0/24	120/2	172.16.0.200	ge1	00:02:50
R	192.168.4.0/24	120/12	172.16.0.200	ge1	00:02:40
R	192.168.5.0/24	120/12	172.16.0.200	ge1	00:02:40
R	192.168.6.0/24	120/12	172.16.0.200	ge1	00:02:40
R	192.168.7.0/24	120/12	172.16.0.200	ge1	00:02:40
R	192.168.8.0/24	120/12	172.16.0.200	ge1	00:02:40
R	192.168.9.0/24	120/12	172.16.0.200	ge1	00:02:40
R	192.168.10.0/24	120/12	172.16.0.200	ge1	00:02:40
R	192.168.11.0/24	120/12	172.16.0.200	ge1	00:02:40
R	192.168.12.0/24	120/12	172.16.0.200	ge1	00:02:40
C	192.168.20.0/24		directly-connected	vlan1.1	

Codes:  
R - RIP, K - Kernel, C - Connected,  
S - Static, \* - Candidate default

**Figure 109: Routing Table**

## Route Map

Route Maps can be used for both redistribution and policy routing, and thus give you more control over the way packets move around the network.

To navigate to the **Route Map** page:

1. Click on the + next to **Routing**.
2. Click on **Route Map**.

To create a new Route Map:

1. Enter a descriptive name in the Name field.
2. Select the type of Route Map – **Permit** or **Deny**.
3. Under Match Clause, choose the data item that the map will match in order for the route to take effect: **Interface**, **Metric**, **IP address**, or **None**.
4. Select the destination network or next hop router address to match an ACL, in an ACL is to be used.
5. Select the Set Clause data type, and enter the metric or next hop results.
6. Click **Add** to create the Route Map.

Add Route Map	
Name	<input type="text"/>
Permit/Deny	<input checked="" type="button"/> Permit
Sequence Number	<input type="text"/>
Match Clause	
<input checked="" type="radio"/> Interface <input type="radio"/> Metric <input type="radio"/> IP <input type="radio"/> None	
Interface	<input checked="" type="button"/> vlan1.1
Metric	<input type="text"/>
IP <input checked="" type="radio"/> Address <input type="radio"/> Next Hop <input type="radio"/> None	
Access List	<input checked="" type="checkbox"/>
Set Clause	
<input checked="" type="radio"/> Metric <input type="radio"/> Next Hop <input type="radio"/> None	
Metric	<input type="text"/>
Next Hop	<input type="text"/>
<input type="button"/> Add	

Figure 110: Create/Delete Route Map

## Proxy ARP

Proxy ARP allows the switch to answer ARP queries for a network address that is not on that network. The ARP Proxy is aware of the location of the traffic's destination, and offers its own MAC address as the (seemingly) final destination. The "captured" traffic is then

typically routed by the Proxy to the intended destination via another interface or via a tunnel. Proxy ARP should be used on networks where IP hosts are not configured with a default gateway.

To navigate to the **Proxy ARP** page:

1. Click on the + next to **Routing**.
2. Click on **Proxy ARP**.

To enable Proxy ARP on the switch:

1. Select the VLAN or layer 3 interface on which you want to enable Proxy ARP.
2. Select “enable” from the dropdown menu.
3. Click **Update Setting**.

Proxy ARP	
Interface	vlan1.1
Proxy ARP	Disable Enable

Update Setting

**Figure 111: Enable Proxy ARP on an interface**

## Static Routing with CLI Commands

### Create or Delete Static Route

To create (or delete) a static route, use the CLI commands below:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

**ip route <destination\_network>/<prefix-length> <next-hop\_address or exit interface> [<admin\_distance>]**

**no ip route <destination\_network>/<prefix-length> <next-hop\_address or exit interface> [<admin\_distance>]**

Usage Example: Set a route to remote network 172.16.3.0 with mask /24 where 192.168.2.4 is the next hop and administrative distance is 150.

```
switch_a(config)# ip route 172.16.3.0/24 192.168.2.4 150
```

### Show Existing IP Routes

To show all current IP routes, use the CLI commands below:

CLI Command Mode: **Privileged Exec Mode**

CLI Command Syntax:  
**show ip route**

Usage example:

```
switch_a#show ip route

Codes: K - kernel, C - connected, S - static, R - RIP
      * - candidate default

S      1.111.111.0/24 [1/0] via 172.16.0.200, ge1
S      2.111.111.0/24 [1/0] via 172.16.0.200, ge1
C      127.0.0.0/8 is directly connected, lo
C      172.16.0.0/24 is directly connected, ge1
C      192.168.2.0/24 is directly connected, ge8
R      192.168.3.0/24 [120/2] via 172.16.0.200, ge1, 00:03:33
R      192.168.4.0/24 [120/12] via 172.16.0.200, ge1, 00:03:23
R      192.168.5.0/24 [120/12] via 172.16.0.200, ge1, 00:03:23
```

## Create or Delete Access List

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
access-list <number> <permit or deny> <host_address> <mask>
no access-list <number> <permit or deny> <host_address> <mask>
```

Usage Example 1: Deny packets from host 172.16.30.2

```
switch_a(config) #access-list 10 deny host 172.16.30.2
```

Usage Example 2: Deny packets from hosts with IP address 172.16.30.x, where x = any number

```
switch_a(config) #access-list 10 deny host 172.16.30.2
0.0.0.255
```

## Configure Route Map

CLI Command Mode: **Global Configuration Mode, Route-Map Configuration Mode**

CLI Command Syntax:

```
route-map name <permit or deny> <sequence_number>
match ip address access_list <acl_id>
```

Usage Example:

```
switch_a(config) #route-map FIRST_MAP permit 12
switch_a(config-route-map) #match ip address 12
switch_a(config-route-map) #Set ip next-hop 10.1.2.1
```

## Enable Proxy ARP

To enable Proxy ARP on an interface, use the CLI commands below:

CLI Command Mode: **Interface Configuration Mode**

CLI Command syntax:

**ip proxy arp**

**no ip proxy arp**

Usage Example:

```
switch_a(config) #vlan database
switch_a(config-vlan)#int vlan1.1
switch_a(config-if)#ip proxy-arp
```

## VRRP

VRRP (Virtual Router Redundancy Protocol) is a distance-vector routing protocol that uses hop count as a routing metric. VRRP eliminates the risk of a single point of failure inherent in a static default routing environment. It specifies an election protocol that dynamically assigns responsibility for a virtual router to one of the VRRP routers on a LAN. One of the major advantages of VRRP is that it makes default path available without requiring configuration of dynamic routing on every end-host.

To navigate to the **VRRP** page:

1. Click on the **+** next to **Routing**.
2. Click on **VRRP**.

To configure VRRP:

1. Enter a Virtual Router Identifier (VRID), from 1 – 255.
2. Select the physical interface or VLAN that will be used for virtual routing.
3. Set the preempt mode to specify that the router with the highest priority will function as a backup to the **Master** router when master is unavailable.

4. Configure the priority. If you are configuring the master router, set this value to 255. For other VRRP routers, use a value from from 1 - 254. If the master router fails, the router with the highest priority will become the new master.
5. Set the **Advertisement Interval** (the rate at which the Master router sends advertisement packets to all members of the VRRP group) in seconds. Range is from 1 – 10. These packets indicate that the master router is still operational.
6. Set the Role to either **Master** or **Backup**.
7. Enter the virtual IP address for the VRRP session.
8. Set **Authentication Type** to either **None** or **Text**. This determines whether VRRP protocol exchanges are to be authenticated by a clear text password.
9. If the **Authentication Type** is set to **Text**, then enter the password to be used in the **Authentication Data** field (1 – 16 characters).
10. Select the Circuit Failover Interface from the dropdown menu.
11. Enter the Delta Priority. This is the time in seconds for the master to send VRRP advertisements.
12. Set the **Status** field to **Enable**.
13. Click the **Add** button.

Virtual MAC		<a href="#">Secondary ip address</a>
Virtual MAC	Enable	▼
		<input type="button" value="Update"/>
Add VRRP		
VRID	<input type="text"/>	
Interface	vlan1.1	
Preempt Mode	True	
Configured Priority	100	
Advertisement Interval	1	
Role	Backup	
Virtual IP Address	<input type="text"/>	
Authentication Type	None	
Authentication Data	<input type="text"/>	
Circuit Failover Interface	<input type="text"/>	
Delta Priority	<input type="text"/>	
Status	Disable	
<input type="button" value="Add"/>		

**Figure 112: Configure VRRP**

## VRRP with CLI Commands

### Enable or Disable VRRP

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

**router vrrp <1-255>**

**no router vrrp <1-255>**

Usage Example: Enable VRRP with VRID (Virtual Router Identifier) of 1

```
switch_a(config) # router vrrp 1
```

## **Enable or Disable Virtual MAC feature**

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

**vrrp vmac <enable | disable>**

Usage Example: Enable VRRP with VRID (Virtual Router Identifier) of 1

```
switch_a(config)# vrrp vmac enable
```

## **Set the Virtual IP Address for the VRRP Session**

Use the CLI commands below to set the virtual IP address and the default state (master or backup) of the VRRP router

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

**virtual-ip <ip\_address/mask> [e.g. 10.10.10.50/24] <master/slave>**

Usage Example: Set the virtual IP address to 10.10.10.50, and set the state to **Master**.

```
switch_a(config-router)# virtual-ip 10.10.10.50  
master
```

## **Specify the Interface for Virtual Routing**

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

**interface <interface name>**

Usage Example: Set the interface for VRRP to ge1

```
switch_a(config-router)# interface ge1
```

## **Configure VRRP Router Priority**

The VRRP router that owns the IP address(es) associated with the virtual router must have a priority of 255. VRRP backup routers must have a priority value from 1 to 254.

Use the CLI command below to set the priority.

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

**priority <1-255>**

Usage Example: Set the priority for the master router to 255

```
switch_a(config-router)# priority 255
```

## Enable/Disable Preempt Mode

Set the preempt mode for the VRRP session to specify that the highest priority will function as a backup to master when master is unavailable.

Use the CLI command below.

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

```
preempt <true/false>
```

## Set the Advertisement Interval

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

```
advertisement interval <1-10>
```

Usage Example: Set the advertisement interval to 5 seconds

```
switch_a(config-router)# advertisement-interval 5
```

## Enable the VRRP Session

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

```
enable
```

## Configure Circuit Failover

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

```
circuit-failover IFNAME <1-253>
```

<1-253> is the Priority Delta

# OSPF

OSPF (Open Shortest Path First) is a link state routing protocol. It is a classless protocol with support for VLSM and CIDR, manual route summarization, incremental updates, and

equal cost load balancing. OSPF uses only the interface cost as its metric. The administrative distance default value is 110. OSPF uses multicast addresses 224.0.0.5 and 224.0.0.6 for routing updates.

Devices running OSPF establish neighbor relationships, and then exchange routes. Instead of exchanging routing tables, devices exchange information about known network topologies. Each OSPF enabled device then calculates best routes and adds them to the routing table.

## OSPF Configuration

To navigate to the **Configuration** page:

1. Click on the + next to **OSPF**.
2. Click on **OSPF Configuration**

To configure OSPF on the managed switch (create an OSPF instance):

1. Enter an **OSPF Process ID** in a range of 1 to 65,535. The Process ID is only used locally, when multiple OSPF instances (with distinct Process IDs) are run on the same device. The Process ID does not need to match that of other devices.
2. Set **Router ID** (A.B.C.D).
3. Select **enable** or **disable** for RFC 1583 Compatibility. Setting this to enable will make the instance compatible with OSPFv2.
4. Set the Delay Time (0~2147483647). Default is 5 seconds.
5. Set the Hold Time (0~2147483647). Default is 10 seconds.
6. Set the Default Metric (0~16777214). Default is 0.
7. Enter the Auto-Cost Reference-Bandwidth (1~4294967). This is the cost in Mbps of an interface that a device advertises to its OSPF neighbors.
8. Click **Add** to create the OSPF instance.

Add OSPF Instance		
OSPF Process ID (0~65535)	<input type="text"/>	
Router ID (A.B.C.D)	<input type="text"/>	
RFC 1583 Compatibility	Disable ▾	
Delay Time (0~2147483647)	5	Default: 5 seconds
Hold Time (0~2147483647)	10	Default: 10 seconds
Default Metric (0~16777214)	0	Default: 0
Auto-Cost Reference-Bandwidth (1~4294967)	100	Default: 100 Mbps
		<input type="button" value="Add"/>

Figure 113: OSPF Configuration

## Stub Area Configuration

To navigate to the **Configuration** page:

1. Click on the + next to **OSPF**.
2. Click on **Stub area configuration**

External link state advertisements are not flooded to an OSPF Stub Area. Only routing information for destinations within the same stub area and for destinations in other areas within the OSPF domain are sent to the Stub Area. Default routes are used for destinations outside the OSPF domain.

To configure an OSPF Stub Area:

1. Select the OSPF Process ID.
2. Enter the Area ID (0~4294967295 in decimal, A.B.C.D in IP address format)
3. Select **enable** or **disable** for Import Summary LSAs.
4. Set the Default Cost (0~16777215).
5. Click the **Add** button when finished.

Add OSPF Stub Area								
OSPF Process ID				1 ▼				
Area ID (0~4294967295 in decimal A.B.C.D in IP address format)								
Import Summary LSAs				Enable ▼				
Default Cost (0~16777215)				1	Default: 1			
<input type="button" value="Add"/>								

OSPF Stub Area Configuration								
OSPF Process ID	1 ▼							
	Area ID	SPF Runs	Area Border Router Count	Area LSA Count	Area LSA Checksum	Import Summary LSAs	Default Cost	
<input type="button" value="▼"/>	-	-	-	-	-	-	<input type="button" value="Update"/>	<input type="button" value="Delete"/>

**Figure 114: OSPF Stub Area**

## NSSA Configuration

To navigate to the **NSSA Configuration** page:

1. Click on the + next to **OSPF**.
2. Click on **NSSA Configuration**.

An NSSA (Not So Stubby Area) (NSSA) is an OSPF stub area that can also import external route information. External routes from other areas are not flooded into an NSSA, but route information from the NSSA is translated and flooded into other areas (like the backbone).

To configure an NSSA:

1. Select the OSPF Process ID.
2. Enter the Area ID (0~4294967295 in decimal, A.B.C.D in IP address format)
3. Set **Import Summary LSAs** to Yes or No.
4. **Default Information Originate** has three fields: Admin Mode (enable or disable), Metric Value (0~16777214), and Metric Type (1 or 2).
5. Select the **Translator Role** to Never, Candidate, or Always.
6. Set the **Redistribute Mode** to enable or disable
7. Click the **Add** button when finished.

Add OSPF NSSA						
OSPF Process ID		1 ▼				
Area ID (0~4294967295 in decimal A.B.C.D in IP address format)		<input type="text"/>				
Import Summary LSAs		Yes ▼				
		Admin Mode	Disable ▼			
Default Information Originate		Metric Value (0~16777214)	1 <input type="text"/> Default: 1			
		Metric Type	2 ▼			
Translator Role		Candidate ▼				
Redistribute Mode		Enable ▼				
<input type="button" value="Add"/>						

OSPF NSSA Configuration													
OSPF Process ID	1 ▼												
	Area ID	SPF Runs	Area Border Router Count	Area LSA Count	Area LSA Checksum	Import Summary LSAs	Default Information Originate			Translator Role	Redistribute Mode	Translator State	
<input type="button" value="▼"/>		-	-	-	-		-	Admin Mode	Metric Value				

**Figure 115: Add an NSSA**

## OSPF Network

To navigate to the **OSPF Network** page:

1. Click on the + next to **OSPF**.
2. Click on **OSPF Network**.

Enable OSPF routing with a specified area ID on interfaces with IP addresses that match the specified network address.

To add an OSPF network:

1. Select the **OSPF Process ID**.
2. Enter the **Area ID**.
3. Enter the Network Prefix in A.B.C.D/X format.
4. Click **Add**.

OSPF Network Setting		
OSPF Process ID	1 ▾	
Area ID (0~4294967295 in decimal A.B.C.D in IP address format)	<input type="text"/>	
Network Prefix (A.B.C.D/M)	<input type="text"/>	
<input type="button" value="Add"/>		
OSPF Process ID	1 ▾	
Area ID	Network	
<input type="button" value="▼"/>	<input type="button" value="▼"/>	<input type="button" value="Delete"/>

**Figure 116: OSPF Network Setting**

## OSPF Interface

To navigate to the **OSPF Interface** page:

1. Click on the + next to **OSPF**.
2. Click on **OSPF Interface**.

OSPF must be enabled on at least one interface in order to be activated on a network.

Select the interface from the drop-down menu at the top, and fill out the following fields:

IP Address: (A.B.C.D format)

Router Priority: (0~255) (Default is 1)

Retransmission Interval: (1~65535) (Default is 5 seconds)

Hello Interval: (1~65535) (Default is 10 seconds)

Dead Interval: (1~65535) (Default is 40 seconds)

Transmit Delay: (1~65535) (Default is 1 second)

MTU: (Maximum transmission unit) Ignore (enable or disable)

MTU: Default is 9216

Authentication Type: (None, Simple or MD5)

Authentication Key: (1~8 characters)

MD5 Key ID: (1~255)

MD5 Password: (1~16 characters)

Cost: (1~65535) (Default is 10)

Click the **Update** button when finished.

Configure OSPF Interface		
Interface	<input type="button" value="▼"/>	
IP Address (A.B.C.D)		
Router Priority (0~255)	1	Default: 1
Retransmission Interval (1~65535)	5	Default: 5 seconds
Hello Interval (1~65535)	10	Default: 10 seconds
Dead Interval (1~65535)	40	Default: 40 seconds
Transmit Delay (1~65535)	1	Default: 1 second
MTU Ignore	Disable <input type="button" value="▼"/>	
MTU	9216	Default: 9216
Authentication Type	None <input type="button" value="▼"/>	
Authentication Key (1~8 characters)	<input type="text"/>	
MD5 Key ID (1~255)	<input type="text"/>	
MD5 Password (1~16 characters)	<input type="text"/>	
Cost (1~65535)	10	Default: 10
<input type="button" value="Update"/>		

**Figure 117: Configure OSPF Interface**

## OSPF Virtual Link

To navigate to the **OSPF Virtual Link** page:

1. Click on the **+** next to **OSPF**.
2. Click on **OSPF Virtual Link**.

All OSPF areas must be connected to the backbone area 0. If this is not physically possible, a Virtual Link can be used. A virtual link connects through another area that is connected to area 0.

To create a Virtual Link:

1. Select the **Process ID** for the link.
2. Select the **Area ID**.
3. Enter the **Neighbor Router ID**.
4. Enter the **Hello and Dead Intervals**, and **Transmit Delay**.
5. Enter the Retransmit Interval.
6. Select the **Authentication Type**, and enter the corresponding keys/password in the fields below.

6. Click **Update Setting**. The newly added Virtual Link will be displayed in the table at the bottom of the screen.

Configure OSPF Virtual Link		
OSPF Process ID	-- ▾	
Virtual Link	Add ▾	
Area ID	-- ▾	
Neighbor Router ID		
Hello Interval (1~65535)	10	Default: 10 seconds
Dead Interval (1~65535)	40	Default: 40 seconds
Transmit Delay (1~65535)	1	Default: 1 seconds
Retransmit Interval (1~65535)	5	Default: 5 seconds
Authentication Type	None ▾	
Authentication Key (1~8 characters)		
Key ID (1~255)		
MD5 Key (1~16 characters)		
		<b>Update Setting</b>

**Figure 118: Configure OSPF Virtual Link**

## OSPF Redistribute

To navigate to the **OSPF Redistribute** page:

1. Click on the + next to **OSPF**.
2. Click on **OSPF Redistribute**.

This screen is for redistributing routes from a routing protocol, static route, and kernel route into an OSPF routing table.

1. Select the **Process ID**.
2. Select the protocol type to be redistributed (Connected, Static, RIP).
3. Select the **Route Map**.
4. Enter the **Metric** and **Metric Type**.
5. Enter the **Tag** to be used for filtering, if applicable.
6. Click **Add**. The entry will display in the Redistribute List below.

Configure OSPF Redistribute	
OSPF Process ID	-- ▾
Protocol	Connected ▾
Route Map	▼
Metric (0~16777214)	
Metric Type	External Type 1 ▾
Tag (0~4294967295)	
Add	

**Figure 119: Configure OSPF Redistribute**

## OSPF Area Range

To navigate to the **OSPF Area Range** page:

1. Click on the + next to **OSPF**.
2. Click on **OSPF Area Range**.

Use area range command to consolidate or summarize area routes. Enter the OSPF Process ID, Area ID, and Network Prefix, and set **Advertise** to **enable**. Then click the Add button.

OSPF Area Range Configuration	
OSPF Process ID	1 ▾
Area ID (0~4294967295 in decimal A.B.C.D in IP address format)	
Network Prefix (A.B.C.D/M)	
Advertise	Enable ▾
Add	

OSPF Process ID	1 ▾		
Area ID	Network	Advertise	
▼	-	-	Delete

**Figure 120: OSPF Area Range**

## **OSPF Neighbor**

To navigate to the **OSPF Neighbor** page:

1. Click on the **+** next to **OSPF**.
2. Click on **OSPF Neighbor**.

This is a read only page that shows current OSPF neighbors.

## **OSPF Route**

To navigate to the **OSPF Route** page:

1. Click on the **+** next to **OSPF**.
2. Click on **OSPF Route**.

This is a read only page that shows the OSPF routing table.

# **OSPF Configuration with CLI Commands**

## **Enable or Disable OSPF**

To enable OSPF on the switch, use the CLI commands below

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

**[no] router ospf <1-65535>**

Parameters <1-65535>: Process ID; unique for each routing process.

Usage Example:

```
switch_a(config) #router ospf 100  
switch_a(config-router) #
```

## **Show OSPF Configuration and Settings**

CLI Command Mode: **Privileged Exec Mode**

CLI Command Syntax:

**show ip ospf**

**show ip ospf border-routers**

**show ip ospf database**

**show ip ospf interface**

```
show ip ospf neighbor  
show ip ospf route  
show ip ospf virtual-links
```

Usage Example:

```
switch_a#show ip ospf neighbor
```

## Enable authentication for an OSPF area

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

```
[no] area (A.B.C.D | <0-4294967295>) authentication  
area (A.B.C.D | <0-4294967295>) authentication message-digest
```

Usage Example:

```
switch_a(config-router)# area 1 authentication message-digest
```

## Specify a cost for the default summary route

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

```
area (A.B.C.D | <0-4294967295>) default-cost <0-16777215>  
no area (A.B.C.D | <0-4294967295>) default-cost
```

Usage Example:

```
switch_a(config-router)# area 1 default-cost 10
```

## Configure a filter to advertise summary routes

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

```
[no] area (A.B.C.D | <0-4294967295>) filter-list access WORD (in | out)
```

Usage Example:

```
switch_a(config-router)# area 1 filter-list access 1 in
```

## Summarize OSPF routes at an area boundary

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

```
area (A.B.C.D | <0-4294967295>) range A.B.C.D/M  
area (A.B.C.D | <0-4294967295>) range A.B.C.D/M advertise  
area (A.B.C.D | <0-4294967295>) range A.B.C.D/M not-advertise
```

```
no area (A.B.C.D | <0-4294967295>) range A.B.C.D/M  
no area (A.B.C.D | <0-4294967295>) range A.B.C.D/M (advertise | not-advertise)
```

Usage Example:

```
switch_a(config-router)# area 1 range 192.16.0.0/24
```

### Set an area as a Not-So-Stubby-Area (NSSA)

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

```
[no] area (A.B.C.D | <0-4294967295>) nssa  
area (A.B.C.D | <0-4294967295>) nssa (translate-candidate | translate-always)  
area (A.B.C.D | <0-4294967295>) nssa {translator-role (candidate | always) |  
stabilityinterval <0-2147483647> | no-redistribution | default-information-  
originate (metric <0-16777214> | metric-type <1-2> | metric <0-16777214>  
metric-type <1-2> | metric-type <1-2> metric <0-16777214> |) | no-summary}  
no area (A.B.C.D | <0-4294967295>) nssa {translator-role | no-redistribution |  
defaultinformation-originate | no-summary}
```

Usage Example:

```
switch_a(config-router)# area 3 nssa translator-role candidate  
noredistribution
```

### Configure the short-cutting mode of an area

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

```
area (A.B.C.D | <0-4294967295>) shortcut (default | enable | disable)  
no area (A.B.C.D | <0-4294967295>) shortcut  
no area (A.B.C.D | <0-4294967295>) shortcut (enable | disable)
```

Usage Example:

```
switch_a(config-router)# area 1 shortcut default
```

### Define an area as a stub area

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

```
area (A.B.C.D | <0-4294967295>) stub  
area (A.B.C.D | <0-4294967295>) stub no-summary  
no area (A.B.C.D | <0-4294967295>) stub
```

**no area (A.B.C.D | <0-4294967295>) stub no-summary**

Usage Example:

```
switch_a(config-router)# area 1 stub no-summary
```

### Configure a link between two separated backbone areas

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

**[no] area (A.B.C.D | <0-4294967295>) virtual-link A.B.C.D**

**area (A.B.C.D | <0-4294967295>) virtual-link A.B.C.D {authentication  
(messagedigest | null) | authentication-key LINE | message-digest-key <1-255>  
md5 LINE | deadinterval <1-65535> | hello-interval <1-65535> | retransmit-  
interval <1-3600> | transmit-delay <1-3600>}**

**[no] area (A.B.C.D | <0-4294967295>) virtual-link A.B.C.D {fall-over bfd}**

**no area (A.B.C.D |<0-4294967295>) virtual-link A.B.C.D {dead-interval |  
hellointerval | retransmit-interval | transmit-delay | authentication |  
authenticationkey | message-digest-key <1-255>}**

Usage Example:

```
switch_a(config-router)# area 1 virtual-link 10.10.11.50 hello 5  
dead 10
```

### Control how OSPF calculates the default metric for the interface

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

**auto-cost reference-bandwidth <1-4294967>**

**no auto-cost reference-bandwidth**

Usage Example:

```
switch_a(config-router)# auto-cost reference-bandwidth 50
```

### Enable / disable RFC 2328 compatibility

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

**[no] compatible rfc1583**

Usage Example:

```
switch_a(config-router)# compatible rfc1583
```

## Create a default external route into an OSPF routing domain

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

**default-information originate**

**default-information originate {metric <0-16777214> | metric-type (1 | 2) | {route-map WORD | always}}**

**no default-information originate**

**no default-information originate {metric | metric-type | {route-map | always}}**

Usage Example:

```
switch_a(config-router)# default-information originate always metric  
23 metric-type 2 route-map myinfo
```

## Set OSPF administrative distances

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

**[no] distance <1-255>**

**[no] distance ospf [external | inter-area | intra-area] <1-255>**

Usage Example:

```
switch_a(config-router)# distance 255
```

## Configure a stub host entry belonging to a particular area

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

**host A.B.C.D area (A.B.C.D | <0-4294967295>)**

**host A.B.C.D area (A.B.C.D | <0-4294967295>) cost <0-65535>**

**no host A.B.C.D area (A.B.C.D | <0-4294967295>)**

**no host A.B.C.D area (A.B.C.D | <0-4294967295>) cost (<0-65535> |)**

Usage Example:

```
switch_a(config-router)# host 172.16.10.101 area 2 cost 10
```

## Limit number of Database Descriptors (DD) that can be processed concurrently

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

**max-concurrent-dd <1-65535>**

**no max-concurrent-dd**

Usage Example:

```
switch_a(config-router) # max-concurrent-dd 4
```

## Set maximum number of OSPF areas

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

**maximum-area <1-4294967294>**

**no maximum-area**

Usage Example:

```
switch_a(config-router) # maximum-area 5000
```

## Specify and configure neighbor routers

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

**[no] neighbor A.B.C.D**

**[no] neighbor A.B.C.D (priority <0-255> | poll-interval <1-2147483647> | cost <1-65535>)**

**[no] neighbor A.B.C.D (cost <1-65535>)**

Usage Example:

```
switch_a(config-router) # neighbor 1.2.3.4 priority 1
```

## Enable OSPF routing with a specified area

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

Network address defined using the prefix length:

**[no] network A.B.C.D/M area (A.B.C.D | <0-4294967295>) (instance-id <0-255> | )**

Network address defined using subnet mask:

**[no] network A.B.C.D A.B.C.D area (A.B.C.D | <0-4294967295>) (instance-id <0-255> | )**

Usage Example:

```
switch_a(config-router) # network 10.0.0.0/8 area 1.1.1.1
```

## **Set an OSPF Area Border Router (ABR) type**

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

**[no] ospf abr-type (cisco | ibm | standard | shortcut |)**

Usage Example:

```
switch_a(config-router)# ospf abr-type ibm
```

## **Specify a router ID for the OSPF process**

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

**[no] ospf router-id A.B.C.D**

Usage Example:

```
switch_a(config-router)# ospf router-id 2.3.4.5
```

## **Set maximum number of LSAs that can be supported**

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

**overflow database (<0-4294967294> | asbr-summary | external | network | router | summary) <0-2147483647> <0-65535>**

Parameters: <0-2147483647> Maximum number of LSAs

<0-65535> Time to recover (0 not recover)

Usage Example:

```
switch_a(config-router)# overflow database 100
```

## **Suppress sending Hello packets**

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

**[no] passive-interface IFNAME**

**[no] passive-interface (IFNAME | A.B.C.D)**

Usage Example:

```
switch_a(config-router)# passive-interface ge10
```

## **Redistribute routes into an OSPF routing table**

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

```
redistribute (connected | static | rip) (<1-65535> |) {metric <0-16777214> |  
metric-type (1 | 2) | route-map WORD | tag <0-4294967295>}  
  
no redistribute (connected | static | rip (<1-65535> |) {metric | metric-type |  
route-map | tag}
```

Usage Example:

```
switch_a(config-router)# redistribute bgp metric 12
```

### **Summarize or suppress external routes**

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

```
[no] summary-address A.B.C.D/M (not-advertise | tag <0-4294967295>)|  
no summary-address A.B.C.D/M
```

Usage Example:

```
switch_a(config-router)# summary-address 10.10.10.0/24 not-advertise
```

### **Adjust route-calculation timers**

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

```
timers spf <0-2147483647> <0-2147483647>  
no timers spf
```

Usage Example:

```
switch_a(config-router)# timers spf exp 10000 25000
```

### **Set OSPF authentication method on an interface**

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

```
ip ospf authentication (null | message-digest |)  
ip ospf A.B.C.D authentication (null | message-digest |)  
no ip ospf (A.B.C.D |) authentication
```

Usage Example:

```
switch_a(config-if)# ip ospf authentication null
```

### **Specify OSPF authentication password for neighboring routers**

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

**ip ospf (A.B.C.D) authentication-key LINE**

**no ip ospf (A.B.C.D) authentication-key**

Usage Example:

```
switch_a#configure terminal
switch_a(config)#router ospf 100
switch_a(config-router)#network 10.10.10.0/24 area 0
switch_a(config-router)#area 0 authentication
switch_a(config-router)#exit
switch_a(config)#interface ge24
switch_a(config-if)#ip ospf 12.10.10.2 authentication-key testkey
```

## Specify the cost of the link-state metric in a router-LSA

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

**ip ospf (A.B.C.D) cost <1-65535>**

**no ip ospf (A.B.C.D) cost**

Usage Example:

```
switch_a(config-if)# ip ospf 10.10.12.12 cost 200
```

## Turn on LSA database-filter

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

**ip ospf (A.B.C.D) database-filter all out**

**no ip ospf (A.B.C.D) database-filter**

Usage Example:

```
switch_a(config-if)# ip ospf database-filter all out
```

## Set interval after which a neighbor is declared dead

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

**ip ospf (A.B.C.D) dead-interval <1-65535>**

**no ip ospf (A.B.C.D) dead-interval**

Usage Example:

```
switch_a(config-if)# ip ospf dead-interval 100
```

## **Disable OSPF on an interface**

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

**[no] ip ospf disable all**

Usage Example:

```
switch_a(config-if)# ip ospf disable all
```

## **Set Hello packet interval**

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

**ip ospf (A.B.C.D |) hello-interval <1-65535>**

**no ip ospf (A.B.C.D |) hello-interval**

Usage Example:

```
switch_a(config-if)# ip ospf hello-interval 10
```

## **Register an MD5 key for OSPF authentication**

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

**ip ospf (A.B.C.D |) message-digest-key <1-255> md5 LINE**

**no ip ospf (A.B.C.D |) message-digest-key <1-255>**

Usage Example:

```
switch_a(config-if)#ip ospf authentication message-digest
```

```
switch_a(config-if)#ip ospf message-digest-key 1 md5 passwordsample
```

## **Set MTU size for OSPF to construct packets**

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

**ip ospf mtu <576-65535>**

**no ip ospf mtu**

Usage Example:

```
switch_a(config-if)# ip ospf mtu 10000
```

## **Ignore MTU in DBD packets**

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

**ip ospf (A.B.C.D|) mtu-ignore**

**no ip ospf (A.B.C.D|) mtu-ignore**

Usage Example:

```
switch_a(config-if)# ip ospf mtu-ignore
```

## Set the OSPF network type

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

**ip ospf network (broadcast | non-broadcast | point-to-multipoint | point-to-point)**

**ip ospf network point-to-multipoint non-broadcast**

**no ip ospf network**

Usage Example:

```
switch_a(config-if)# ip ospf network point-to-point
```

## Set designated router priority

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

**ip ospf (A.B.C.D|) priority <0-255>**

**no ip ospf (A.B.C.D|) priority**

Usage Example:

```
switch_a(config-if)# ip ospf priority 20
```

## Set time between retransmitting lost link state advertisements

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

**ip ospf (A.B.C.D |) retransmit-interval <5-65535>**

**no ip ospf (A.B.C.D |) retransmit-interval**

Usage Example:

```
switch_a(config-if)# ip ospf retransmit-interval 20
```

## Set the link state transmit delay

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

**ip ospf (A.B.C.D |) transmit-delay <1-65535>**

**no ip ospf (A.B.C.D |) transmit-delay**

Usage Example:

```
switch_a(config-if)# ip ospf transmit-delay 5
```

## Configure a distribution list

CLI Command Mode: **Router Configuration Mode**

CLI Command Syntax:

**distribute-list <list> <in/out>**

Usage Example:

```
switch_a(config-router)# distribute-list 1300 in
```

# RIP

The Routing Information Protocol (RIP) is a distance-vector routing protocol that uses hop count as a routing metric. RIP prevents routing loops by setting a limit on the number of hops allowed in a path from source to destination.

## RIP General Settings

To navigate to the **General Settings** page:

1. Click on the + next to **RIP**.
2. Click on **RIP General Settings**

To enable and configure RIP on the managed switch:

1. Set the Router RIP field to Enable.
2. Choose RIP version 1 or 2.
3. Set the Default Metric value in the range of 1 to 16.
4. Set the Distance from 1 to 255 (Default value is 120)
5. Set the timings for the Routing Table Update Timer, the Routing Information Timeout Timer, and the Garbage Collection Timer (Default values are 30, 180, and 120 seconds respectively).
6. Click Update Setting to start RIP with the set values.

Router RIP	<input type="button" value="Disable"/>
<b>RIP General Setting</b>	
Version	<input type="button" value="2"/>
Default-Information	<input type="button" value="Disable"/>
Default-Metric (1~16)	1 Default: 1
Distance (1~255)	120 Default: 120
Times	
Routing Table Update Timer (5~2147483647)	30 Default: 30s
Routing Information Timeout Timer (5~2147483647)	180 Default: 180s
Garbage Collection Timer (5~2147483647)	120 Default: 120s
<input type="button" value="Update Setting"/>	

**Figure 121: RIP General Settings**

## RIP Port Settings

To configure RIP port settings:

1. Select the interface.
2. Set the RIP receive version (1, 2, or both)
3. Set Receive packets to enable or disable
4. Set the Send Version to 1, 2, 1-compatible, or both.
5. Set Send Packet to Enable or Disable.
6. For the Split Horizon Field, select enable, disable, or poison reverse.
7. Set the Authentication Mode to disable, MD5, or simple password.
8. If the Authentication Mode is MD5 or Simple Password, set the Authentication Key (1 – 16 characters).
9. Click Update Setting

RIP Port Setting	
Interface	<input type="button" value="--"/>
Receive Version	<input type="button" value="--"/>
Receive Packet	Enable <input type="button" value="--"/>
Send Version	<input type="button" value="--"/>
Send Packet	Enable <input type="button" value="--"/>
Split Horizon	Poison Reverse <input type="button" value="--"/>
Authentication Mode	MD5 <input type="button" value="--"/>
Authentication Key	(1-16 characters)
<input type="button" value="Update Setting"/>	

Figure 122: RIP Port Settings

## RIP Route

The RIP route table is a read-only page that shows existing RIP routes. The Routing Table fields are:

- **Route Code** – (R)ip, (K)ernel, (C)onnected, (S)tatic
- **Network** – IP address of destination network
- **Next Hop** – Next closest router or Layer 3 switch towards destination
- **Metric** – Number of hops
- **From** – IP address of source router
- **I/F** – Interface
- **Time** – Duration of time since last update

RIP Route Table						
Code	Network	Next Hop	Metric	From	I/F	Time
RIP route table is empty.						
Codes:						
R - RIP, Rc - RIP connected, Rs - RIP static, K - Kernel, C - Connected, S - Static						
<input type="button" value="Refresh"/>						

Figure 123: RIP Route Table

## RIP Network

On the RIP Network screen, you can add or delete subnet addresses and interfaces to be advertised by RIP.

To navigate to the **RIP Network** page:

1. Click on the + next to **RIP**.
2. Click on **RIP Network**

To add subnets or interfaces:

1. Enter the subnet address and prefix length, or choose the interface from the drop-down menu.
2. Click Add button.

RIP Network by Subnet		
Subnet Address	Prefix Length	Action
<input type="text"/>	<input type="text"/>	Add
192.167.0.0	16	Delete

RIP Network by Interface	
Interface	Action
vlan1.1 <input checked="" type="checkbox"/>	Add
vlan1.1	Delete

**Figure 124: RIP Network Additions and Deletions**

## RIP Neighbor

The RIP Neighbor screen is used to add/delete RIP neighbor IP addresses. Add the IP address of neighboring routers and layer 3 switches, and click Add. Select existing neighbors from the list at the bottom and click Delete to remove them.

Add RIP Neighbor		
IP Address	<input type="text"/>	Add

Neighbor List	
Select	Neighbor Address

**Figure 125: RIP Neighbor Addition and Deletion**

## Add or Delete RIP Passive Interface

On the RIP Passive screen, you can select an interface to be “passive,” that is, to prevent the RIP routing process from sending multicast/broadcast updates on that interface. Select the desired interface from the drop-down menu and click Add to make that interface passive. You can select and delete passive interfaces from the Passive Interface List at the bottom. Doing so will return them to send multicast/broadcast updates normally.

Add RIP Passive Interface		
Interface	vlan1.1	<input type="button" value="Add"/>
Passive Interface List		
Select	Passive Interface	<input type="button" value="Delete"/>

Figure 126: Set and Delete Passive RIP interfaces

## RIP Redistribute

Redistribution is using a routing protocol to advertise routes that have been learned by another routing protocol, static routes, or directly connected routes. To add an item to the redistribute list, select the protocol (**connected** or **static**), a route map that has been previously defined, and the desired metric, then click the Add button.

Redistribute List			
Protocol	Route Map	Metric	Action
Connected	<input type="button" value=""/>	<input type="button" value="--"/>	<input type="button" value="Add"/>
Connected		1	<input type="button" value="Delete"/>

Figure 127: Add or Delete Items to Redistribute List

# RIP Configuration with CLI Commands

## Enable or Disable RIP

CLI Command Mode: **Global Configuration Mode, Router Configuration**

CLI Command Syntax:

**router rip**

**Version 2**

**No router rip**

Usage Example: Enable RIP version 2

```
switch_a(config)# router rip  
switch_a(config-router)#version 2
```

## Enable RIP Routing on a Specific Network

CLI Command Mode: **Router Configuration**

CLI Command Syntax:

**network <submask>**

Usage Example: Enable RIP on 2.2.2.0 255.255.255.0 and 192.168.20.0 255.255.255.0

```
switch_a(config-router)#network 2.2.2.0/24  
switch_a(config-router)#network 192.168.20.0/24
```

## Show RIP Routing Table

CLI Command Mode: **Privileged Exec Mode**

CLI Command Syntax:

**show ip rip**

**show ip interface brief**

## Define RIP Neighbor

CLI Command Mode: **Router Configuration**

CLI Command Syntax:

**neighbor <ip address>**

**no neighbor <ip address>**

## Set Interface to Passive

Set an interface to passive, use the CLI commands below:

CLI Command Mode: **Router Configuration**

CLI Command Syntax:

**passive-interface <interface>**

**no passive-interface <interface>**

## RIP Default Metric

To create a default RIP metric for redistributed routes, use the CLI commands below:

CLI Command Mode: **Router Configuration**

CLI Command Syntax:

**default-metric <value>**

**no default-metric**

## RIP Send Version

To specify a RIP version on an interface basis, use the CLI commands below:

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

**ip rip send version <1,2>**

**no ip rip send version <1,2>**

## Redistribute

To redistribute routes from one routing domain to another, use the CLI commands below:

CLI Command Mode: **Router Configuration**

CLI Command Syntax:

**redistribute (connected | static) [metric <0-16>] [route-map map\_name]**

Usage Example:

```
switch_a(config-router) # redistribute static metric 10
```

## RIP Default Route

To generate a default route into the local RIP domain:

CLI Command Mode: **Router Configuration**

CLI Command Syntax:

**default-information originate**

**no default-information originate**

## Define RIP Administrative Distance

To define the administrative distance assigned to routes by RIP, use the CLI commands below:

CLI Command Mode: **Router Configuration**

CLI Command Syntax:

**distance <admin-distance value>**

**no distance**

## Define RIP Timers

To define the RIP network timers, use the CLI commands below:

CLI Command Mode: **Router Configuration**

CLI Command Syntax:

**timers basic <update> <invalid> <flush>**

**no timers basic**

Description of parameters:

- **Update:** Rate (in seconds) at which updates are sent. Default is 30 seconds.
- **Invalid:** Interval (in seconds) after which a route is declared invalid. The interval should be at least three times the value of update time. Default is 180 seconds.
- **Flush:** Number of seconds that must pass before route is removed from routing table. Default is 240 seconds.

Usage Example:

```
switch_a(config-router)# timers basic 30 180 120
```

## RIP Authentication

To configure text or MD5 authentication for RIP:

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax:

**ip rip authentication mode <md5 | text>**

Usage Example:

```
switch_a(config-if)#ip rip authentication mode md5
```


# OTHER PROTOCOLS

## GVRP

Defined in IEEE 802.1Q, GVRP is a protocol used to dynamically create VLANs on a switch. Any IEEE 802.1Q compliant switch must implement this protocol.

To navigate to the **Other Protocols / GVRP** page (see [Figure 128](#)):

1. Click on the + next to **Other Protocols**.
2. Click on **GVRP**.

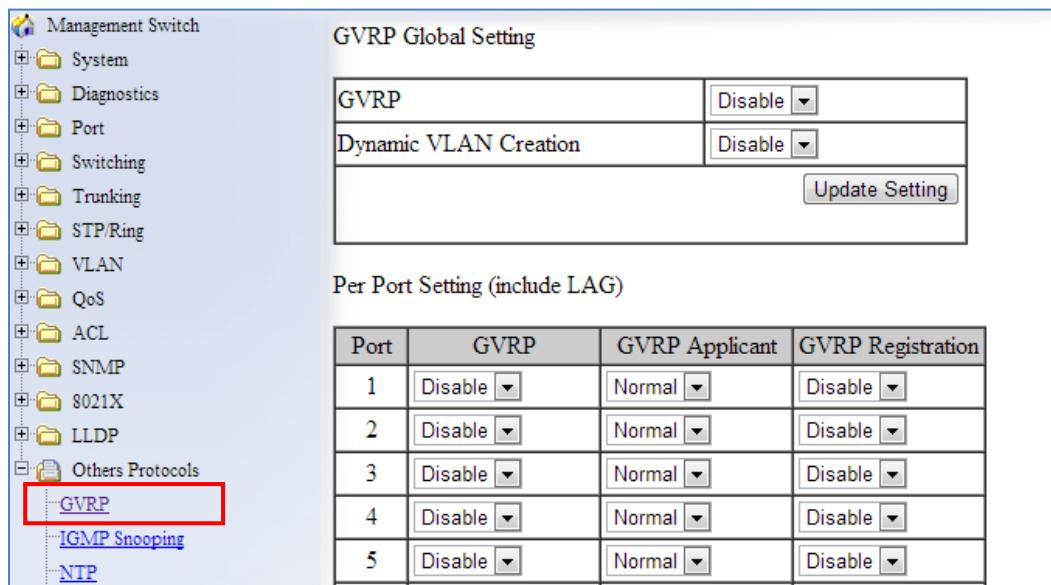

**Figure 128: GVRP**

## General Overview

To enable the GVRP protocol on your network, you must make sure that the switches in your network are configured with the minimum requirements for each type of switches listed below:

For the **Access Switches** at the edge of the network, below are the minimum requirements:

- All of the user VLANs have been created in the VLAN Database.
- The IP address for the Management VLAN has been configured.
- The appropriate Port Type (Access or Trunk) and the PVID have been configured for all the ports of the switch.

- All the member Trunk ports for all the user VLANs have been configured.
- The GVRP protocol has been globally enabled, and GVRP is locally enabled on the Trunk Ports as well.


For the **Distribution Switches** in the core of the network, below are the minimum requirements:

- The Management VLAN has been created in the VLAN Database.
- The IP address for the Management VLAN has been configured.
- The appropriate Port Type (Access or Trunk) and the PVID have been configured for all the ports of the switch.
- The GVRP protocol has been globally enabled and GVRP is locally enabled on the Trunk Ports as well.
- The Dynamic VLAN Creation feature has been enabled.

## Enabling the GVRP Protocol at the Global Level

To enable the GVRP protocol globally on a distribution switch (see [Figure 129](#)):

1. Under **GVRP Global Setting**, choose the **Enable** option from the drop-down list next to **GVRP**.
2. Choose the **Enable** option from the drop-down list next to **Dynamic VLAN Creation**.
3. Click on the **Update Setting** button.

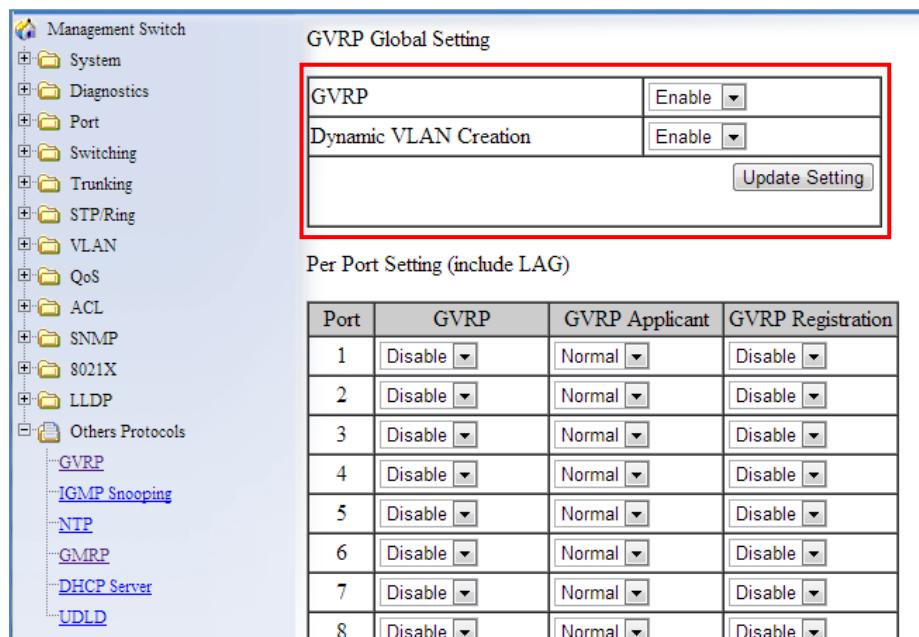

**Figure 129: GVRP Configuration Distribution Switch**

To enable the GVRP protocol globally on an **Access Switch** (see [Figure 130](#)):

1. Under **GVRP Global Setting**, choose the **Enable** option from the drop-down list next to **GVRP**.
2. Click on the **Update Setting** button.

GVRP Global Setting	
GVRP	Enable <input type="button" value="▼"/>
Dynamic VLAN Creation	Disable <input type="button" value="▼"/>
<input type="button" value="Update Setting"/>	

**Figure 130: GVRP Configuration Access Switch**

### Enabling the GVRP Protocol at the Port Level

To navigate to the **Other Protocols / GVRP** page (see [Figure 128](#)):

1. Click on the + next to **Other Protocols**.
2. Click on **GVRP**.

To enable the GVRP protocol locally at the port level, for both the Access switch and the Distribution switch, apply the following procedures to all the Trunk Ports of the switch:

1. For all the Trunk Ports under the **Per Port Setting (include LAG)** section, choose the **Enable** option from the drop-down list under the **GVRP** column.
2. For all the Trunk Ports under the **Per Port Setting (include LAG)** section, choose the **Active** or **Normal** option from the drop-down list under the **GVRP Applicant** column.
  - **Active** - Use this option if you want to run the GVRP protocol on that Trunk Port even if it is blocked by the STP protocol.
  - **Normal** – Use this option if you do not wish to run the GVRP protocol on a Trunk Port when it is being blocked by the STP protocol.
3. For all the Trunk Ports under the **Per Port Setting (include LAG)** section, choose the **Enable** option from the drop-down list under the **GVRP Registration** column.
4. Click on the **Update Setting** button.
5. Save the configuration (see the [Save Configuration Page](#))

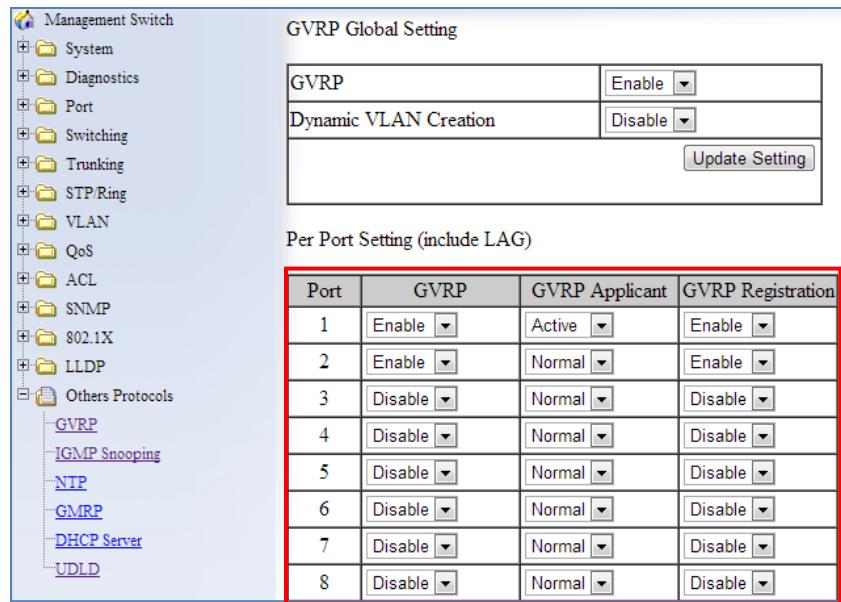


Figure 131: GVRP Per Port Settings

## GVRP Configuration Examples Using CLI Commands

For more information on CLI command usage see [CLI Command Usage](#).

To enable or disable GVRP globally on the EtherWAN switch, use the following CLI commands:

### CLI Command Mode: Global Configuration Mode

CLI Command Syntax:

```
set gvrp enable bridge 1
set gvrp disable bridge 1
```

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config) # set gvrp enable bridge 1
switch_a(config) # set gvrp disable bridge 1
switch_a(config) #q
switch_a#
```

To enable the dynamic VLAN creation feature of GVRP on the EtherWAN switch, you must use the following CLI commands:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **set gvrp dynamic-vlan-creation disable bridge 1**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# set gvrp dynamic-vlan-creation disable bridge 1
switch_a(config)#q
switch_a#
```

To enable or disable GVRP locally on a port on the EtherWAN switch, you must use the following CLI commands:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

**set port gvrp enable <port id>**  
**set port gvrp disable <port id>**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# set port gvrp enable fe1
switch_a(config)# set port gvrp disable fe1
switch_a(config)#q
switch_a#
```

By default, when GVRP is enabled on a port the **Applicant** runs in Normal mode, which means that the GVRP protocol will not send out any PDUs from a port if the port is being blocked by STP. When you enable the GVRP Applicant to run in Active mode on a port, the GVRP protocol will continue to send PDUs from a port even if the port is being blocked by STP.

The GVRP **Applicant** can be set to run in Normal or Active mode on a port by issuing the following CLI commands:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
set gvrp applicant state normal <port id>
set gvrp applicant state active <port id>
```

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# set gvrp applicant state normal fe1
switch_a(config)# set gvrp applicant state active fe1
switch_a(config)#q
switch_a#
```

When you enable GVRP on a port, the **Registrar** is enabled on the port by default. You can enable or disable the GVRP **Registrar** on a port by issuing the following CLI commands:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
set gvrp registration normal <port id>
set gvrp registration forbidden <port id>
```

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# set gvrp registration normal fe1
switch_a(config)# set gvrp registration forbidden fe1
switch_a(config)#q
switch_a#
```

# IGMP Snooping

The settings in the IGMP Snooping feature of the EtherWAN switch controls how the switch forwards multicast packets.

## General Overview

The switch has been outfitted with the IGMP Snooping function in three modes:

- **Disabled:**
  - The switch will forward all multicast packets according to the **Forced Forwarding Port** setting based on the following rule:
    - All multicast packets will be forwarded to only the port specified by either the **PassiveForwardMode** or the **ForcedForwardMode** function.
- **Passive mode:**
  - The switch will forward any multicast packets that have known receivers to the known multicast receiver ports only.
  - The switch will forward any unknown multicast packets (multicast packets without any known receivers) according to the **Forced Forwarding Port** setting based on the following rule:
    - When there is no Querier Port (a port that receives IGMP queries) present all unknown multicast packets will be forwarded to the port specified by either the **PassiveForwardMode** function or the **ForcedForwardMode** function.
    - When there is a Querier port present, the switch will forward all unknown multicast packets to the Querier port. In addition, all unknown multicast packets will be forwarded to the port specified by the **ForcedForwardMode** function as well.
- **Querier mode:**
  - The switch will forward any multicast packets that have known receivers to the known multicast receiver ports only.
  - The switch will forward any unknown multicast packets according to the **Forced Forwarding Port** setting based on the following rule:
    - All unknown multicast packets will be sent to only the port specified by the **ForcedForwardMode** function.
    - The switch will also transmit IGMP Queries to the specified VLAN and according to the specified IGMP Query parameters.

## Enabling the IGMP Snooping Modes

To navigate to the **IGMP Snooping** page:

1. Click on the + next to **Other Protocols**.
2. Click on **IGMP Snooping**.

To put the IGMP Snooping feature in the correct Mode, follow the steps below:

- Choose the appropriate choice from the dropdown list next to **IGMP mode**
- Click on the **Update Setting** button (See [below](#))

The screenshot shows the Management Switch interface with the following navigation path: Management Switch > Other Protocols > IGMP Snooping. The main window displays the 'Multicast Current Table' and the 'IGMP Mode' configuration. The 'IGMP Mode' section contains a dropdown menu set to 'Passive'. Below it is a large table with the following rows:

VLAN ID	<input type="button" value="▼"/>
IGMP Version	<input type="button" value="3 ▼"/>
Fast Leave	<input type="button" value="Disable ▼"/>
Query Interval (10~18000)	<input type="text"/>
Max Response Time (1~240)	<input type="text"/>
Report Suppression	<input type="button" value="Enable ▼"/>

At the bottom right of the table is another 'Update Setting' button.

Figure 132: IGMP Mode

## Configuring IGMP Snooping General properties

To navigate to the **IGMP Snooping** page:

1. Click on the + next to **Other Protocols**.
2. Click on **IGMP Snooping**.

To configure the general features for IGMP Snooping in either the **Passive** or **Querier** mode, follow the steps below (see [Figure 133](#)):

1. From the dropdown list next to **VLAN ID**, choose the VLAN that you want the IGMP Snooping process to run on.

2. From the dropdown list next to **IGMP Version**, choose the correct IGMP version to be run on this VLAN. This setting must match the IGMP version being used by the IGMP querier and the IGMP client on the network.
  3. Choosing the appropriate choice (Enable or Disable) from the dropdown list next to **Fast Leave**.
    - If this feature is enabled on the switch, and the switch receives a request to leave a multicast stream on a port, then the switch will drop this multicast stream on that port without checking to see if there are any other multicast clients on that port that might still be interested in receiving this multicast stream. This allows the multicast stream to disappear from a port much faster.
2. Next, click on the **Update Setting** button

IGMP Mode	<input type="button" value="Passive"/>
<input type="button" value="Update Setting"/>	
VLAN ID	<input type="button" value="1"/>
IGMP Version	<input type="button" value="3"/>
Fast Leave	<input type="button" value="Disable"/>
Query Interval (10~18000)	125
Max Response Time (1~240)	10
Report Suppression	<input type="button" value="Enable"/>
<input type="button" value="Update Setting"/>	

**Figure 133: IGMP General Properties**

### Configuring IGMP Passive Mode Specific properties

To navigate to the **IGMP Snooping** page:

1. Click on the + next to **Other Protocols**.
2. Click on **IGMP Snooping**.

To configure specific properties for IGMP Passive Mode, follow the steps below.

IGMP Mode	<input type="button" value="Passive"/>
<input type="button" value="Update Setting"/>	
VLAN ID	<input type="button" value="1"/>
IGMP Version	<input type="button" value="3"/>
Fast Leave	<input type="button" value="Disable"/>
Query Interval (10~18000)	<input type="button" value="125"/>
Max Response Time (1~240)	<input type="button" value="10"/>
Report Suppression	<input type="button" value="Enable"/>
<input type="button" value="Update Setting"/>	

**Figure 134: IGMP Passive Mode**

1. From the dropdown list next to **VLAN ID**, choose the VLAN for which you wish to configure the Report Suppression feature.
2. Choose **Enable** or **Disable** in the dropdown list next to **Report Suppression**.  
(Note: if the switch is not in **Passive** mode, then this feature will have no effect.)



Note: If you are using IGMP version 1 or 2, the **Query Interval**, and the **Max Response Time** setting must be configured even if you are not configuring IGMP Querier mode. For IGMP version 1 and 2, the membership registration timer (used to time out the membership status on each port) is based on these two parameters on the local switch. These two parameters should configure to match that of the current active IGMP Querier. The formula for the membership registration timer is:  $2 \times \text{query-interval} + \text{max-response-time} = \text{Timeout period}$ .

## Configuring IGMP Querier Mode Specific properties

To navigate to the **IGMP Snooping** page:

1. Click on the **+** next to **Other Protocols**.
2. Click on **IGMP Snooping**.

To configure specific properties for IGMP Querier Mode, follow the steps below (see [Figure 135](#)):

1. In the text box next to **Query Interval**, enter a value between 10 and 18000

- This value will represent the time interval, in seconds, between any two queries that the switch sends out to the network. It is recommended that you use the default setting of 125 seconds that are according to the IGMP standard.
2. In the text box next to **Max Response Time**, enter a value between 1 and 240.
- This value represents the maximum time in seconds that a multicast client will have to respond to an IGMP query. Any response received after this time will not be accepted by the Querier. It is recommended that you use the default setting of 10 seconds according to the IGMP standard.

The screenshot shows the Management Switch software interface with a tree menu on the left and a configuration panel on the right.

**Management Switch**

- System
- Diagnostics
- Port
- Switching
- Trunking
- STP/Ring
- VLAN
- QoS
- ACL
- SNMP
- 8021X
- LLDP
- Others Protocols
  - GVRP
  - IGMP Snooping**
  - NTP
  - GMRP

**Multicast Current Table**

IGMP Mode	Querier <input type="button" value="▼"/>
<input type="button" value="Update Setting"/>	
VLAN ID	1 <input type="button" value="▼"/>
IGMP Version	3 <input type="button" value="▼"/>
Fast Leave	Disable <input type="button" value="▼"/>
Query Interval (10~18000)	125
Max Response Time (1~240)	10
Report Suppression	Enable <input type="button" value="▼"/>
<input type="button" value="Update Setting"/>	

**Figure 135: Querier Mode Properties**

## Configuring IGMP Unknown Multicast Forwarding

To navigate to the **IGMP Snooping** page:

- Click on the + next to **Other Protocols**.
- Click on **IGMP Snooping**.


With IGMP enabled, the EtherWAN switch will transmit all multicast packets to their only multicast receiver ports. However, some multicast packets will not have any known multicast receiver ports either due to IGMP Snooping being disabled on the switch, or because no multicast receiver has sent IGMP requests for these multicast packets. The multicast packets in these scenarios are referred to as **unknown multicast packets**. You can use the

**Passive Mode Forwarding Port** section of the IGMP Snooping configuration page to control how the switch will forward these unknown multicast packets under different IGMP Snooping modes of the switch (see [Figure 136](#)).

### Disabled Mode Forwarding Port Configuration

When IGMP is in Disabled Mode, all multicast packets are unknown multicast packets, and by default all unknown multicast packets are forwarded to all the ports of the switch. To modify the default behavior and to control how the switch will forward unknown multicast packets when the switch is in **IGMP Snooping Disabled mode**:

1. Select either the **PassiveForwardMode** or the **ForceForwardMode** radio button.
2. Make sure that only the ports that you would like to have the **unknown multicast packets** to be forwarded to, have a check mark next to it.
3. Then click on the **Update Setting** button.

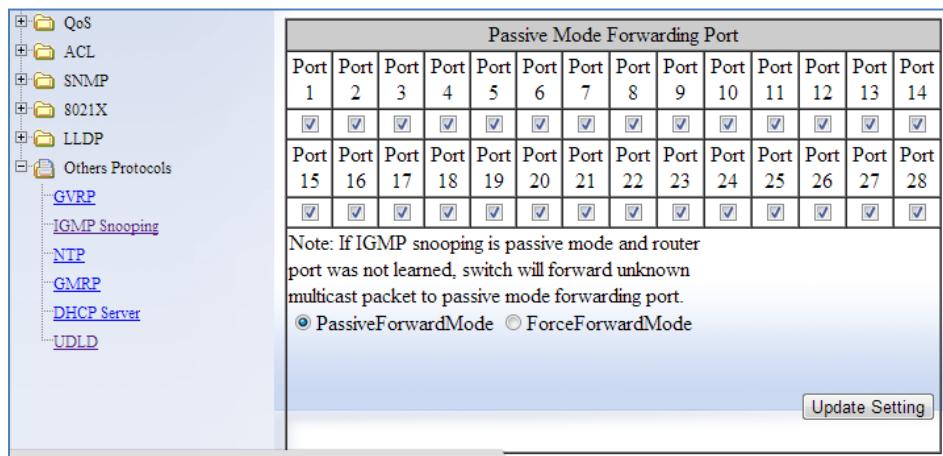

**Figure 136: Disabled Mode Forwarding Port**

### Passive Mode Forwarding Port Configuration

You can control how the switch forwards unknown multicast packets under **IGMP Passive mode** in two different conditions:

- When there is no IGMP Querier port (a port that receives IGMP queries) present.
- When an IGMP Querier port is present **or** when no IGMP Querier port is present.

To configure how the switch forwards unknown multicast packets when the switch is in IGMP Passive mode, follow the steps below:

#### No IGMP Querier port present

- Under the **Passive Mode Forwarding Port** section, select the **PassiveForwardMode** radio button.
- Select the checkbox under the ports that you would like to have the **unknown multicast packets** forwarded to.
- Click on the “Update Setting” button.



Note: The presence of an IGMP Querier port will make the settings provided by the **PassiveForwardMode** to have no effect, and all unknown multicast packets will be forwarded to the IGMP Querier port only.

Passive Mode Forwarding Port													
Port 1	Port 2	Port 3	Port 4	Port 5	Port 6	Port 7	Port 8	Port 9	Port 10	Port 11	Port 12	Port 13	Port 14
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Port 15	Port 16	Port 17	Port 18	Port 19	Port 20	Port 21	Port 22	Port 23	Port 24	Port 25	Port 26	Port 27	Port 28
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>

Note: If IGMP snooping is passive mode and router port was not learned, switch will forward unknown multicast packet to passive mode forwarding port.

PassiveForwardMode  ForceForwardMode

Update Setting


Figure 137: PassiveForwardMode

#### IGMP Querier port present or no IGMP Querier port present

- Under the **Passive Mode Forwarding Port** section, select the **ForceForwardMode** radio button
- Select the checkbox under the ports that you would like to have the **unknown multicast packets** forwarded to.
- Click on the **Update Setting** button.



Note: The settings according to the **ForceForwardMode** will always be in effect both with and without the presence of an IGMP Querier port. In addition, when an IGMP Querier port is present, all unknown multicast packets will also be forwarded to the IGMP Querier port as well, in addition to the settings in the **ForceForwardMode** function.

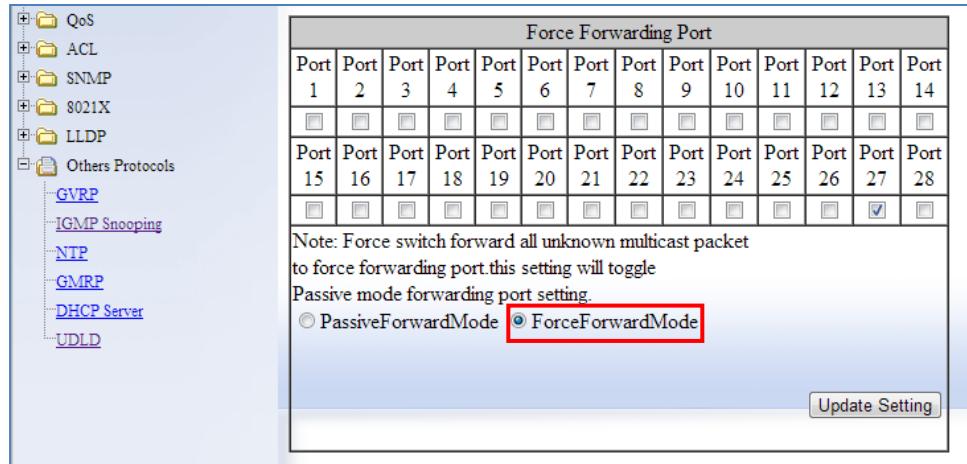

**Figure 138: ForceForwardMode**


### IGMP Querier Mode Forwarding Port Configuration

To configure how the switch forwards unknown multicast packets when the switch is in IGMP Querier mode, follow the below instructions:

- Under the **Passive Mode Forwarding Port** section, select the **ForceForwardMode** radio button
- Select the checkbox under the ports that you would like to have the **unknown multicast packets** forwarded to.
- Click on the **Update Setting** button.



Note: When the switch is in **IGMP Snooping Querier mode**, there will not be an IGMP Querier port present, and the settings according to the **ForceForwardMode** will always be in effect.

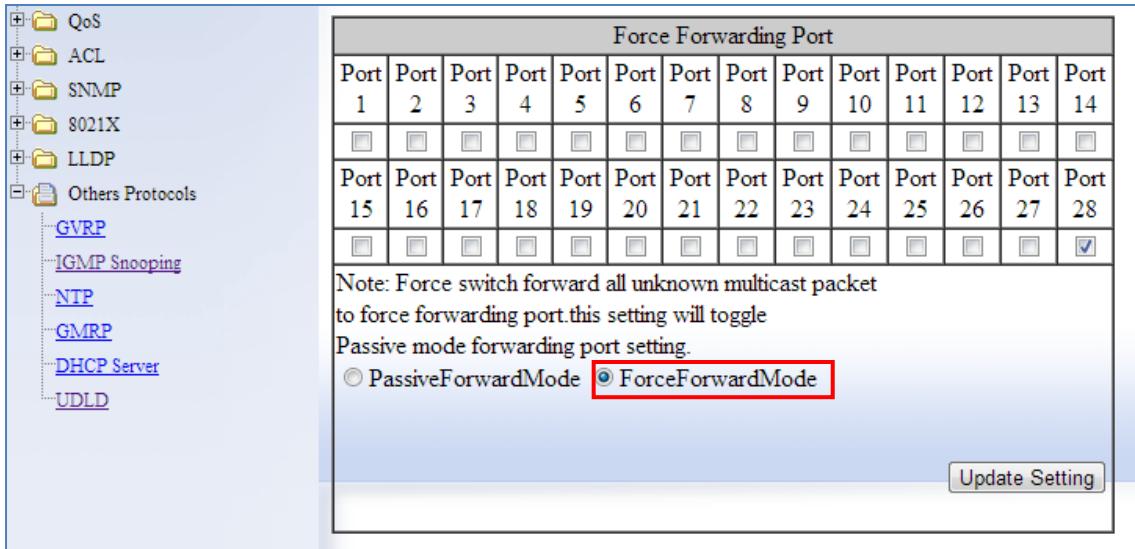

**Figure 139: IGMP Querier Mode Forwarding**

## Monitoring Registered Multicast Groups

To navigate to the **Multicast Current Table** page:

1. Click on the + next to **Other Protocols**.
2. Click on **IGMP Snooping**.
3. Click on the **Multicast Current Table** link at the top of the page.

When the switch is in IGMP Passive or IGMP Querier mode, registered Multicast Groups can be monitored on each port, as well as the location of the IGMP Querier port (see [Figure 140](#)).

- All the registered multicast Groups will be listed in the **Group Address** column.
- The port where each registered Group ID was received can be found in the **Membership** column in each registered Groups corresponding row.



Note: when an IGMP Querier port is present, all registered multicast group IDs will show up in the **Membership** column as a checked box for the IGMP Querier port, even if an **IGMP Join** was never received for that Group ID on the Querier port.

The screenshot shows the EtherWAN Management Switch interface. The left sidebar contains a navigation tree with options like System, Diagnostics, Port, Switching, Trunking, STP/Ring, VLAN, QoS, ACL, SNMP, 8021X, LLDP, and Others Protocols (with sub-options GVRP, IGMP Snooping, NTP, GMRP, DHCP Server, and UDLD). The main content area is titled "IGMP Snooping" and displays a table titled "Current Multicast Groups". The table has columns for VLAN ID, Group Address, Group, Membership (represented by a grid of checkboxes), and Router Port. There are three entries in the table:

Current Multicast Groups				
VLAN ID	Group Address	Group	Membership	Router Port
1	01:00:5e:32:d9:05	Ports 1-8	<input type="checkbox"/>	ge4
		Ports 9-28	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/>	
1	01:00:5e:7c:01:01	Ports 1-8	<input type="checkbox"/>	ge4
		Ports 9-28	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/>	
1	01:00:5e:7ffffa	Ports 1-8	<input type="checkbox"/>	ge4
		Ports 9-28	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/>	

A "Refresh" button is located at the bottom right of the table.

**Figure 140: Current Multicast Groups**

## IGMP Configuration Examples Using CLI Commands

For more information on CLI command usage see [CLI Command Usage](#).

To put the IGMP Snooping feature in **Disabled Mode** use the CLI commands below:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **no ip igmp snooping**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#no ip igmp snooping
switch_a(config)#q
switch_a#
```

To put the IGMP Snooping feature in **Passive Mode** use the CLI commands below:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

**ip igmp snooping enable**  
**no ip igmp snooping querier**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#ip igmp snooping enable
switch_a(config)#no ip igmp snooping querier
switch_a(config)#q
switch_a#
```

To put the IGMP Snooping feature in **Querier Mode** use the following CLI commands:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

**ip igmp snooping enable**  
**ip igmp snooping querier**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#ip igmp snooping enable
switch_a(config)#ip igmp snooping querier
switch_a(config)#q
switch_a#
```

To set the IGMP version per VLAN, use the following CLI commands:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **ip igmp version <1-3>**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#interface vlan1.1
switch_a(config-if)#ip igmp version 2
switch_a(config-if)#q
switch_a(config) #
```

To enable or disable the IGMP **fast-leave** feature on a VLAN, use the CLI commands below:

CLI Command Mode: **VLAN Interface Configuration Mode**

CLI Command Syntax:

```
ip igmp snooping fast-leave
no ip igmp snooping fast-leave
```

Usage Example - **Enabling** the IGMP **fast-leave** feature:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#interface vlan1.1
switch_a(config-if)#ip igmp snooping fast-leave
switch_a(config-if)#q
switch_a(config) #
```

Usage Example - **Disabling** the IGMP **fast-leave** feature:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#interface vlan1.1
switch_a(config-if)#no ip igmp snooping fast-leave
switch_a(config-if)#q
switch_a(config) #
```

To enable or disable the IGMP **Report Suppression** feature on a VLAN, use the CLI commands below:

CLI Command Mode: **VLAN Interface Configuration Mode**

CLI Command Syntax:

```
ip igmp snooping report-suppression
no ip igmp snooping report-suppression
```

Usage Example - **Enabling** the IGMP Report Suppression feature:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#interface vlan1.1
switch_a(config-if)# ip igmp snooping report-suppression
switch_a(config-if)#q
switch_a(config) #
```

Usage Example - **Disabling** the IGMP Report Suppression feature:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#interface vlan1.1
switch_a(config-if)#no ip igmp snooping report-suppression
switch_a(config-if)#q
switch_a(config) #
```

To configure the IGMP **query-interval**, and the **max-response-time** settings per VLAN, use the CLI commands below:

CLI Command Mode: **VLAN Interface Configuration Mode**

CLI Command Syntax:

```
ip igmp query-interval <10-18000>
ip igmp query-max-response-time <1-240>
```

Usage Example - Configuring the IGMP **query-interval** parameter:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#interface vlan1.1
switch_a(config-if)# ip igmp query-interval 125
switch_a(config-if)#q
switch_a(config) #
```

Usage Example - Configuring the IGMP **max-response-time** parameter:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#interface vlan1.1
switch_a(config-if)# ip igmp query-max-response-time 10
```

```
switch_a(config-if)#q  
switch_a(config) #
```

To control how the switch forwards unknown multicast packets when the switch is in IGMP Disabled mode, follow the instructions below:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
ip igmp snooping passive-forward all  
ip igmp snooping passive-forward none  
ip igmp snooping passive-forward <ifname>,<ifname>,<ifname>
```

Usage Example - Flood all unknown multicast packets:

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config) # ip igmp snooping passive-forward all  
switch_a(config) #q
```

Usage Example - Drop all unknown multicast packets:

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config) # ip igmp snooping passive-forward none  
switch_a(config) #q
```

Usage Example - Forward unknown multicast packets to the specified ports only:

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config) # ip igmp snooping passive-forward fe1,fe2,fe3  
switch_a(config) #q
```

To only control how the switch will forward unknown multicast packets when the switch is in IGMP Passive mode and also without a Querier Port present, follow the below instructions:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
ip igmp snooping passive-forward all  
ip igmp snooping passive-forward none  
ip igmp snooping passive-forward <ifname>,<ifname>,<ifname>
```

Usage Example - Flood all unknown multicast packets:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# ip igmp snooping passive-forward all
switch_a(config)#q
switch_a#
```

Usage Example - Drop all unknown multicast packets:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# ip igmp snooping passive-forward none
switch_a(config)#q
switch_a#
```

Usage Example - Forward unknown multicast packets to the specified ports only:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# ip igmp snooping passive-forward fe1,fe2,fe3
switch_a(config)#q
switch_a#
```

To control how the switch will forward unknown multicast packets when the switch is in IGMP Passive mode, both with or without a Querier Port present, follow the instructions below:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

**ip igmp snooping force-forward all**  
**ip igmp snooping force-forward none**  
**ip igmp snooping force-forward <ifname>,<ifname>,<ifname>**

Usage Example - Flood all unknown multicast packets:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# ip igmp snooping force-forward all
switch_a(config)#q
switch_a#
```

Usage Example - Drop all unknown multicast packets:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# ip igmp snooping force-forward none
switch_a(config)#q
switch_a#
```

Usage Example - Forward unknown multicast packets to the specified ports only:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# ip igmp snooping force-forward fe1,fe2,fe3
switch_a(config)#q
switch_a#
```

To control how the switch will forward unknown multicast packets when the switch is in IGMP Querier mode, follow the below instructions:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
ip igmp snooping force-forward all
ip igmp snooping force-forward none
ip igmp snooping force-forward <ifname>,<ifname>,<ifname>
```

Usage Example - Flood all unknown multicast packets:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# ip igmp snooping force-forward all
switch_a(config)#q
switch_a#
```

Usage Example - Drop all unknown multicast packets:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# ip igmp snooping force-forward none
switch_a(config)#q
switch_a#
```

Usage Example - Forward unknown multicast packets to the specified ports only:

```
switch_a>enable
switch_a#configure terminal
switch_a(config) # ip igmp snooping force-forward fe1,fe2,fe3
switch_a(config) #q
switch_a#
```

## Network Time Protocol (NTP)

NTP or Network Time Protocol is a useful tool designed to update your switch with the most accurate time available from a user specified time source. This is useful for the end user in that the switch logging is noted with the actual time rather than the default switch time (begins on Jan 1st, 2010) as it can aid debugging switching related problems by showing an accurate time an event occurred.

To navigate to the **NTP** page:

1. Click on the + next to **Other Protocols**.
2. Click on **NTP**

### Setting RTC Time

(Only applicable to certain models) At the top of this screen, there are fields in which you can enter the current year, date, and time. When done, click Update Setting to make the time change take effect. (See figure below) Note that the time will reset whenever the switch is rebooted, or restarted after a power loss.

Adjust RTC Time						
Year(2000-2037):	2016	Month:	8	Day:	8	Mon
Hour:	17	Minute:	4	Second:	39	Update Setting

To manually set the time using the CLI:

CLI Command Mode: **Privileged exec mode**

CLI Command Syntax: **set clock <2000-2037> <1-12> <1-31> <0-23> <0-59> <0-59>**

Usage Example:

```
switch_a>enable  
switch_a# set clock 2019 3 27 17 24 30
```

## Enabling NTP

To enable the NTP client, follow the steps below (see [Figure 141](#)):

1. Choose Enable from the dropdown list next to **NTP Status**
2. Click on the **Update Setting** button

## Setting the NTP Server IP Address

To provide a time source for the NTP client, follow the steps below:

1. Enter an IP address or host name in the **NTP Server** text box.
2. Click on the **Update Setting** button

## Setting the Time Zone

To change the time zone of the switch, follow the steps below:

1. Select the proper time zone from the dropdown list next to **Time Zone**.
2. Click on the **Update Setting** button

## Setting the Polling Period

To alter the polling period (how often the NTP client checks the server for the correct time), follow the steps below:

1. Enter the new polling period in the Polling Interval textbox.
2. Click on the **Update Setting** button

## Manually Syncing Time

To set the time immediately using an NTP server, follow the steps below:

1. Enter the new polling period in the Polling Interval textbox.
2. Click on the **Sync Time** button in the **NTP Server** field

NTP Setting	
NTP Status	Enable <input type="button" value="▼"/>
NTP Server (IP Address or Domain Name)	<input type="text" value="time-a.nist.gov"/> <input type="button" value="Sync Time"/>
Time Zone	<input type="text" value="(GMT-06:00) Central Time (US &amp; Canada)"/> <input type="button" value="▼"/>
Current Time	Thu Mar 27 12:42:43 CST 2014
Polling Interval (1-10080 min)	<input type="text" value="60"/>
<input type="button" value="Update Setting"/>	

Figure 141: NTP Settings

### Daylight Savings Time - Weekday Mode

To adjust the switch's clock for Daylight Savings Time using the weekday mode, follow the steps below:

1. Select the option **Weekday** from the **Daylight Saving Mode** dropdown box.
2. Enter the value for the time offset in the **Time Set Offset** textbox.
3. Enter the name of the **Daylight Saving Time Zone**.
4. In the **Weekday Box**, select the month, week, day, hour, and minute for both the from and to fields. For example, if Daylight Saving Time begins on the second Sunday in March at 2:00AM and ends on the first Sunday in November at 2:00AM, then select the values as shown in [Figure 142](#).
5. Click on the **Update Setting** button

Daylight Saving Setting	
Daylight Saving Mode	<input type="button" value="Weekday"/>
Time Set Offset (1-480 min)	<input type="text" value="60"/>
Name of Daylight Saving Timezone	<input type="text" value="CDT"/>
Weekday	
	From Month <input type="button" value="Mar"/> Week <input type="text" value="2"/> Day <input type="button" value="Sun"/> Hour <input type="text" value="2"/> Minute <input type="text" value="0"/>
	To Month <input type="button" value="Nov"/> Week <input type="text" value="1"/> Day <input type="button" value="Sun"/> Hour <input type="text" value="2"/> Minute <input type="text" value="0"/>
Date	
	From Month <input type="button" value="Jan"/> Day <input type="text"/> Hour <input type="text"/> Minute <input type="text"/> To Month <input type="button" value="Jan"/> Day <input type="text"/> Hour <input type="text"/> Minute <input type="text"/>
	<input type="button" value="Update Setting"/>

**Figure 142: Daylight Savings – Weekday Mode**

### Daylight Savings Time – Date Mode

To adjust the switch's clock for Daylight Savings Time using the date mode, follow the steps below:

1. Select the option **Date** from the **Daylight Saving Mode** dropdown box.
2. Enter the value for the time offset in the **Time Set Offset** textbox.
3. Enter the name of the **Daylight Saving Time Zone**.
4. In the **Date section**, select the month and enter the date, hour, and minute for both the from and to fields. For example, if Daylight Saving Time begins on March 9th at 2:00AM and ends on November 2nd at 2:00AM, then select the values as shown in [Figure 143](#).
5. Click on the **Update Setting** button

Daylight Saving Setting			
Daylight Saving Mode	<input type="button" value="Date"/>		
Time Set Offset (1-480 min)	60		
Name of Daylight Saving Timezone	CDT		
Weekday	From Month <input type="button" value="Jan"/> Week <input type="button" value=""/> Day <input type="button" value="Sun"/> To Month <input type="button" value="Jan"/> Week <input type="button" value=""/> Day <input type="button" value="Sun"/> Month <input type="button" value="Jan"/> Week <input type="button" value=""/> Day <input type="button" value="Sun"/> Month <input type="button" value="Jan"/> Week <input type="button" value=""/> Day <input type="button" value="Sun"/>		
Date	From Month <input type="button" value="Mar"/> Day <input type="button" value="9"/> Hour <input type="button" value="2"/> Minute <input type="button" value="0"/> To Month <input type="button" value="Nov"/> Day <input type="button" value="2"/> Hour <input type="button" value="2"/> Minute <input type="button" value="0"/>		
<input type="button" value="Update Setting"/>			

**Figure 143: Daylight Savings – Date Mode**

## Network Time Protocol Configuration Examples Using CLI Commands

For more information on CLI command usage see [CLI Command Usage](#).

To enable NTP on the switch, use the CLI commands below:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **ntp enable**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)#ntp enable
switch_a(config)#q
```

To set the NTP server on the switch, use the CLI commands below:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **ntp server <IP Address or Host Name of NTP Server>**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config) #ntp server 192.168.1.126
switch_a(config) #q
switch_a#
```

To set the NTP polling interval on the switch, use the CLI commands below:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **ntp polling-interval <time in minutes, 1-10080>**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config) #ntp polling-interval 180
switch_a(config) #q
switch_a#
```

To have the NTP client sync the clock immediately on the switch, use the CLI commands below:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax: **ntp sync-time**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config) #ntp sync-time
switch_a(config) #q
switch_a#
```

To set the current time zone for the switch, use the CLI commands below:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

**clock timezone <Name of Time Zone> <UTC Offset in hh:mm format>**

Usage Example:

```
switch_a>enable
switch_a#configure terminal
```

```
switch_a(config)#clock timezone CDT -6:00
switch_a(config)#q
switch_a#
```

To set the Daylight Savings Time settings using weekday mode for the switch, use the CLI commands below:

**CLI Command Mode: Global Configuration Mode**

CLI Command Syntax:

```
clock summer-time <Name of Time Zone> weekday <start week number> <start day> <start month> <start hour> <start minute> <end week number> <end day> <end hour> <end minute> <time offset in minutes>
```

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# clock summer-time CDT weekday 2 Sun March 2
0 1 Sun November 2 0 60
switch_a(config)#q
switch_a#
```

To set the Daylight Savings Time settings using date mode for the switch, use the CLI commands below:

**CLI Command Mode: Global Configuration Mode**

CLI Command Syntax:

```
clock summer-time <Name of Time Zone> date <start date> <start month> <start hour> <start minute> <end date> <end month> <end hour> <end minute> <time offset in minutes>
```

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config)# clock summer-time CDT date 9 March 2 0 2 November 2
0 60
switch_a(config)#q
switch_a#
```

# GMRP

The settings in the GMRP feature controls how the switch automates the process of multicast packet forwarding, both within a single switch as well as between switches in a bridged network. With the GMRP feature enabled, when the switch receives any GMRP multicast group registration requests from either a multicast client or a neighbor switch, the switch will register these multicast groups on these ports and will only transmit the multicast packets that belong to these groups to these ports. The switch will also automatically propagate these multicast group registrations onto the neighbor switches to allow the neighbor switches to forward the multicast packets that belong to these groups to the local switch.

To navigate to the **Other Protocols / GMRP** page:

1. Click on the + next to **Other Protocols**.
2. Click on **GMRP**.

## General Overview

The ports on the EtherWAN switch can be configured with the GMRP feature in five modes:

- Disabled
- Normal
- Fixed
- Forbidden
- Forward All.

### GMRP Normal mode

When a port is put in GMRP **Normal** mode, that port can accept both multicast group registration and multicast group deregistration from the multicast client or the neighbor switch that is residing on that port. Also, the switch will propagate all the registered multicast groups on the switch to the neighbor switch residing on that port.

### GMRP Fixed mode

When a port is put in GMRP **Fixed** mode, that port can accept group registration but will not accept any group deregistration from multicast clients or neighbor switches that reside on that port. Also, the switch will be propagating all the registered multicast groups on the switch to the neighbor switch residing on that port.

### **GMRP Forbidden mode**

When a port is put in GMRP **Forbidden** mode, all multicast groups will be deregistered on that port and that port will not be accepting any further multicast group registrations. However, the switch will still be propagating all the registered multicast groups on the switch to the neighbor switch residing on that port.

### **GMRP Forward All mode**

When a port is put in GMRP **Forward All** mode, all the registered multicast groups on the switch will automatically be registered to this port, so the switch will be forwarding all the multicast packets that belong to these groups to this port and this port will also be propagating all the registered multicast groups on the switch to the neighbor switch residing on that port.

### **GMRP Disabled mode**

When a port is put in GMRP **disabled** mode that port will not participate in any GMRP activities.


## **Enabling the GMRP Feature Globally on the Switch**

To navigate to the **Other Protocols / GMRP** page:

1. Click on the + next to **Other Protocols**.
2. Click on **GMRP**.

To enable the GMRP function in the switch, follow the procedure below:

1. Choose the **Enable** option from the dropdown list next to **GMRP**
2. Click on the **Update Setting** button. (See [Figure 144](#))

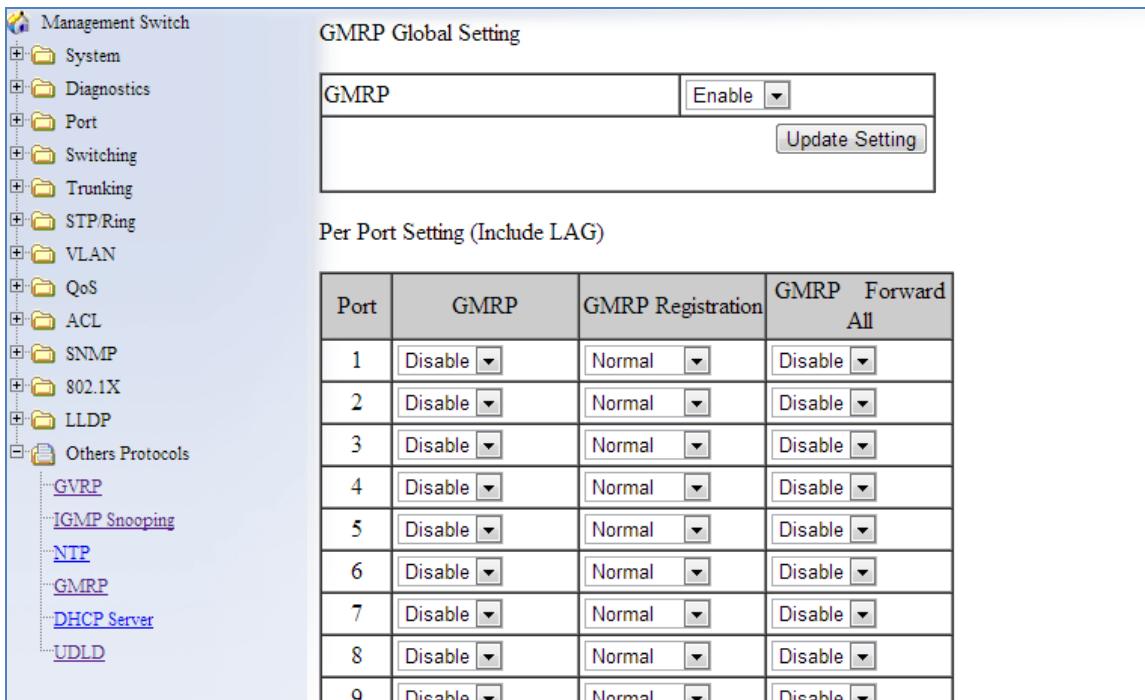

**Figure 144: GMRP Global Setting**

## Configuring the GMRP Feature Per Port

To navigate to the **Other Protocols / GMRP** page:

1. Click on the + next to **Other Protocols**.
2. Click on **GMRP**.

GMRP should be enabled on all the ports that could be a potential source of multicast traffic, and on the ports that are connected to multicast clients. You can also further configure each GMRP enabled port with the particular application modes described in the below configuration.

To allow a port to dynamically receive GMRP multicast group registrations and dynamically transmit the multicast packets that belong to these multicast groups on this port configure the items listed below:

- For each port that you wish to apply this application, select the **Enable** option from the drop-down list under the GMRP column.
- For each port that you wish to apply this application, select the **Normal** option from the drop-down list under the GMRP Registration column.
- For each port that you wish to apply this application, select the **Disable** option from the drop-down list under the GMRP Forward All column.

- Click on the **Update Setting** button.

To allow a port to dynamically receive GMRP multicast group registrations and then make the multicast packets that belong to these multicast groups constantly available on this port, configure the items listed below:

- For each port that you wish to apply this application, select the **Enable** option from the drop-down list under the GMRP column.
- For each port that you wish to apply this application, select the **Fixed** option from the drop-down list under the GMRP Registration column.
- For each port that you wish to apply this application, select the **Disable** option from the drop-down list under the GMRP Forward All column.
- Click on the **Update Setting** button.

If you do not wish to transmit any multicast packets on a port based on the received GMRP multicast group registrations on that port, but would like to receive multicast packets that belong to the currently registered multicast groups on the switch on that port, configure the items listed below:

- For each port that you wish to apply this application, select the **Enable** option from the drop-down list under the GMRP column.
- For each port that you wish to apply this application, select the **Forbidden** option from the drop-down list under the GMRP Registration column.
- For each port that you wish to apply this application, select the **Disable** option from the drop-down list under the GMRP Forward All column.
- Click on the **Update Setting** button.

If you wish to transmit all the multicast packets that belong to all the currently registered multicast groups on the switch on a port, configure the items listed below:

- For each port that you wish to apply this application, select the “**Enable**” option from the drop-down list under the GMRP column.
- For each port that you wish to apply this application, select the appropriate option from the drop-down list under the GMRP Registration column, according to the previous instructions.
- For each port that you wish to apply this application, select the **Enable** option from the drop-down list under the GMRP Forward All column.
- Click on the **Update Setting** button.

If you do not want a port to participate in the GMRP protocol, configure the items listed below:

- For each port that you wish to apply this application, select the **Disable** option from the drop-down list under the GMRP column.
- Click on the **Update Setting** button.

## GMRP Configuration Examples Using CLI Commands

For more information on CLI command usage see [CLI Command Usage](#).

To enable or disable GMRP globally on the EtherWAN switch, use the following CLI commands:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
set gmrp enable bridge 1  
set gmrp disable bridge 1
```

Usage Example:

```
switch_a>enable  
switch_a#configure terminal  
switch_a(config)# set gmrp enable bridge 1  
switch_a(config)# set gmrp disable bridge 1  
switch_a(config)#q  
switch_a#
```

To enable GMRP locally on a port on the EtherWAN switch, you must use the below CLI commands:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
set port gmrp enable <port id>  
set port gmrp enable <port id>
```

Usage Example:

```
switch_a>enable  
switch_a#configure terminal
```

```
switch_a(config) # set port gmrp enable fe1
switch_a(config) # set port gmrp disable fe1
switch_a(config) #q
switch_a#
```

When you enable GMRP on a port, the **Registrar** is in **Normal** mode by default. The GMRP **Registrar** on a port can be configured in 3 different modes by issuing the following CLI commands

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
set gmrp registration normal <port id>
set gmrp registration fixed fe1 <port id>
set gmrp registration forbidden <port id>
```

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config) #set gmrp registration normal fe1
switch_a(config) #set gmrp registration fixed fe1
switch_a(config) #set gmrp registration forbidden fe1
switch_a(config) #q
switch_a#
```

By default when you enable GVRP on a port this feature is disabled

To enable or disable the **Forward All** feature on a port, use the following CLI commands:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
set gmrp fwdall enable <port id>
set gmrp fwdall disable <port id>
```

Usage Example:

```
switch_a>enable
switch_a#configure terminal
switch_a(config) #set gmrp fwdall enable fe1
```

```
switch_a(config) #set gmrp fwdall disable fe1
switch_a(config) #q
switch_a#
```

## DHCP Server

DHCP is a TCP/IP application protocol that allows any TCP/IP device to dynamically obtain its initial TCP/IP configurations through the TCP/IP protocol itself (in this case, through the UDP protocol). It is based on the client-server paradigm. The EtherWAN switch can be set up as a DHCP server to allow any DHCP client to dynamically obtain its IP address, default router, and DNS servers.

### General Overview

The EtherWAN switch can function as a DHCP server for a single VLAN (it can be any VLAN) on the switch. When functioning as a DHCP server, the EtherWAN switch can be configured with a range of IP addresses, default gateway and DNS servers, which will allow the switch to use the dynamic configuration function of the DHCP protocol to provide any TCP/IP device that is a DHCP client, to dynamically obtain an IP address, default router, and DNS servers. The EtherWAN DHCP server can also be configured with a lease period that the DHCP clients are allowed the use of their assigned IP address. In this simple implementation, both the DHCP Client and the DHCP Server must be on the same network (same VLAN).

### Configuring the DHCP Server

To navigate to the **DHCP Server** page:

1. Click on the + next to **Other Protocols**
2. Click on **DHCP Server** (see [Figure 145](#))

You can use the GUI to set the following DHCP server parameters:

- DHCP Server Enable
- DHCP VLAN.
- DHCP Client Parameters
  - IP Address range
  - Subnet Mask
  - Default gateway
  - Primary and Secondary DNS.
- DHCP Client lease time

To set the DHCP server parameters:

1. From the drop-down list next to **DHCP Server Status**, select the VLAN that will get the DHCP provided TCP/IP Parameters.
2. Enter the starting and ending IP addresses for the DHCP Client IP address range, in the text boxes next to **Start IP** and **End IP**.
3. Enter the Subnet Mask in the text box next to **Subnet Mask**.
4. Enter the IP address for the DHCP Client default router in the entry field next to **Gateway**.
5. Enter the IP addresses for the DHCP Client primary and secondary DNS servers, in the entry field next to **Primary DNS** and **Secondary DNS**.
6. Enter the lease period in seconds, which the DHCP clients are allowed the use of their leased IP addresses, in the entry field next to **Lease Time**.
7. Click on the **Update Setting** button.

Management Switch

Diagnostics

Port

Switching

Trunking

STP/Ring

VLAN

QoS

ACL

SNMP

802.1X

LLDP

Others Protocols

- GVRP
- IGMP Snooping
- NTP
- GMRP
- DHCP Server
- UDLD

[DHCP Binding Table](#)

DHCP Server General Setting	
1	VLAN0100
2	192.168.7.100
3	192.168.7.107
4	255.255.255.0
5	1.2.3.4
6	1.2.3.5
7	86400 (0 to 864000,86400:default)
<b>Update Setting</b>	

Figure 145: DHCP Server

To check what IP addresses has been allocated to which DHCP clients:

1. Click on the **DHCP Binding Table** link.
2. Click on the DHCP General Setting link to get back to the previous DHCP configuration Web GUI page (see [Figure 146](#)).

The screenshot shows the Management Switch Web GUI interface. On the left is a navigation tree with the following structure:

- Management Switch
  - System
  - Diagnostics
  - Port
  - Switching
  - Trunking
  - STP/Ring
  - VLAN
  - QoS
  - ACL
  - SNMP
  - 802.1X
  - LLDP
  - Others Protocols
    - GVRP
    - IGMP Snooping
    - NTP
    - GMRP
    - DHCP Server
    - UDLD

In the center, there is a table titled "DHCP Binding Table". It contains one row of data:

Mac Address	IP-Address	Expires In
a4:ba:db:de:d6:2f	192.168.7.100	23 hours, 58 minutes, 0 seconds

A red box highlights the "DHCP General Setting" link at the top right of the table area. A "Refresh" button is located at the bottom right of the table.

**Figure 146: DHCP Binding Table**

The screenshot shows the "DHCPv6 Server General Setting" configuration page. It contains the following fields:

DHCPv6 Server General Setting	
DHCPv6 Server Status	Disable ▾
Start IPv6	2001:620:40b:555::200
End IPv6	2001:620:40b:555::210
Prefix Length	64
Lease Time	6400 (0 up 864000,86400:default)

An "Update Setting" button is located at the bottom right of the form.

## Figure 147: DHCPv6 Server Settings

### DHCP Configuration Examples Using CLI Commands

For more information on CLI command usage see [CLI Command Usage](#).

To set the DHCP server parameters:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
dhcp-server range <start IP> <end IP>
dhcp-server subnet-mask <subnet mask in doted decimal notation>
dhcp-server gateway <IP address>
dhcp-server dns 1 <IP address>
dhcp-server dns 2 <IP address>
dhcp-server lease-time <0-864000>
```

Usage Example:

```
switch_a> enable
switch_a#configure terminal
switch_a(config)#dhcp-server range 192.168.7.100 192.168.7.107
switch_a(config)#dhcp-server subnet-mask 255.255.255.0
switch_a(config)#dhcp-server gateway 192.168.7.1
switch_a(config)#dhcp-server dns 1 1.2.3.4
switch_a(config)#dhcp-server dns 2 5.6.7.8
switch_a(config)#dhcp-server lease-time 86400
switch_a(config)#q
switch_a#
```

To enable the DHCP server and set the DHCP VLAN:

CLI Command Mode: **Interface Configuration Mode**

CLI Command Syntax: **dhcp-server enable; no dhcp-server enable**

Usage Example:

```
switch_a> enable
switch_a#configure terminal
switch_a(config)#interface vlan1.100
switch_a(config-if)#dhcp-server enable
switch_a(config-if)#no dhcp-server enable
```

```
switch_a(config-if)#q  
switch_a(config)#q  
switch_a#
```

To check what IP addresses has been allocated:

CLI Command Mode: **Privileged Exec Mode**

CLI Command Syntax: **show dhcp-server binding**

Usage Example:

```
switch_a> enable  
switch_a#show dhcp-server binding  
  
Mac Address          IP-Address      Expires in  
  
a4:ba:db:de:d6:2f  192.168.7.100  23 hours, 57 minutes, 15  
seconds  
  
switch_a#
```

## Configuring DHCPv6 Server

To set the DHCPv6 server parameters:

1. Select enable from the drop down menu.
2. Enter the starting and ending IP addresses for the DHCPv6 Client IP address range, in the text boxes next to **Start IPv6** and **End IPv6**.
3. Enter the Prefix Length in the text box next to **Prefix Length**.
4. Enter the lease period in seconds, which the DHCP clients are allowed the use of their leased IP addresses, in the entry field next to **Lease Time**.
5. Click on the **Update Setting** button.

DHCPv6 Server General Setting	
DHCPv6 Server Status	<input type="button" value="Disable ▾"/>
Start IPv6	<input type="text" value="2001:620:40b:555::200"/>
End IPv6	<input type="text" value="2001:620:40b:555::210"/>
Prefix Length	<input type="text" value="64"/>
Lease Time	<input type="text" value="6400"/> (0 to 864000,86400:default)
<input type="button" value="Update Setting"/>	

Figure 148: DHCPv6 Server

## DHCPv6 Configuration Examples CLI Commands

To set the DHCPv6 server parameters:

CLI Command Mode: **Global Configuration Mode**

CLI Command Syntax:

```
dhcpv6-server range A:B::C:D A:B::C:D
dhcpv6-server lease-time <0-864000>
```

Usage Example:

```
switch_a> enable
switch_a#configure terminal
switch_a(config) #dhcpv6-server range
fda8:06c3:ce53:a890:0000:0000:0000:0001
fda8:06c3:ce53:a890:0000:0000:0000:1001
switch_a(config) #dhcpv6-server lease-time 86400
```

```
switch_a (config) #q  
switch_a#
```

## Contact Information

**EtherWAN System, Inc.**  
[www.etherwan.com](http://www.etherwan.com)

---

**USA Office**

2301 E. Winston Road  
Anaheim, CA 9280  
Tel: +1-714-779-3800  
Email: info@etherwan.com

**Pacific Rim Office**

8F., No.2, Alley 6, Lane 235, Baoqiao Rd.  
Xindian District, New Taipei City 231  
Taiwan  
Tel: +886 -2- 6629-8986  
Email: info@etherwan.com.tw

---

EtherWAN has made a good faith effort to ensure the accuracy of the information in this document and disclaims the implied warranties of merchantability and fitness for a particular purpose, and makes no express warranties, except as may be stated in its written agreement with and for its customers.

EtherWAN shall not be held liable to anyone for any indirect, special or consequential damages due to omissions or errors. The information and specifications in this document are subject to change without notice.

Copyright 2021. All Rights Reserved.  
All trademarks and registered trademarks are the property of their respective owners

May 14, 2021